 




ARCTIC SILVER SUMMIT
TRAINER 95L-0XXX-01

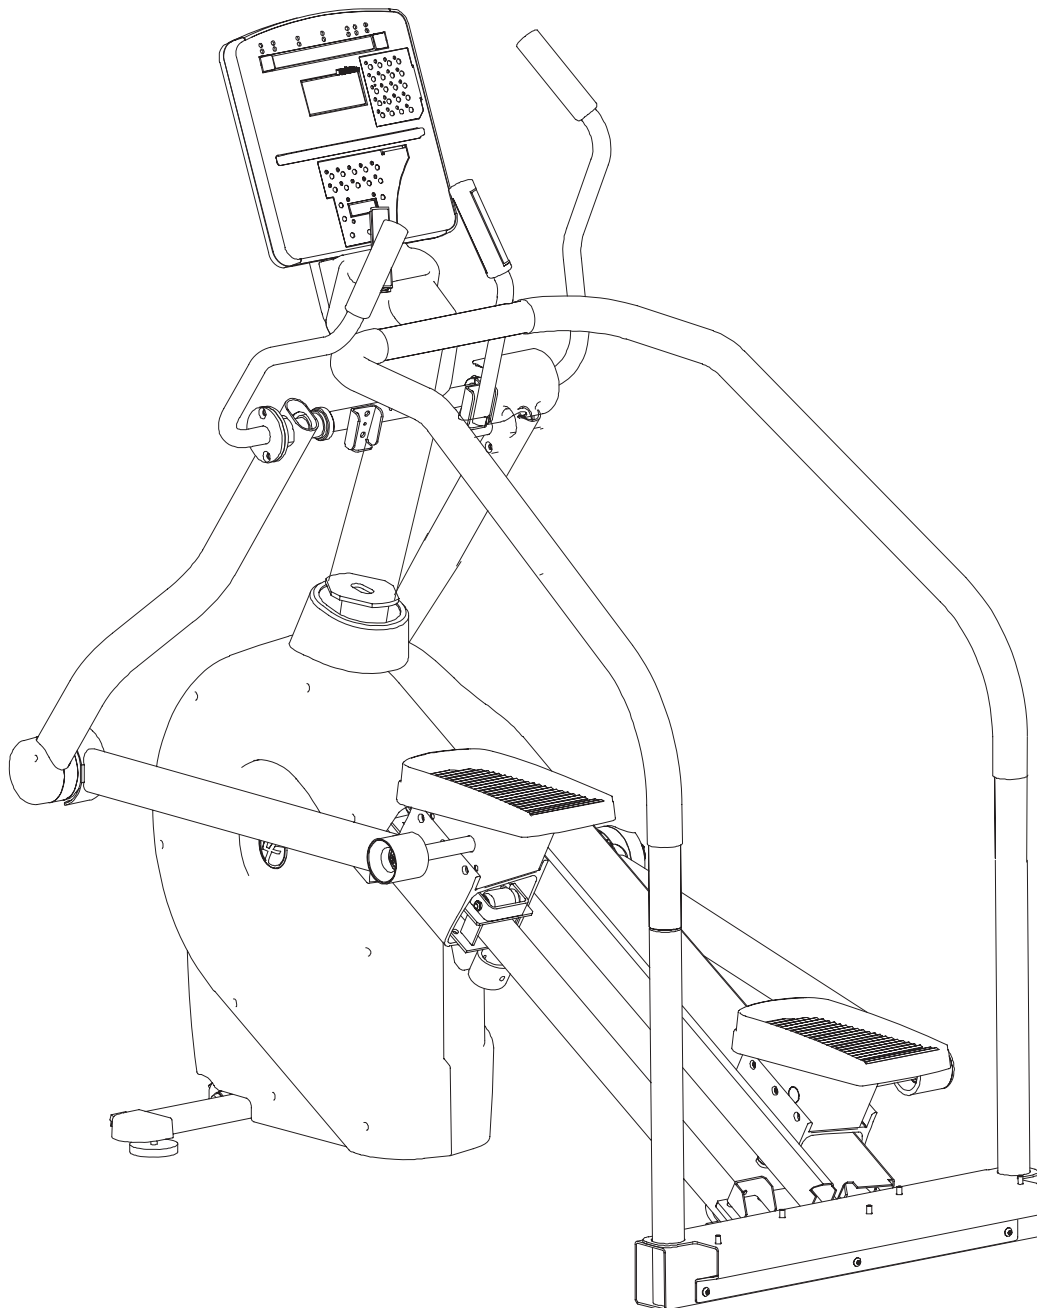


Customer Support Services
PARTS MANUAL rev 28 Jan 2010


MISCELLANEOUS	3
CONSOLE SUPPORT & DEADSHAFT COVERS.....	4
USER ARMS AND HARDWARE	5
MONOCOLUMN, HANDRAIL AND VERTICAL UPRIGHTSS.....	6
CONSOLE AND RELATED COMPONENTS	7
SHROUDS, BOOT AND REAR STEP ASSEMBLY	8
ROCKER ARMS AND CONTROL LINK ASSY'S	9
ROCKER ARM/CONTROL LINK COVERS.....	10
PEDAL TRACK COVERS AND HARDWARE	11
PEDALS, TRUCKS AND ROLLERS ASSEMBLY	12
RESISTOR ASSEMBLY AND CROSSOVER PULLEY.....	13
FLEXONIC BELTS AND TENSIONER BRACKET	14
CLUTCH SHAFT AND SPROCKETS	15
CLUTCH PULLEY AND SHAFT ASSEMBLY	16
TIMING BELTS AND SPRINGS	17
POWER CONTROL BOARD, BATTERY & ALTERNATOR	18
ACCESS PANEL, WHEELS AND LEG LEVELERS	19
LOWER TRACK COVER AND HARDWARE	20
CABLES	21

OPERATION MANUAL – (ENG)	M051-00K68-A001
OPERATION MANUAL – (F/S/P)	M051-00K68-A002
OPERATION MANUAL – (G/D/I)	M051-00K68-A003
OPERATION MANUAL – (JAP)	M051-00K68-A004
SERVICE MANUAL	M051-00K68-A030
TOUCH UP PAINT:	
SPRAY CAN	0017-00008-0204
.5 OZ BOTTLE W/APPLICATOR	0017-00008-0205
.33 OZ PEN	0017-00008-0206
PCB/ACCESS PANEL ASSY.	AK68-00107-0000
ASSEMBLY CONSISTS OF:	
1) POWER CONTROL BOARD	B084-92218-D002
2) DC POWER CABLE	AK47-00063-0000
3) 120" COAX CABLE	AK32-00020-0002
4) 120" POWER EXTENSION CABLE	AK32-00078-0001
5) ACCESS PANEL BRACKET	OK68-01031-0000
6) F-TYPE PANEL CONNECTOR	0017-00021-2846
7) PLASTIC GROMMET (QTY. 4)	0017-00042-0821
HARDWARE BAG	AK68-00198-0000

Note: When this model is ordered with an attachable LCD TV it becomes a 95LER-XXXX-01. See the Entertainment parts list marked LCD_0XXX-02 for the part numbers and descriptions for the attachable LCD TV, remote and hardware for this product.

  The 95Li comes with both Telemetry and Life Pulse sensors and is pre-wired for the attachable LCD TV.

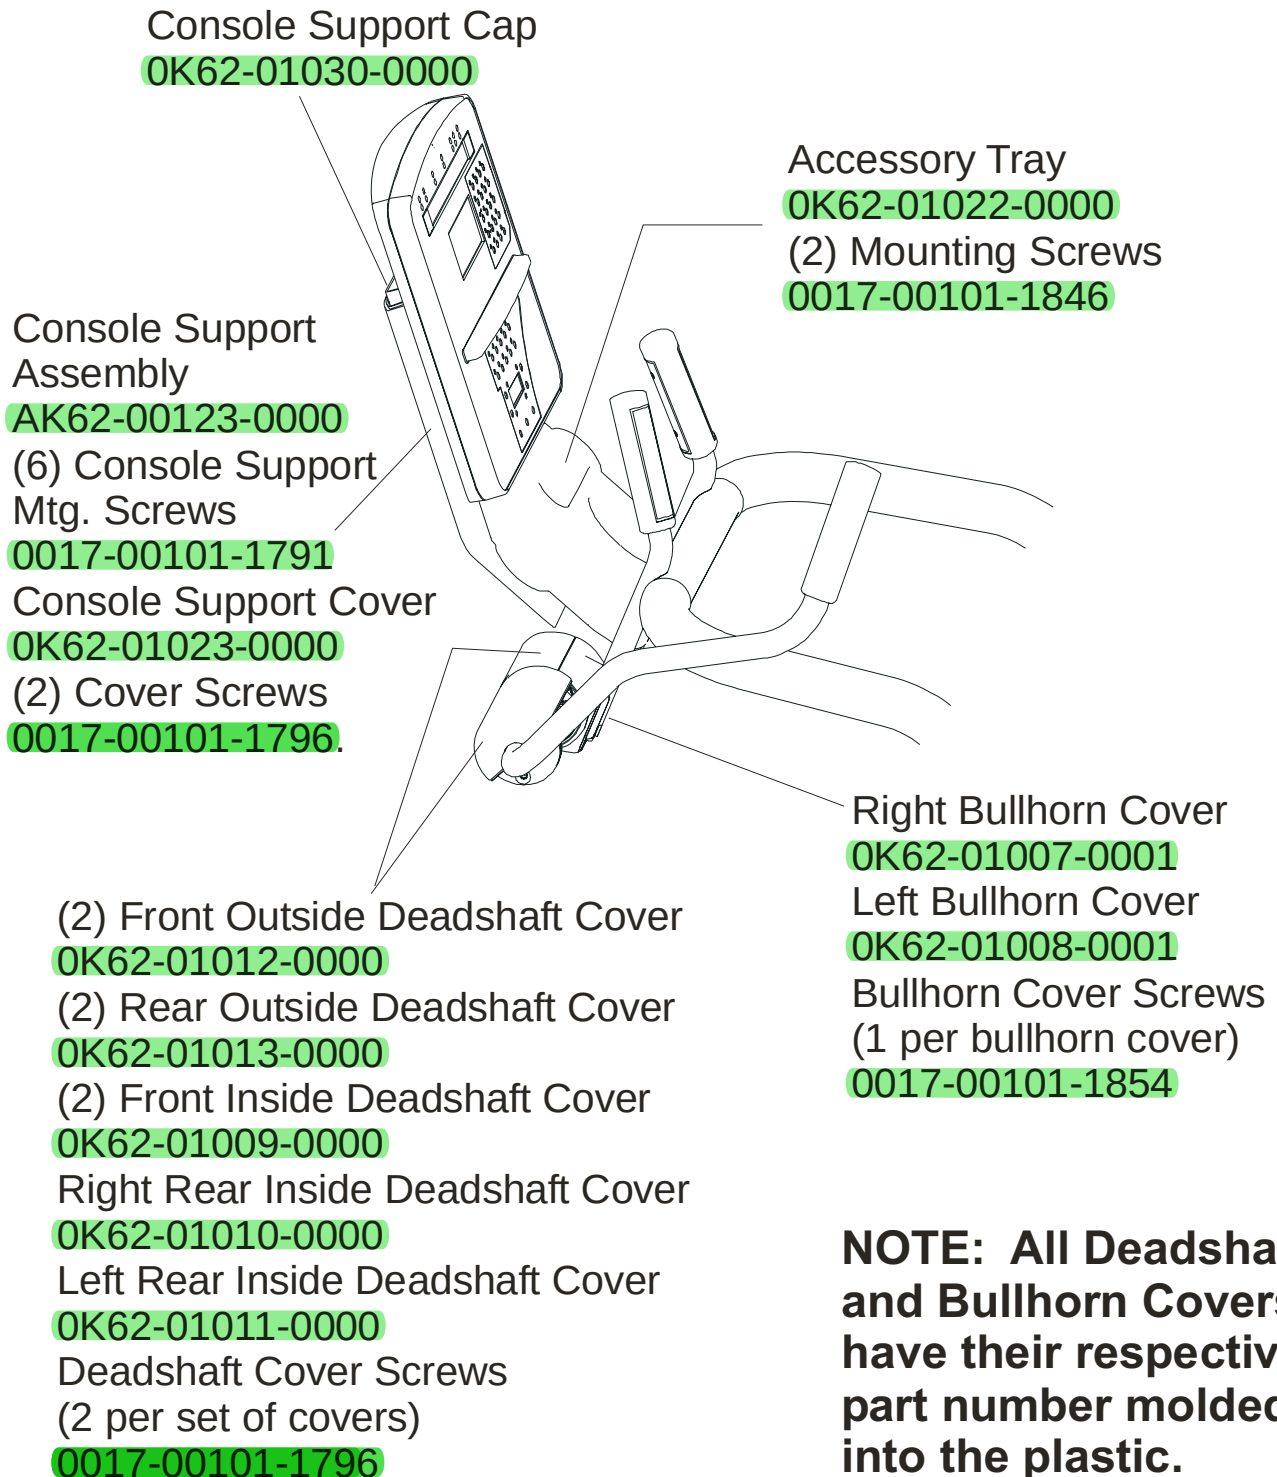

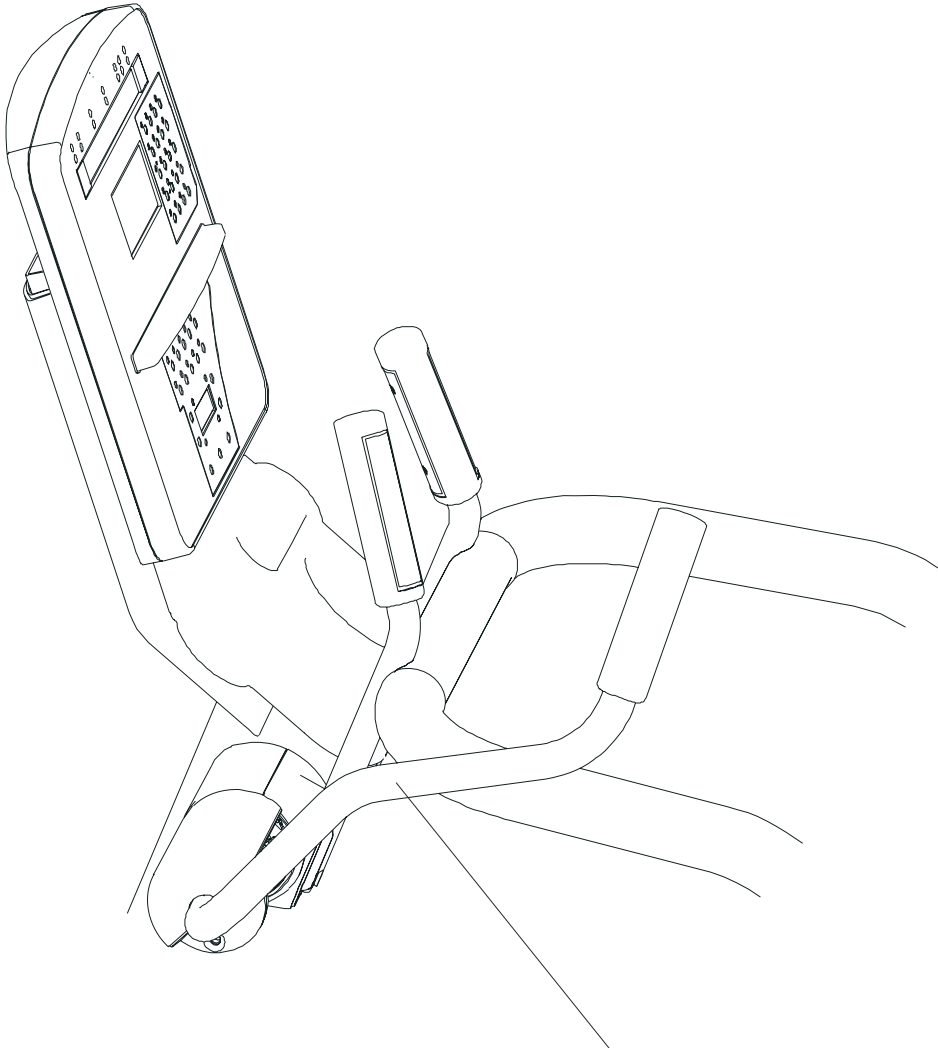

Right User Arm with grip

AK68-00143-0001

Left User Arm with grip


AK68-00143-0002


Grip

OK62-01138-0000



(3) User Arm Mtg. Screws

  0017-00101-1791

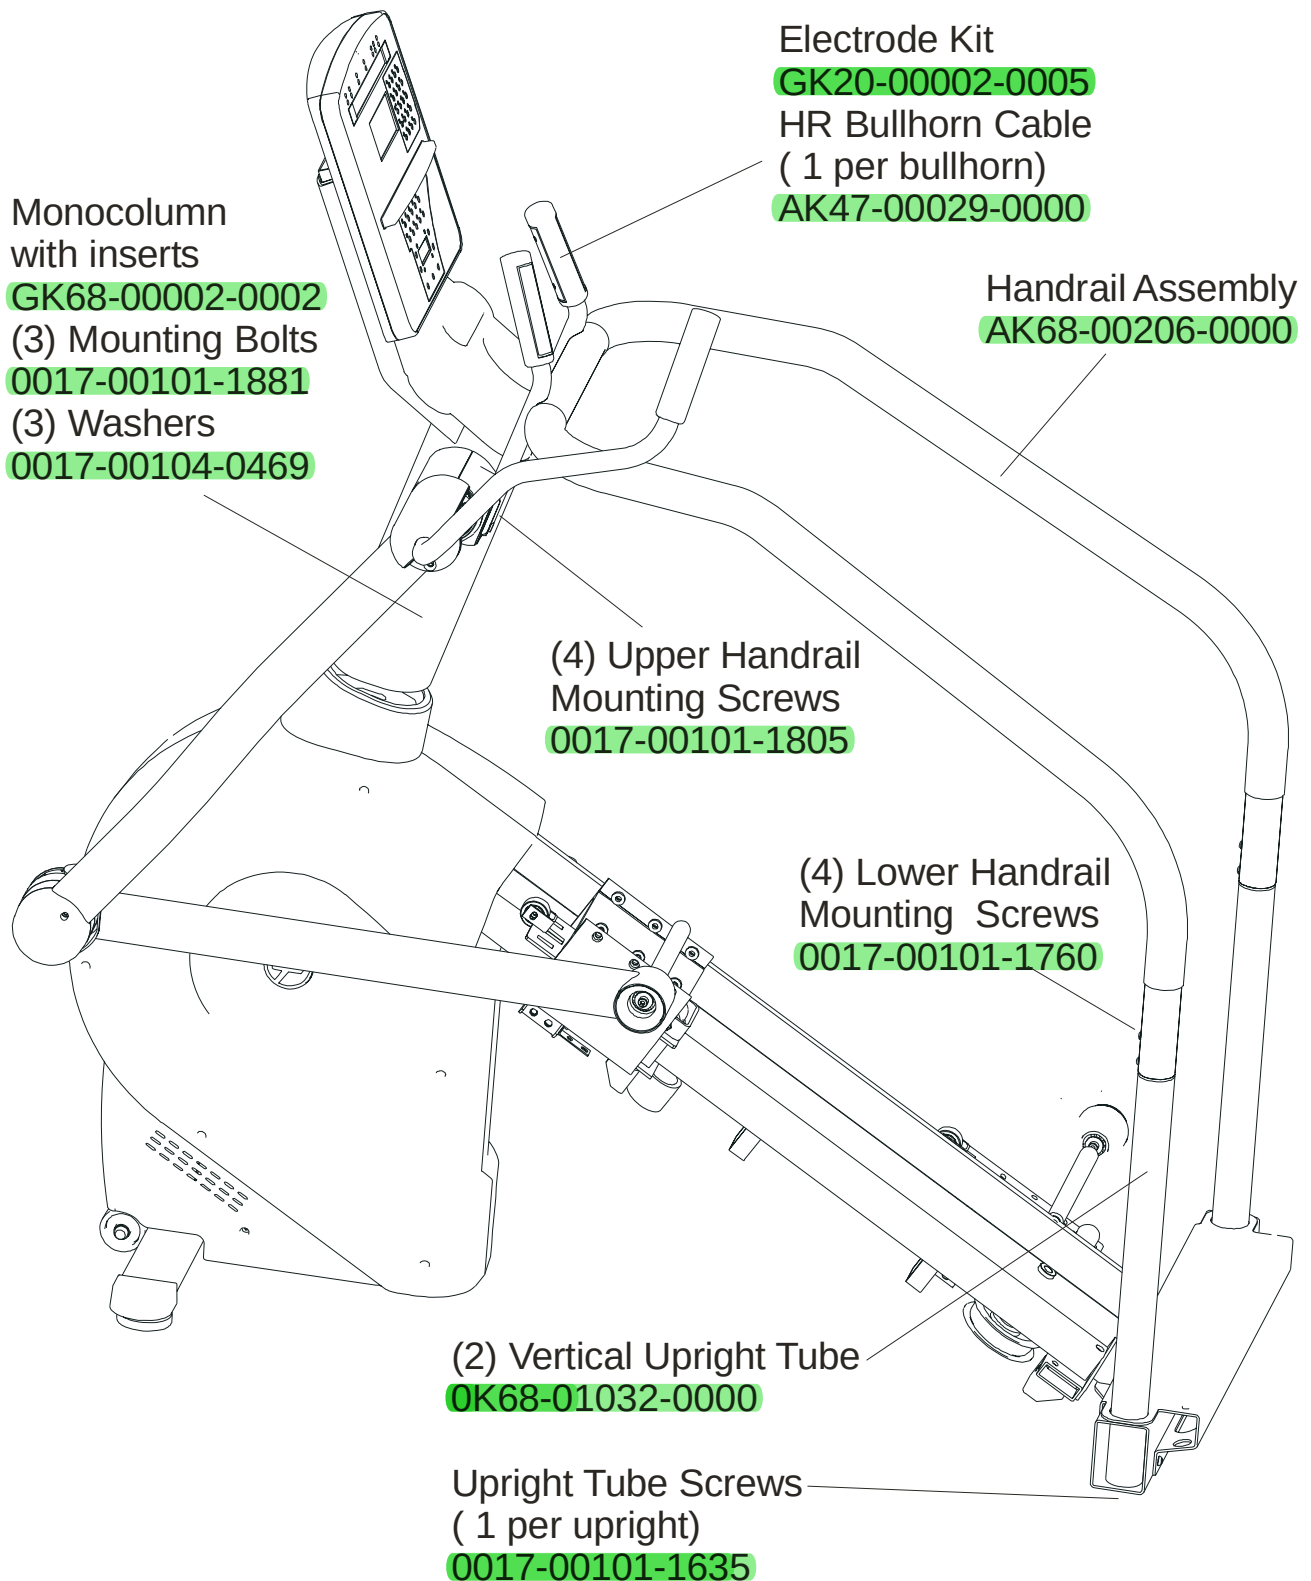

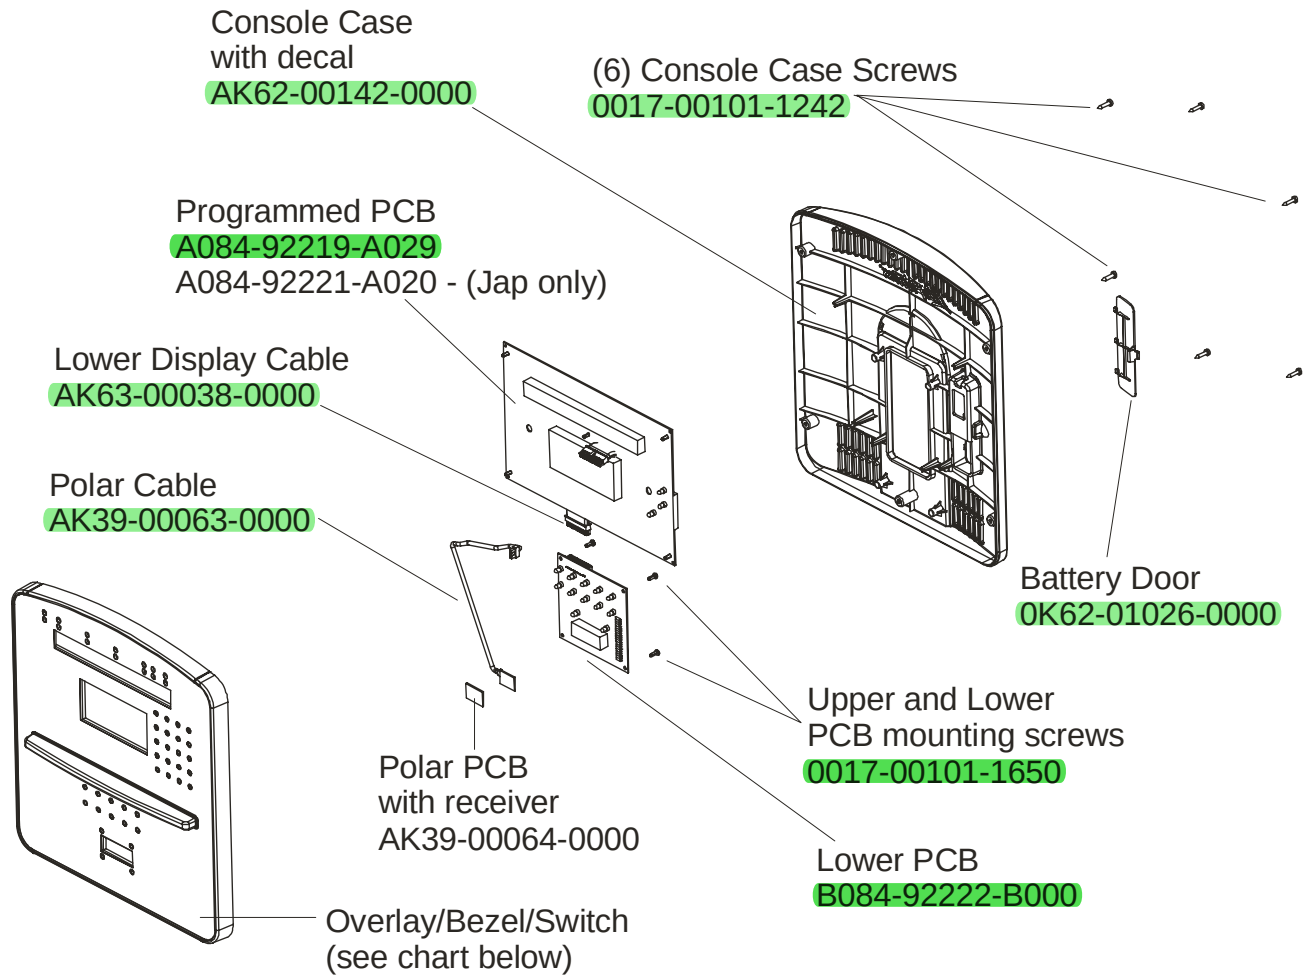

CONSOLE	OVERLAY/BEZEL/SWITCH	LANGUAGE
AK68-00183-0001	AK68-00184-0001	Eng/LED
AK68-00183-0002	AK68-00184-0001	Eng + Met
AK68-00183-0003	AK68-00184-0003	Ger/Met
AK68-00183-0004	AK68-00184-0004	Spn/Met
AK68-00183-0006	AK68-00184-0006	Jap/Met
AK68-00183-0007	AK68-00184-0007	Frn/Met
AK68-00183-0008	AK68-00184-0008	Ital/Met
AK68-00183-0009	AK68-00184-0009	Dut/Met
AK68-00183-0010	AK68-00184-0010	Port/Met
AK68-00183-0014	AK68-00184-0014	Eng/Tur

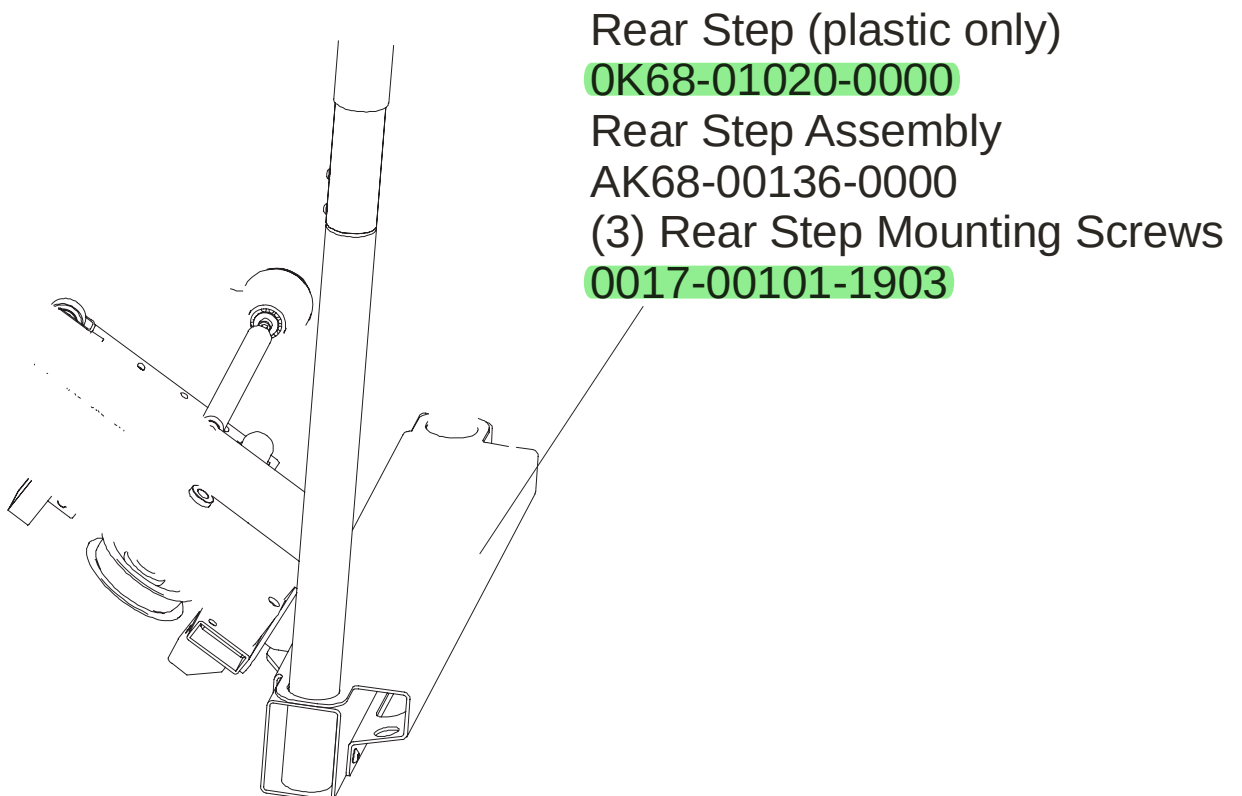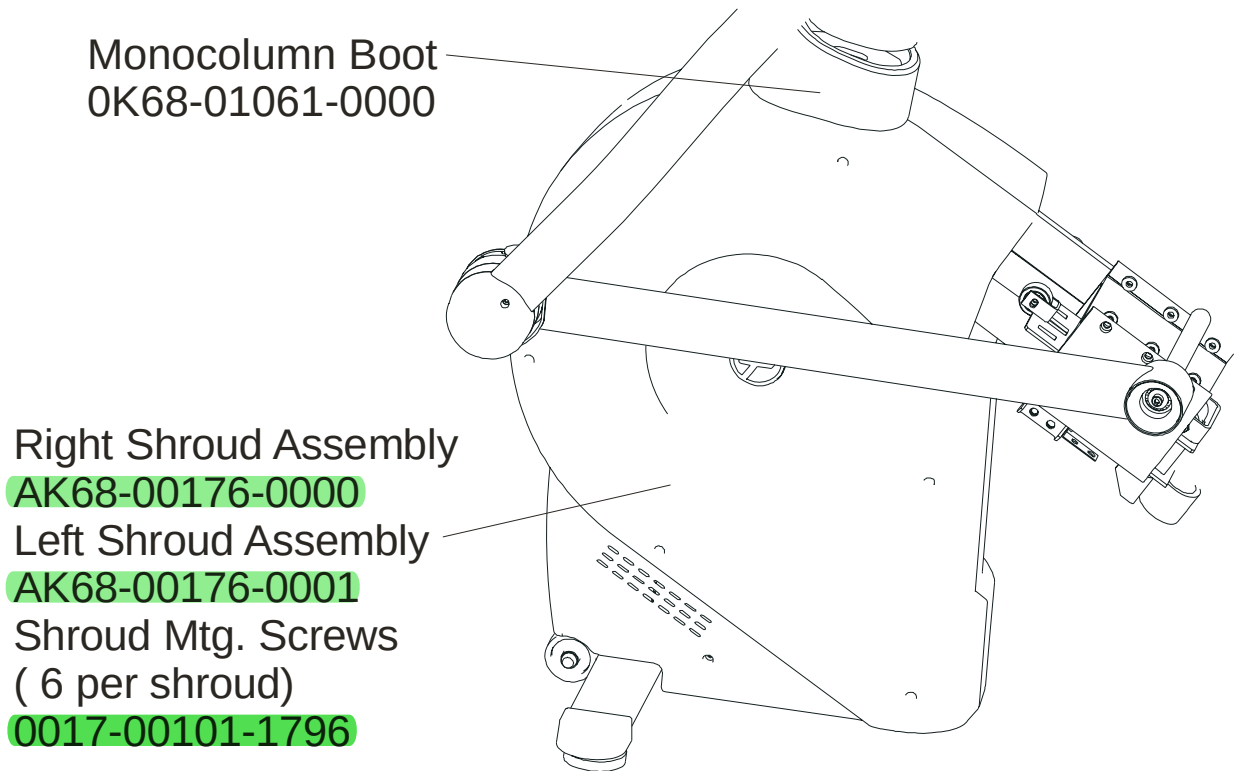  


Rocker Arm Washer

0017-00104-0418

Retaining Ring



0017-00100-0178

 Rocker Arm Assembly
AK68-00125-0000

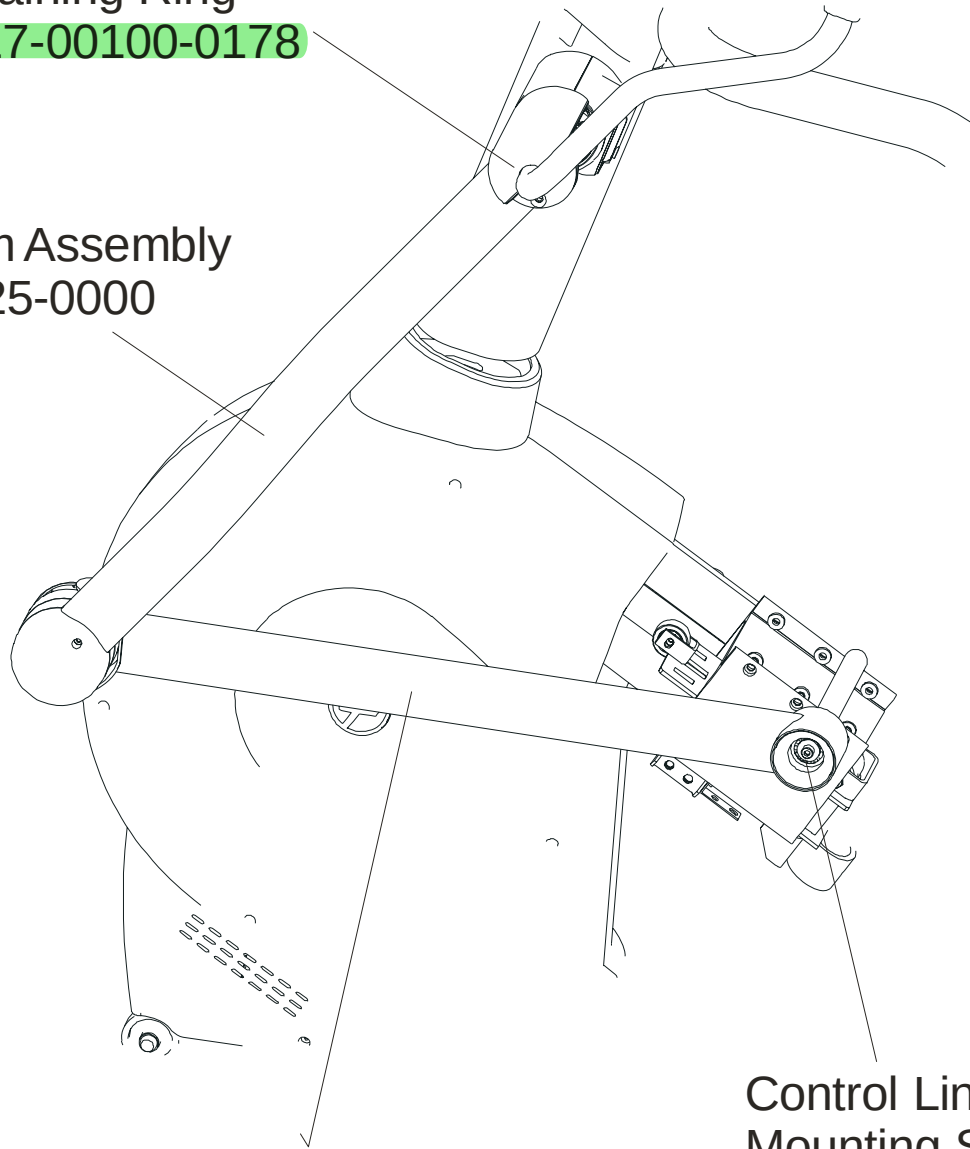


Control Link Assembly
AK68-00147-0000

  
Control Link
Mounting Screw
0017-00101-1881
and Washer
0017-00104-0479

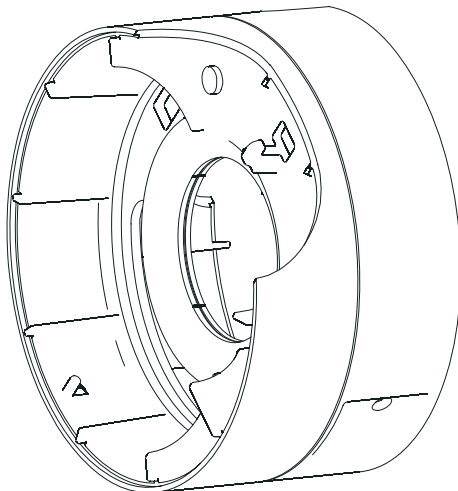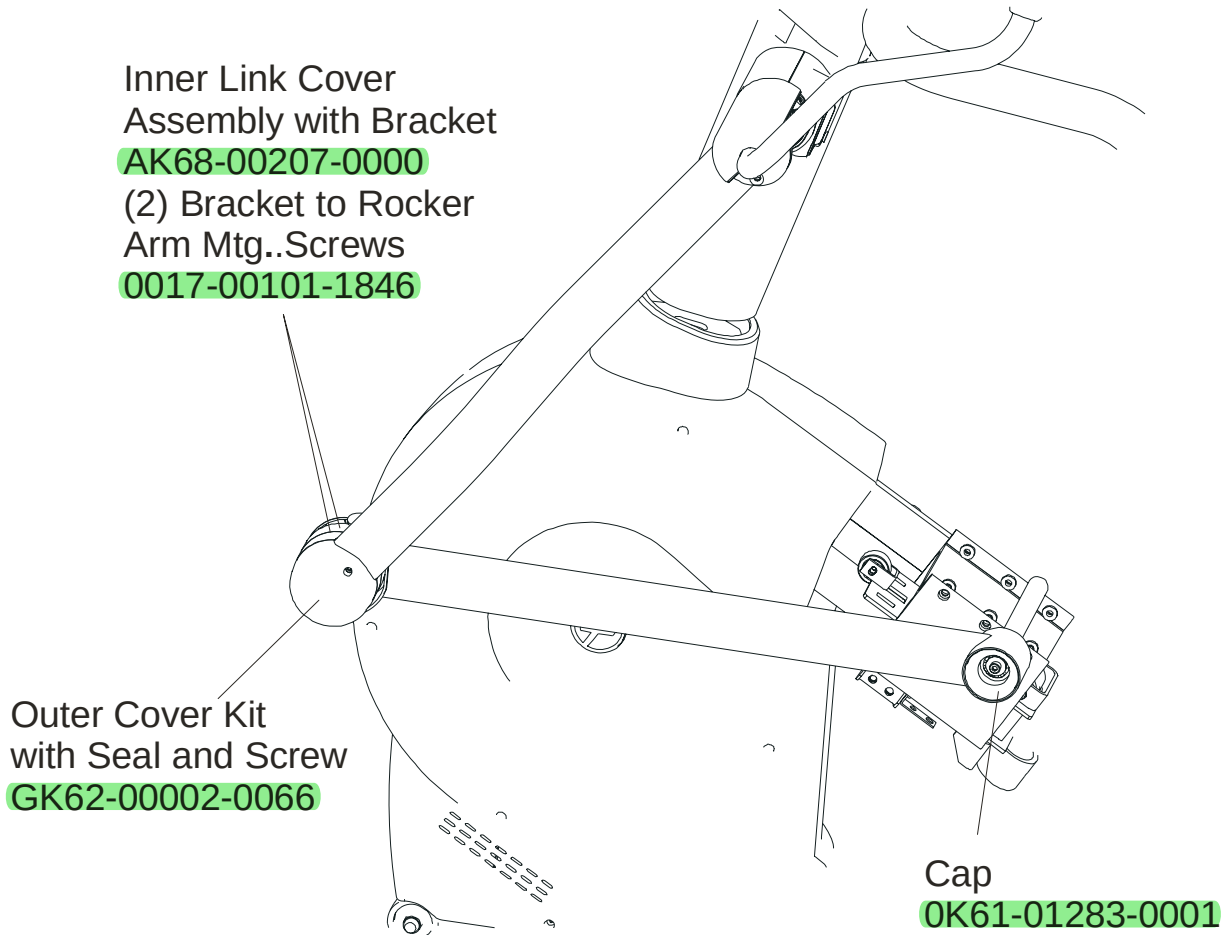


 
Right Clevis Cover Assy.
AK68-00154-0001

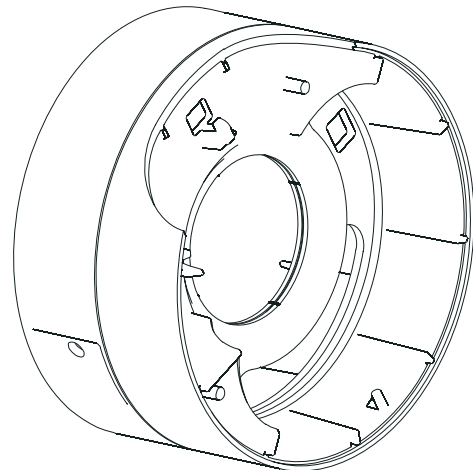



Left Clevis Cover Assy.
AK68-00154-0002

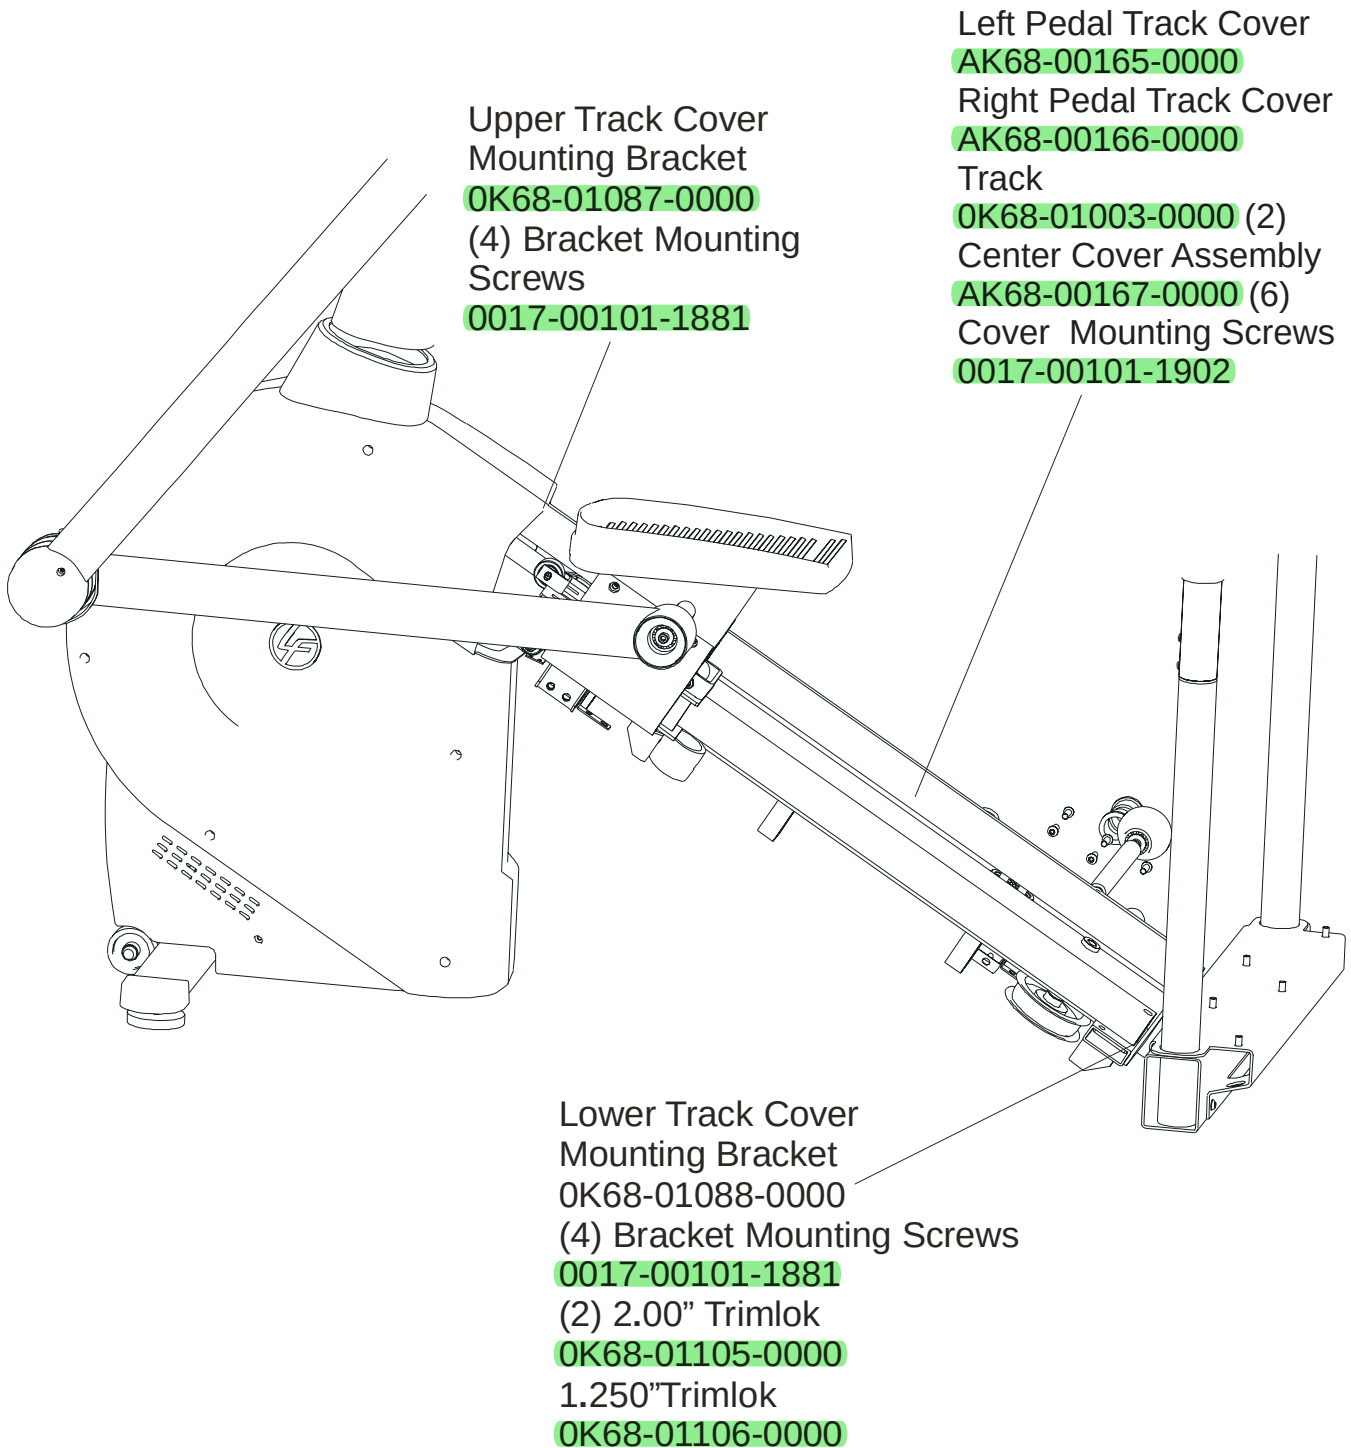 


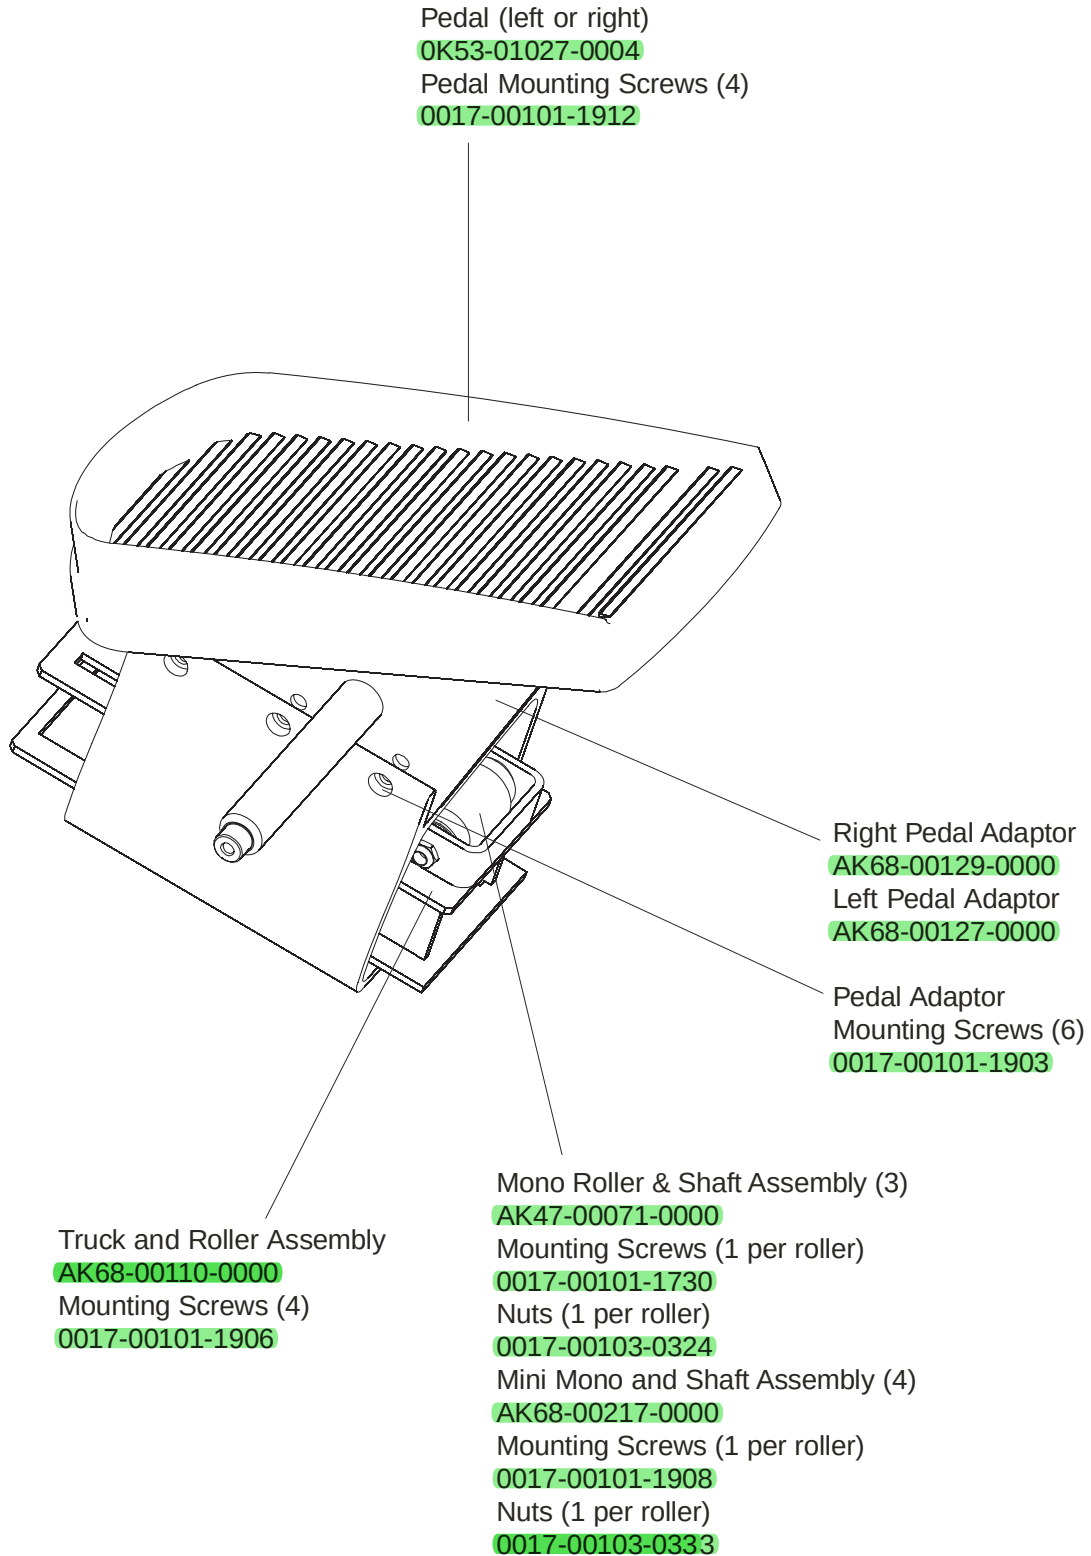 

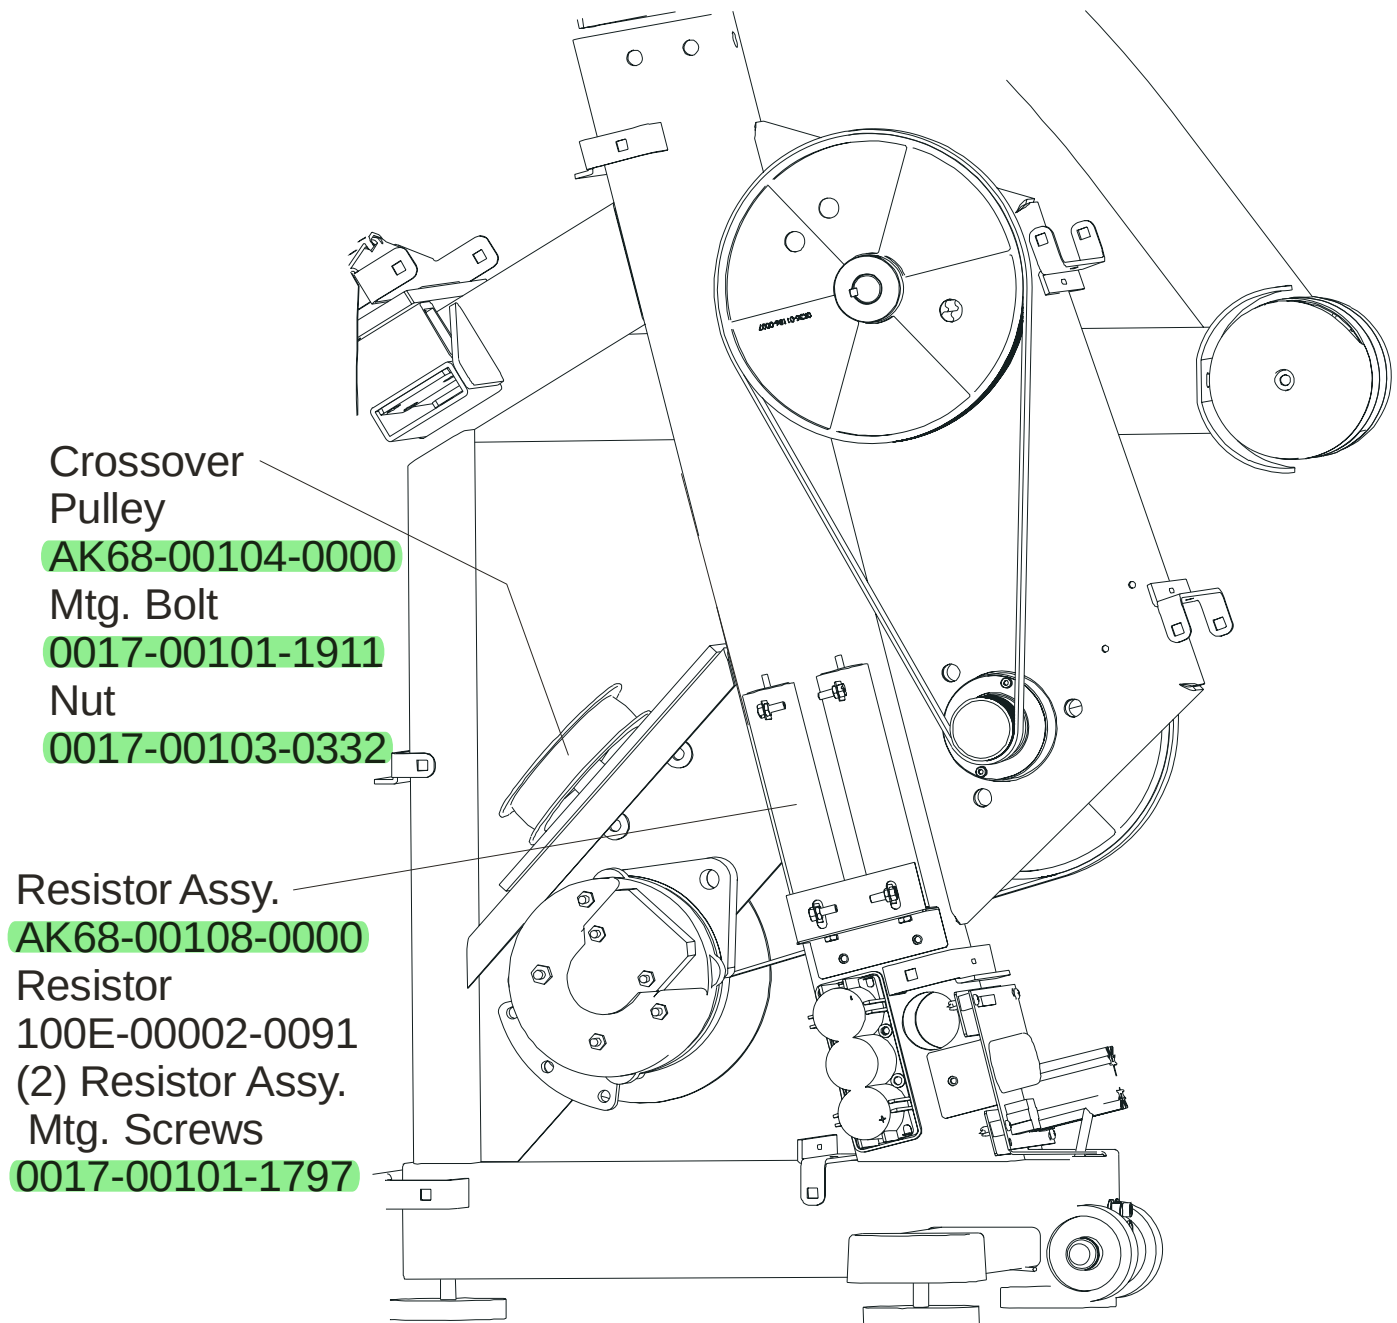 

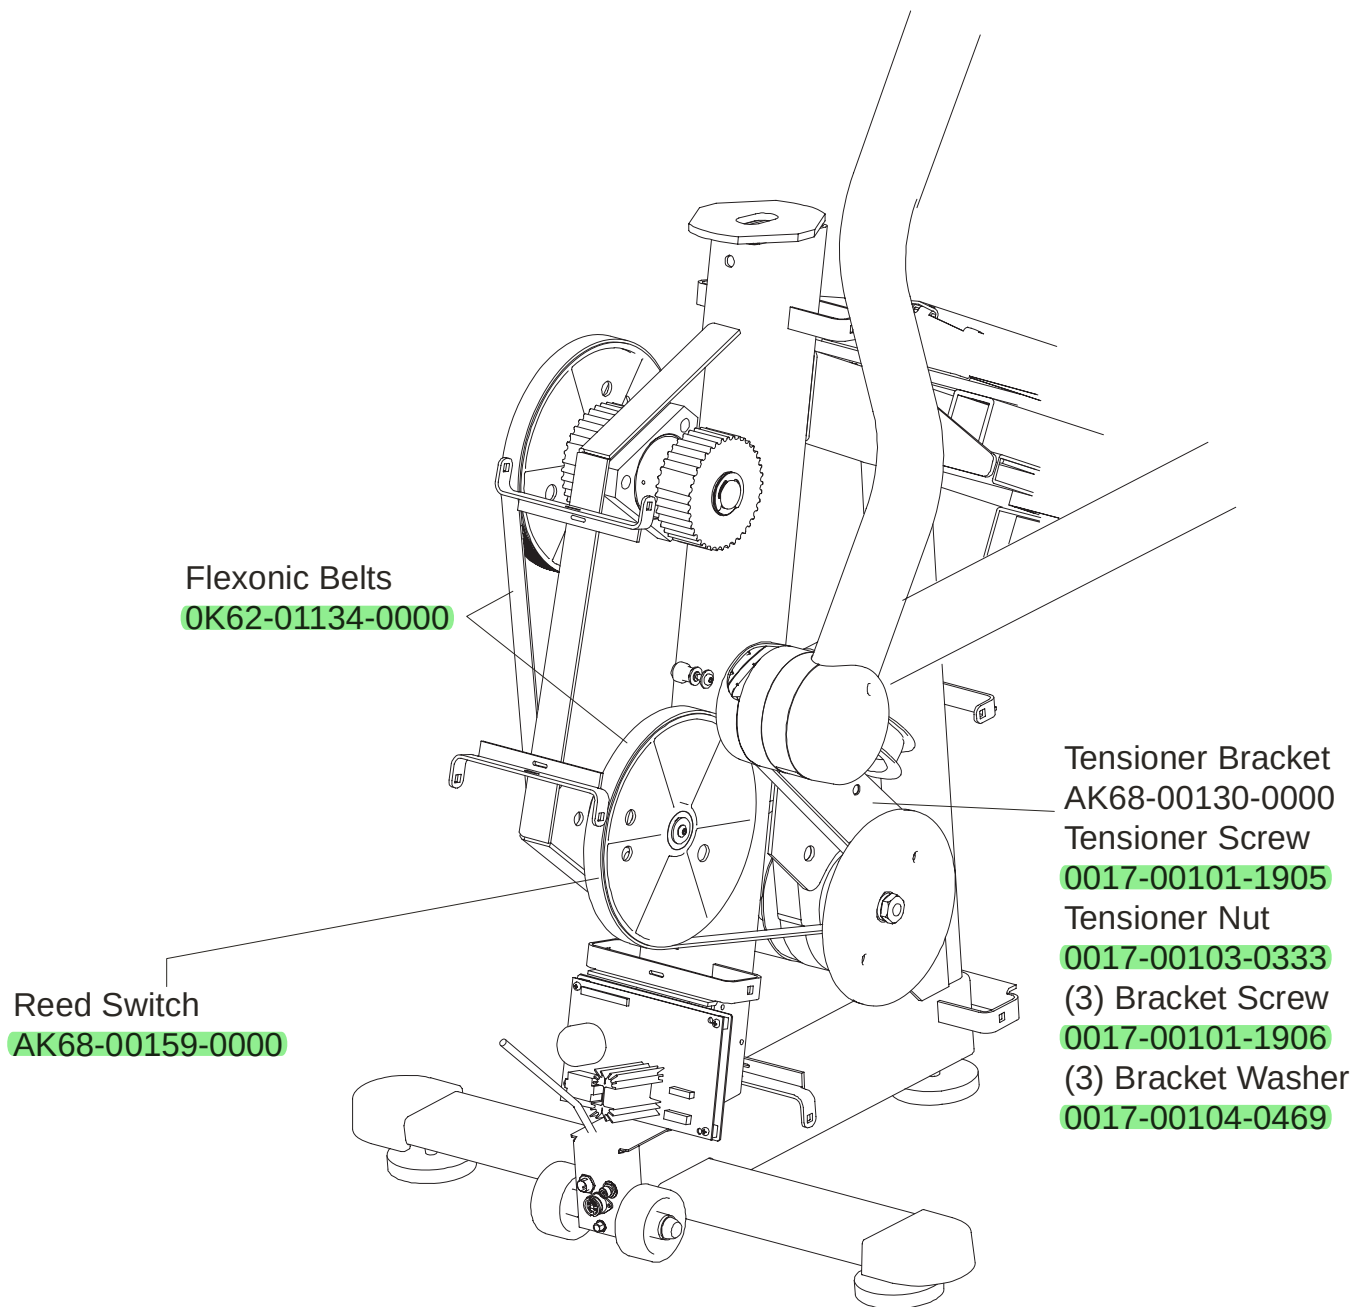 

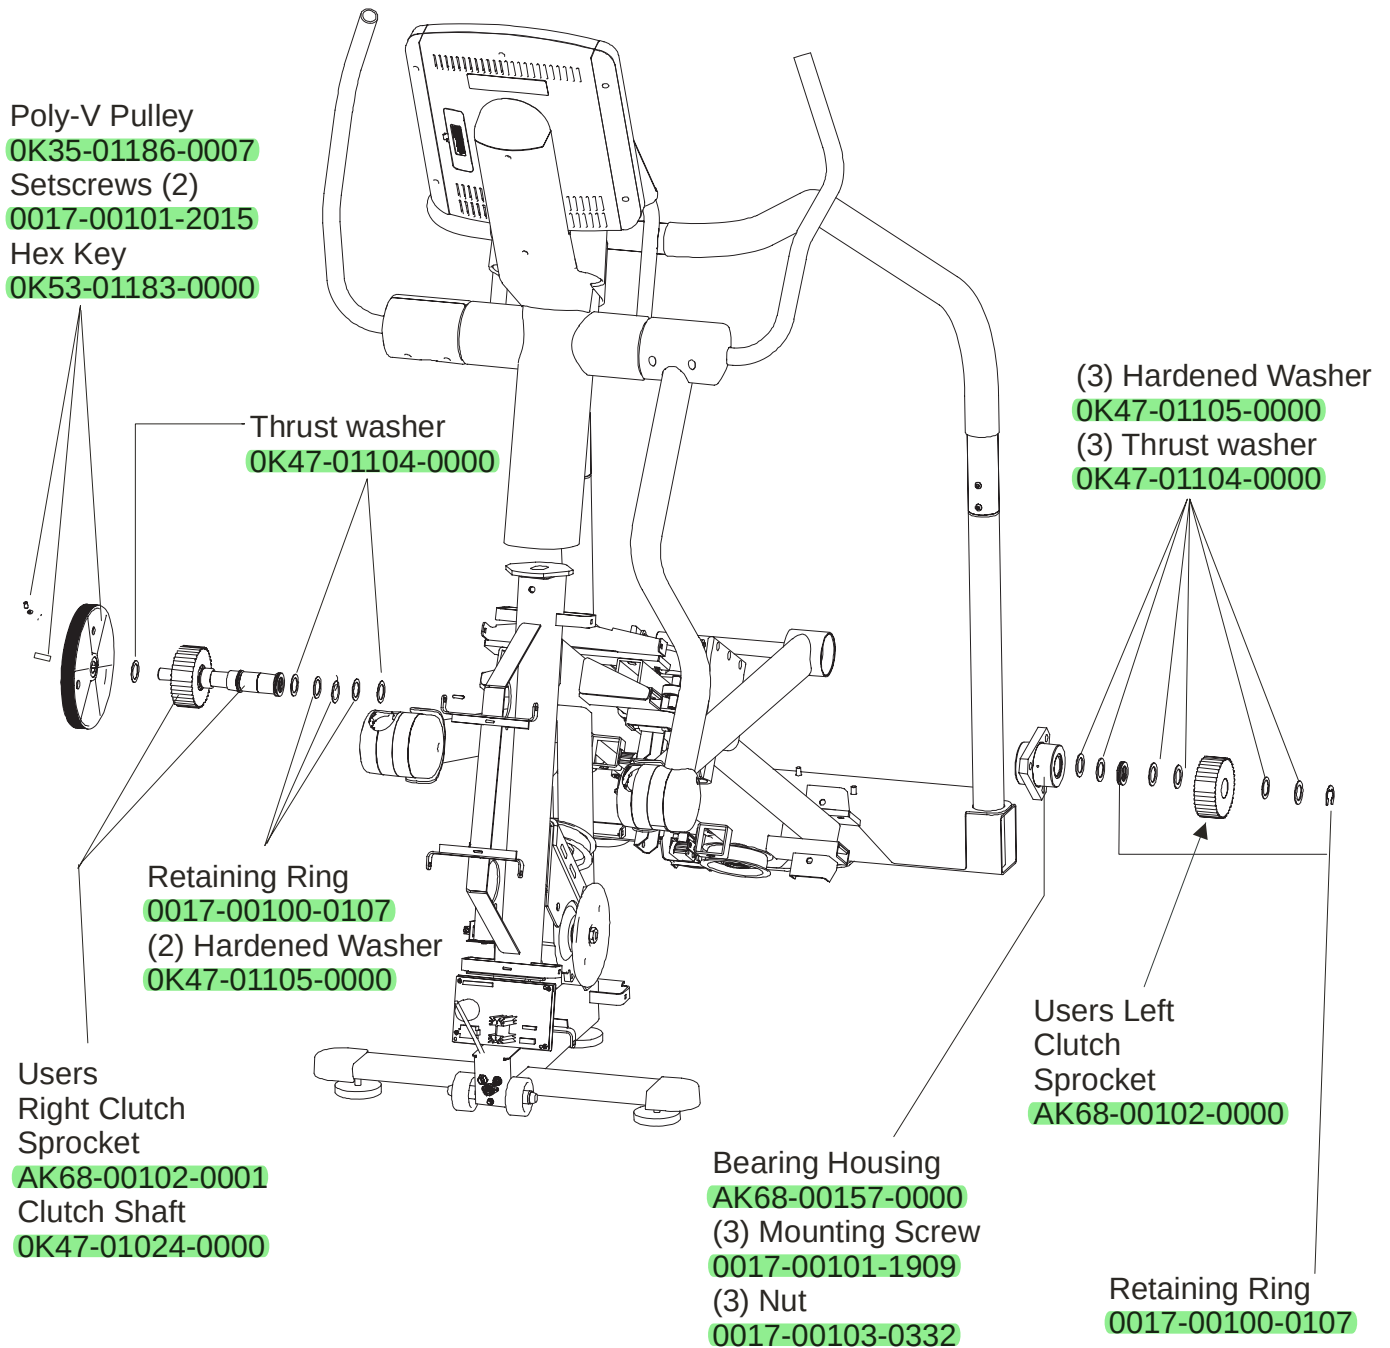  

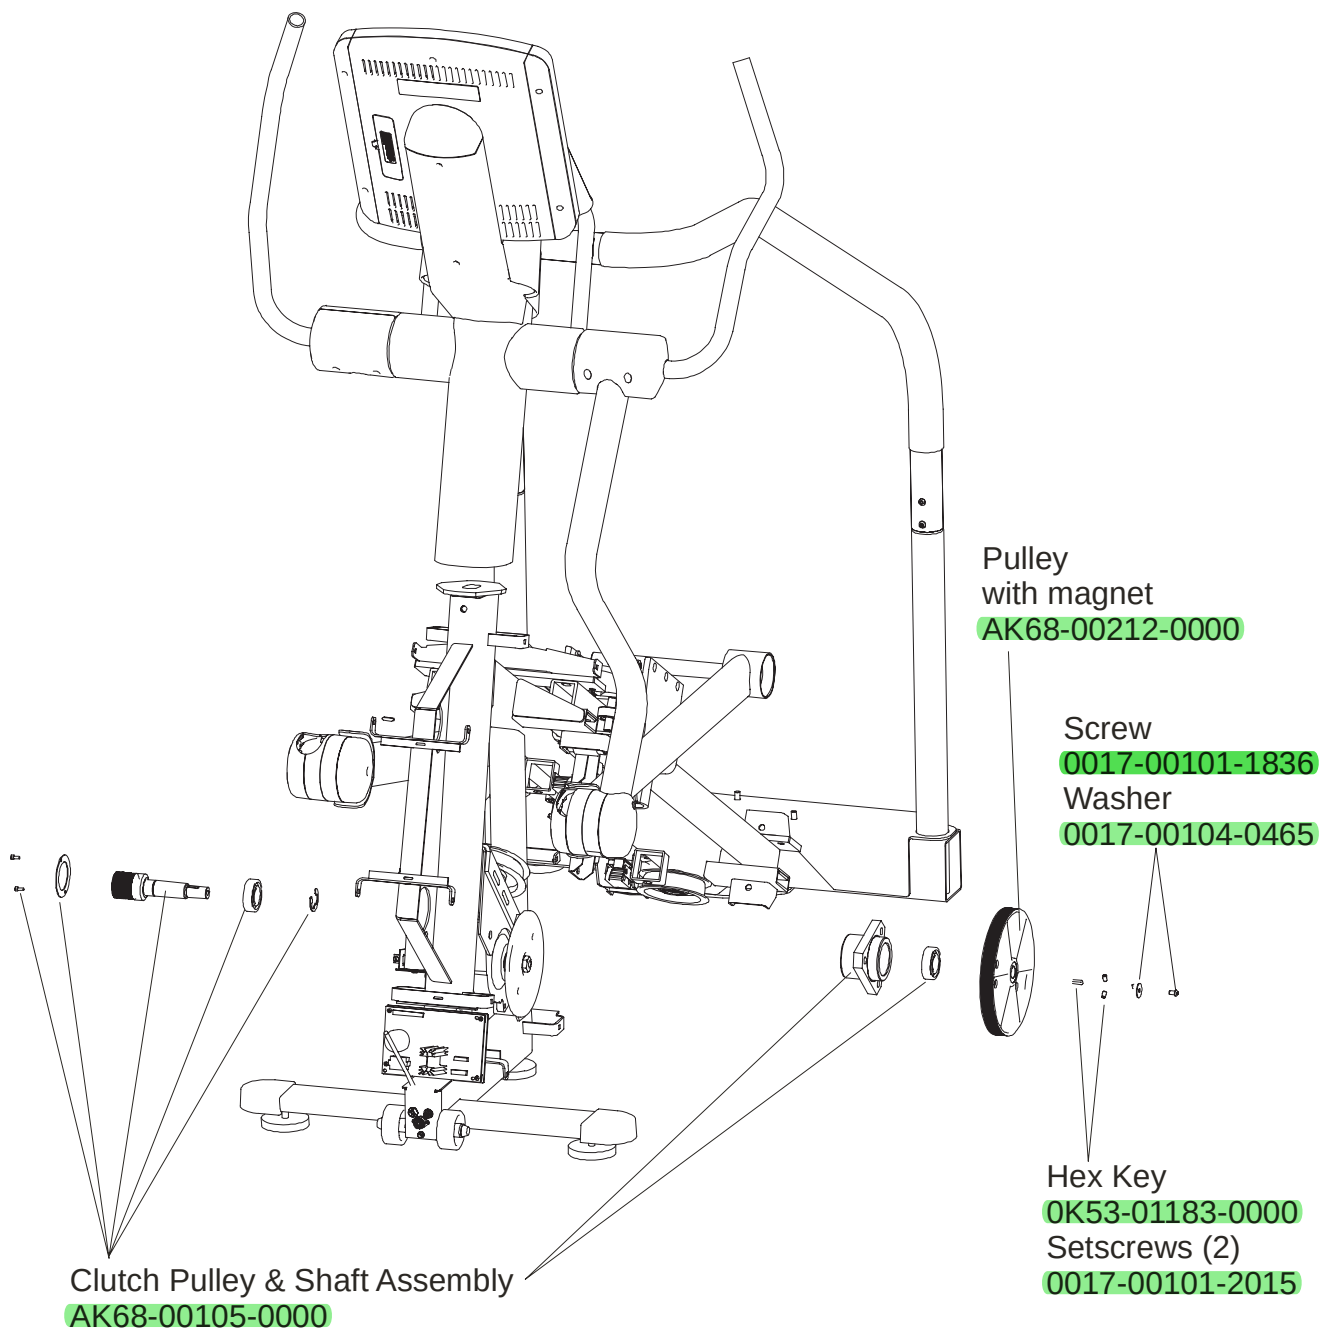

Assembly includes:
(2) Bearings, Bearing Housing,
Intermediate Shaft, Bearing Retainer,
Retaining Rings and Bearing Retainer
mounting screws.

NOTE: The following parts are used on
each end of both Timing belts:

Belt Terminator

0K35-01105-0000

Bracket

 
0K35-01142-0000

(2) Screws

0017-00101-1904

Washers

0017-00104-0469

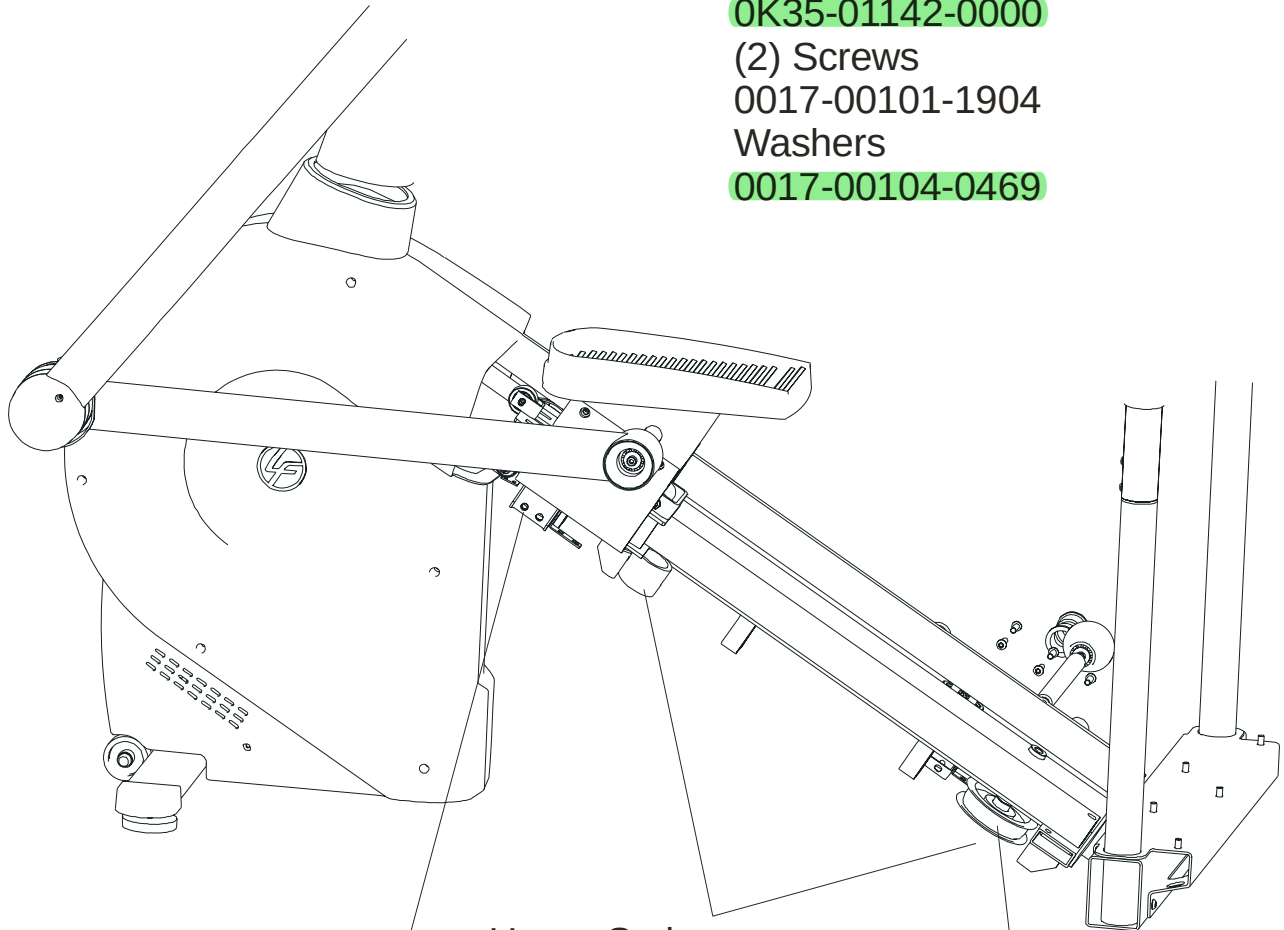

Upper Timing Belt
AK68-00210-0000

Upper Spring

0K68-01051-0000

Lower Spring

0K68-01081-0000

Mounting screw

(1 per Spring)

0017-00101-1902

Washer

(1 per Spring)

0017-00104-0465

Crossover Pulley

AK68-00104-0000

Pulley Mtg. Screw


0017-00101-1911


Nut


0017-00103-0332

Lower Timing Belt

   AK68-00211-0000

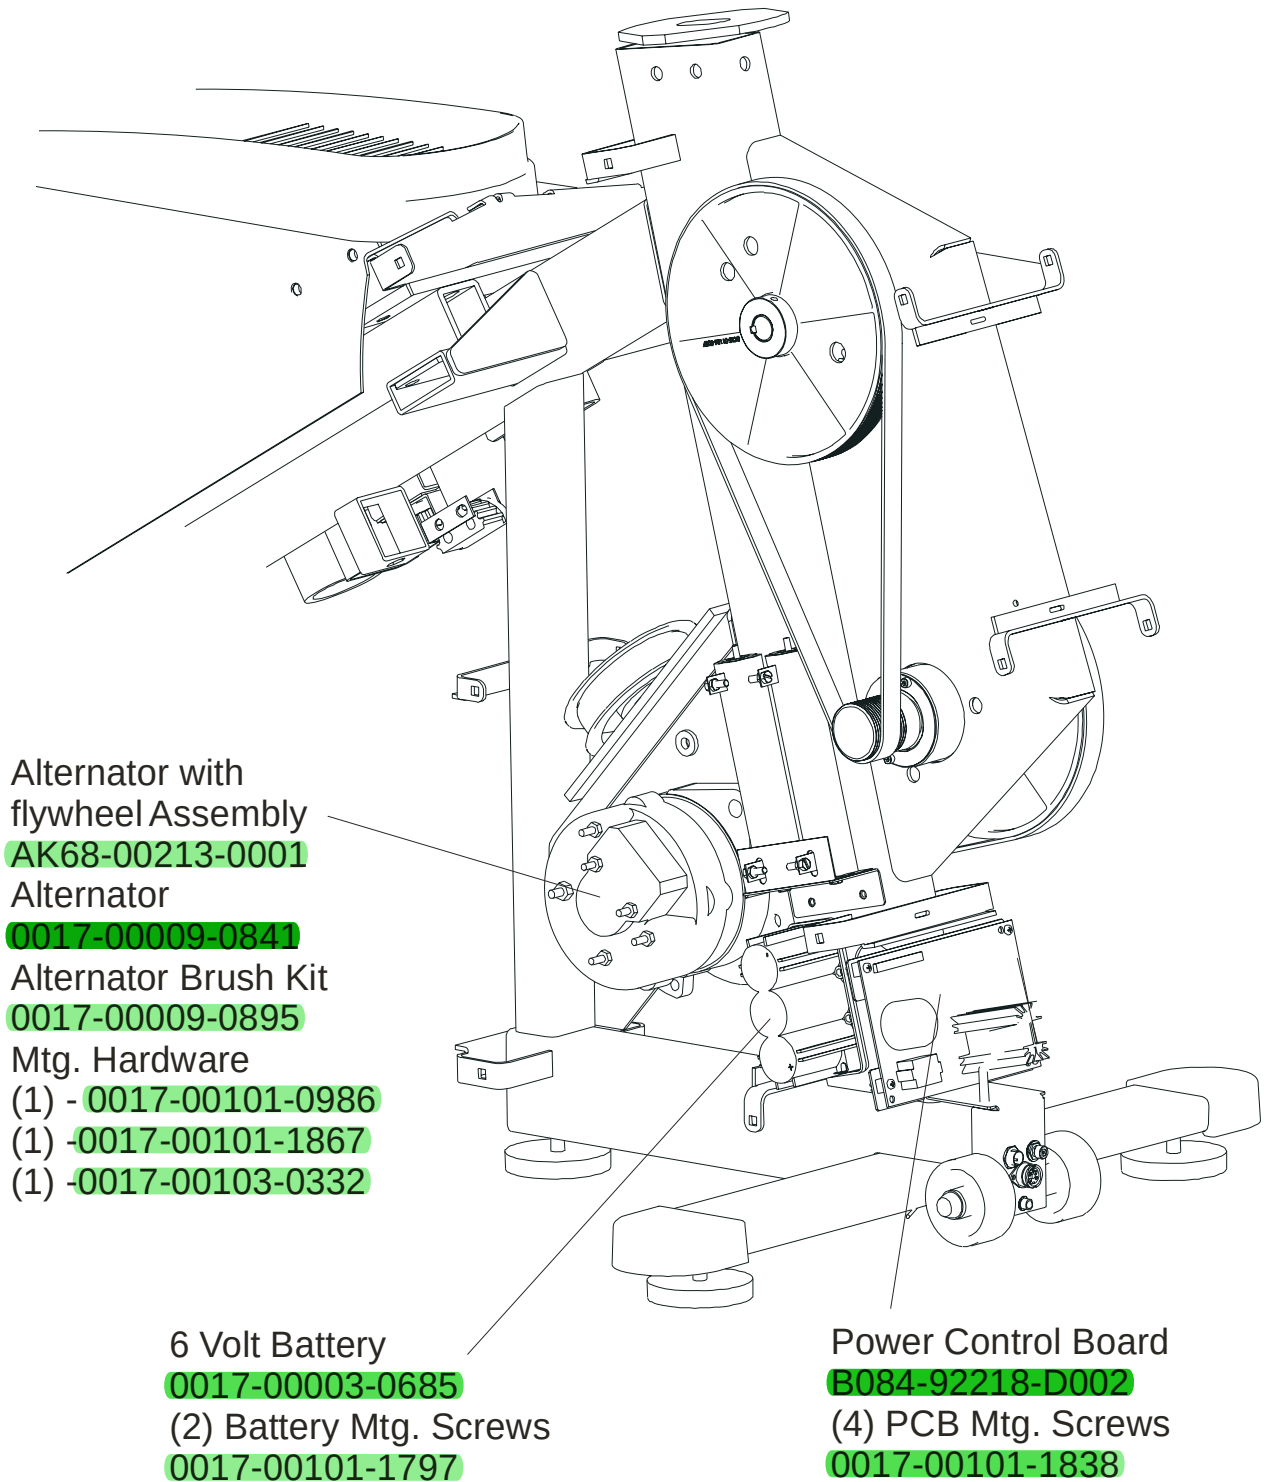

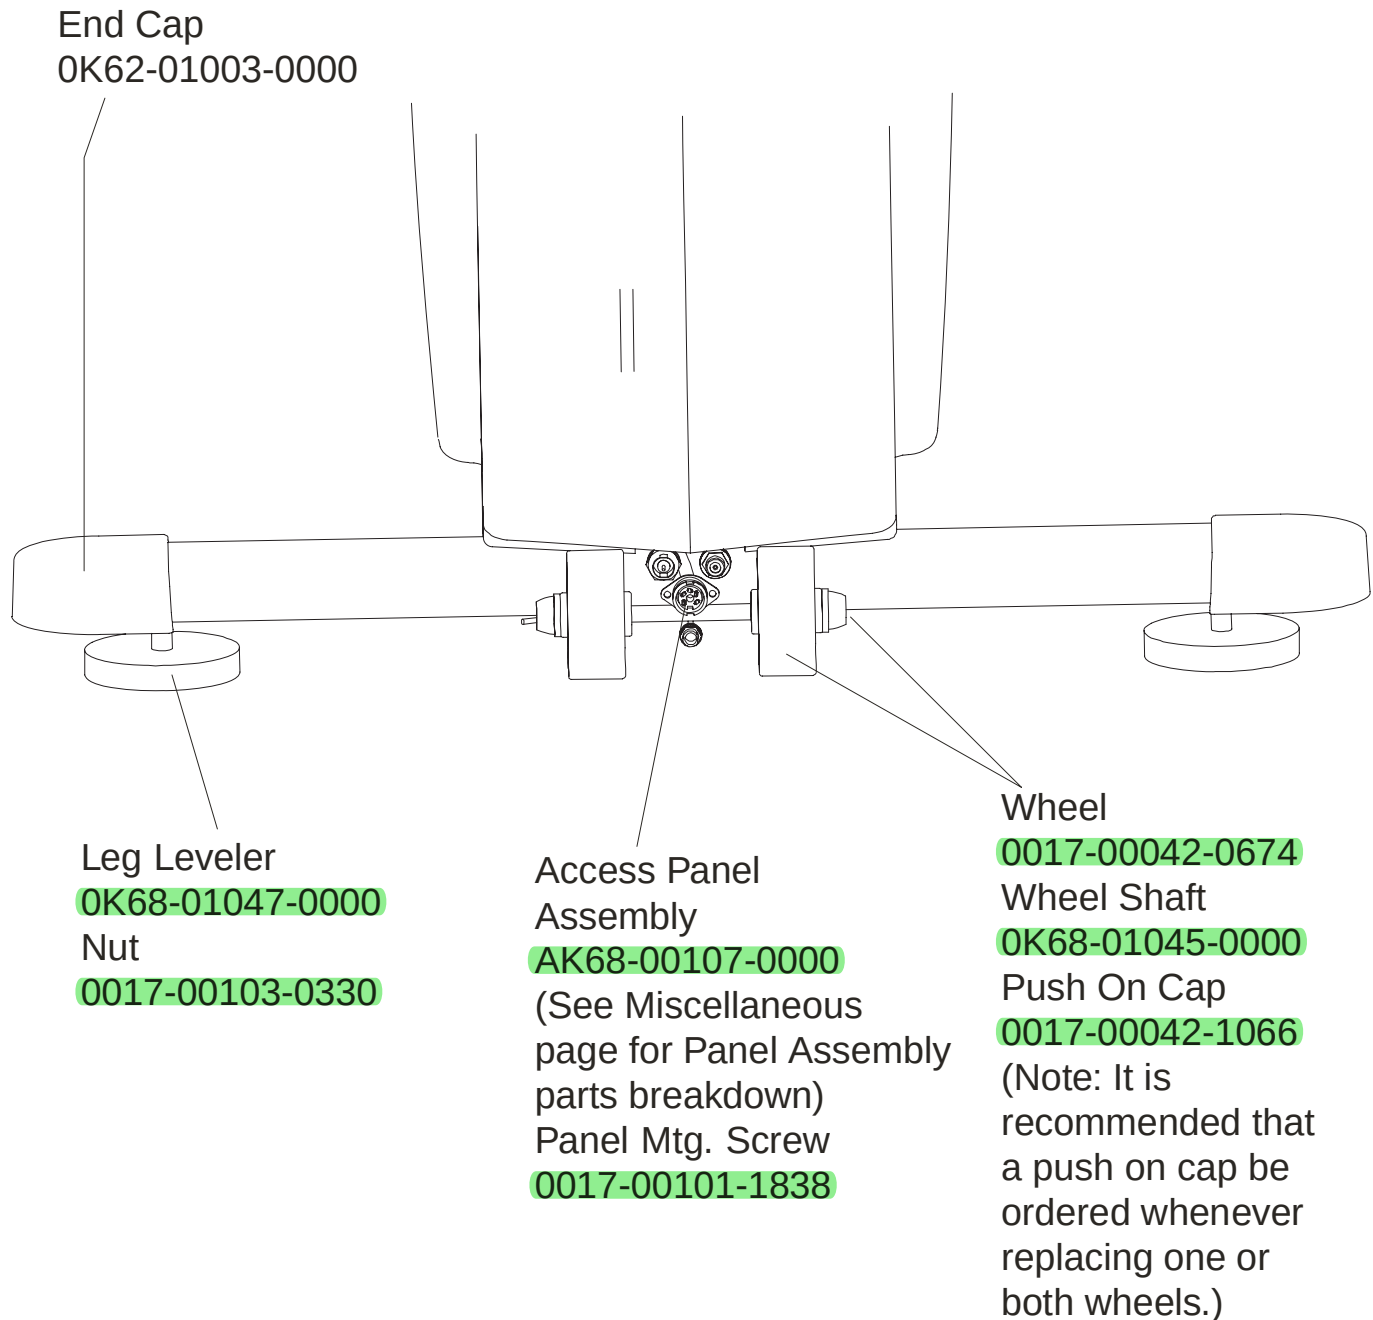

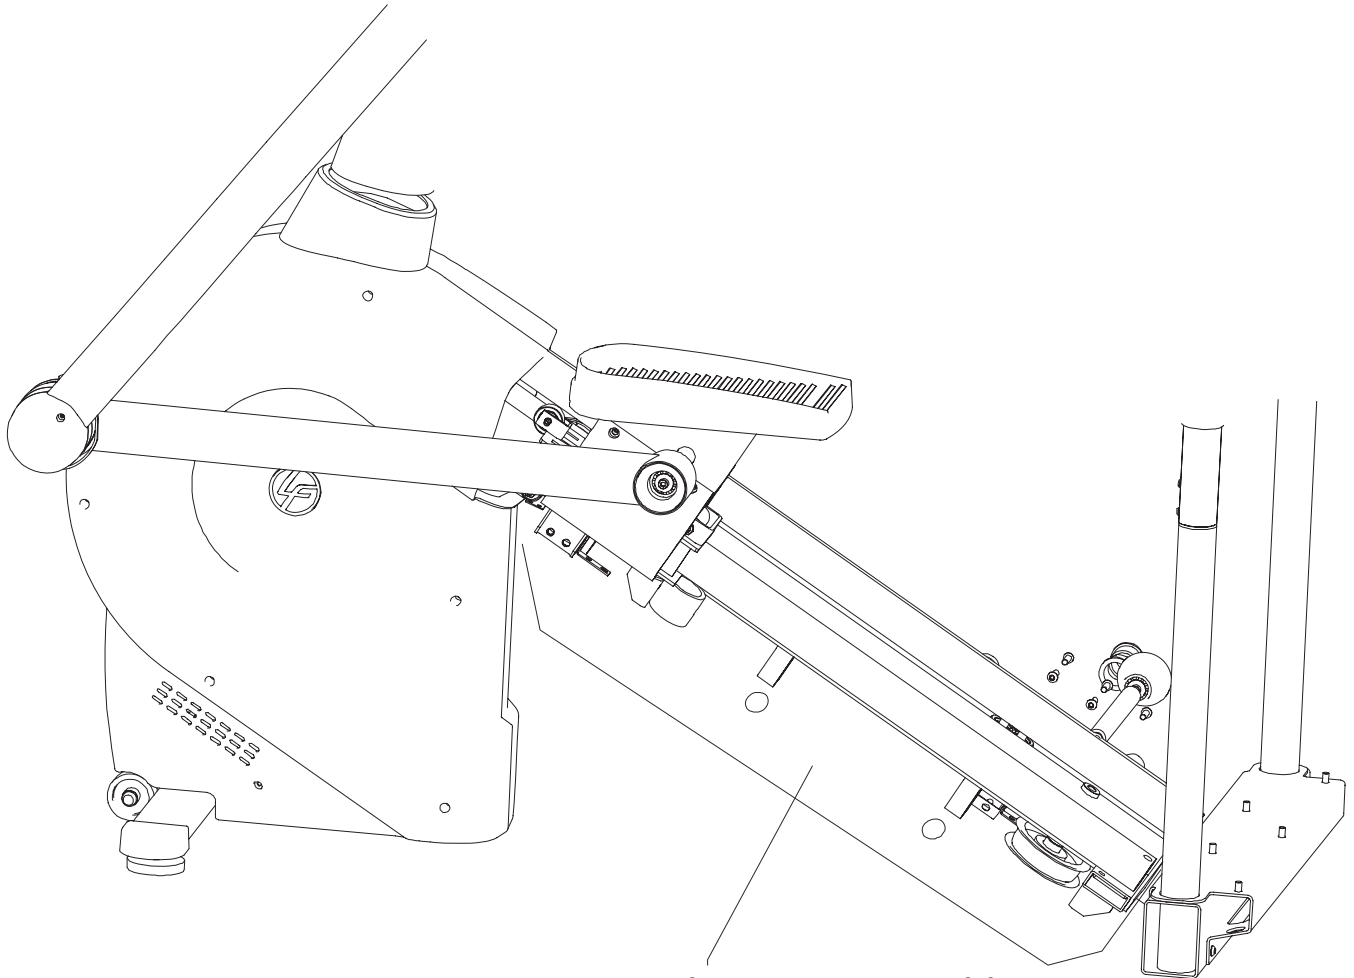

Lower Track Cover Assembly

AK68-00220-0000

Mounting Screw (3)

0017-00101-1906

Washer, Nylon (3)

0017-00104-0485

Flat Washer (3)

0017-00104-0479

