

The following procedure will describe how to select a digital channel on any of the current PVS controllers. *(This procedure should not be confused with programming a digital home channel. For information on programming a digital home channel refer to service bulletin 201002.1)*

- CX30311-103 Standard Controller
- CX30600-103 PEP2 Controller
- CNTE9-101 PVS 15



CX30311-103 Standard Controller



CX30600-103 PEP2 Controller



CNTE9-101 PVS15 Controller

Before proceeding please note:

- This procedure will only work on digital capable PVS. Currently the DTL and EDTL screens are the only digital capable screens available.
- If the controller is used on a self powered machine, make sure you are pedaling while selecting a digital channel.
- Make sure you are in the digital legacy mode (mode 4) on the controller. (Press and hold the **“Volume Up”** and **“Power”** buttons until you are in programming mode and then press number 4 on the keypad.)
- Digital channels must be scanned into the PVS.

Procedure:

1. Press the **“Source”** button **(1)** and scroll through the video tuner modes until digital mode is displayed on the screen. You must scroll through the video tuner modes even if you are already in digital tuner mode. **See Diagram 1.**

Note:

- There are up to three possible video tuner mode choices; Analog, Digital or Video. Depending on what channels are scanned into the screen memory and what type of controller you have will determine the video tuner mode choices displayed. **Diagram 2** illustrates how the tuner modes will be displayed on the EDTL and DTL screens.
- If digital channels are not scanned into the PVS, the digital mode will not be displayed.

Diagram 1



1

Digital Tuner Mode

Diagram 2 Screen Type	Video	Analog	Digital
EDTL			
DTL			

- Once the digital tuner mode is displayed, enter the desired digital channel using the number pad on the console or controller.

Example: To select the digital channel 14.7 you would enter 14 on the number keypad, press the **"Source" (1)** button, and then enter the number 7 on the number key pad. **See Diagram 1.**

If you have any difficulty with the described procedures please contact Precor customer support @ 1-800-786-8404.