

# Adjustment Procedures


## H-brake Belt Tension Adjustment

**WARNING:** Before continuing with this procedure, review the Warning and Caution statements listed in the Warning and Caution Statements and General Safety Guidelines Section, Things You Should Know.

### Procedure

- 1 Remove the gasket, top, front, rear, left and right side covers per, [Cover Replacement](#) Procedure.
- 2 Place a belt gauge on the H-brake belt.

**Figure 50:** H-Brake Belt Tension Gauge

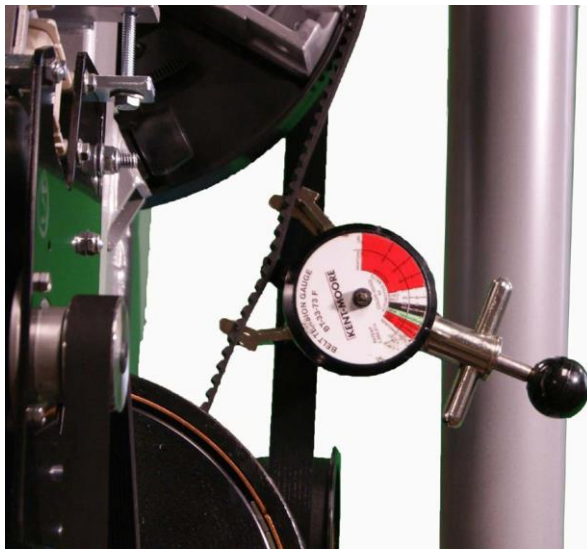

- 3 The belt gauge should read approximately 130-140 lbs. If the belt tension is significantly high or low the belt tension may be adjusted by loosening or tightening the H-Brake adjustment bolt.

**Figure 51:** H-Brake Belt and H-Brake Cam

