CONSOLES









Accessing the Maintenance Menu

From the idle screen, press three points on the screen (one at a time). Top left, and then top right, then the top center

The Maintenance Screen will display.

Note: consoles from 2014 or earlier used a different method to access the Maintenance menu and should be upgraded.¹

(4) MAINTENANCE					
	DEFAULTS		DIAGNOSTICS		
	CUSTOMIZE		MAINTENANCE LOGS		
	MACHINE STATUS		CONFIGURATION		
	R AND D		UTILITIES		
			Exit		

TS-1 & TSE-1 Menu Map

Defaults

Default values are:

- Weight 173
- Workout Time 20 Minutes
- Age 35
- Target HR% 80
- Start Level 1
- Step Rate 20 Min



1 To access the menu in the pre-2014 versions, place finger in the upper left corner and hold for approximately 5 seconds. The "Stairmaster" icon in the upper center of the display will flash. Then place finger on the "Clock Symbol" and hold for approximately 5 seconds. This procedure does not function on later versions.



Customize

- Change Units Metric/English
- Languages English, German, Italian, Dutch, French, Portuguese, Spanish, Japanese.

CUSTOMIZE				
	CHANGE UNITS			
	LANGUAGES			
	Exit			

Machine Status

Maintenance Status shows the Run Hours, Workouts, Floors, Unit Configuration (Stepmill/Stepclimber), and Maintenance Hours on the left side.

All Processor, software, etc is located on the right side.

Machine Status					
Run Hours: Workouts: Floors: Equipment Type: Maintenance Hours:	192 1093 60237 Stepmill 192	Application Version 0.13 Application Build XX Text String File Revision 0 Kernel Version 2.6.21 Kernel Build 1302 Daughter Board Model: AFLHR-M Daughter Board Version: 3.02 Daughter Board Checksum: XXXXXXXX Microcontroller Boot Version: X.XX Microcontroller Boot Checksum: XXXXXXXX			
		Exit			

R and D

Factory testing only.

Diagnostics

Diagnostics contains:

- Alt Test On/Off Alternator test
- Tach Test
- Heart Rate Test





	MAINTENANCE LOGS	
Empty		
Empty		l
		I
		l
	Details	
	Back	

Configuration

Maintenance Logs

• Equipment Type – StepMill/StepClimber

Maintenance records location with 5 Slots

- Max Time 20-180
- CSAFE On/Off
- Cursor On/Off
 Allows screen cursor
- Reset Data Set-up
- Clear Error Log
- Reset Console
 Factory Reset
- Clear High Scores



Utilities

- TV Tuner Setup TV configuration/Setup TSE-1 Only
- Load Software Software load point from USB
- Touch Screen Calibration
 Used to setup initial touch screen position
- Reset Configuration
 Resets configuration to factory
- Real Time Clock Set up unit clock Day and Date





TV Tuner Setup

- Factory Defaults
 TV Mode
- (DTV Air/Cable, ATV
- Air/Cable)
 - TV Type
 - Start Scan
 - Control Menu
 - DTV Usage Menu
 - Channel Auto/Manual Program Caption Analog/Digital CC Set-up Lang., Adjust, Time Zone VChip (Password required) Center Up, Down, Left, Right keypad for navigation in DTV Menu • TV Mode
 - Aspect
 - Normal, Overscan, Fill Screen
 - Channel +/-
 - Volume +/-

Press Start Scan button to scan for channels

Control Menu allows additional channels, additional volume controls, and screen positioning



Available programs

- By Workout Profile
- Set Time Goal
- Set Calorie Goal
- Set Floor Goal



Serial Location

Both the TS-1 and the TSE-1 have independent serial numbers not related to the frame of the unit it is used on. The serial is rarely required by customer service, but can be found on the rear plastic housing, as shown below.

