



Maintenance Mode

LED Console:

To enter Maintenance Mode, press the 0, 2, and OK keys all together at once.



A beep will sound and the console will say Maintenance Mode.



Use the Elevation up/down keys to change between Maintenance Mode options.



Use the Speed up/down keys to edit the options.



Use the OK button to enter, or save.

