


# Brake Pad Replacement

## About

This procedure provides instruction to remove and install the Brake Pad.

The leather pad is an extremely simple and reliable resistance system. The resistance adjustment knob is used to apply pressure and increased friction to the flywheel creating changing pedal resistance.

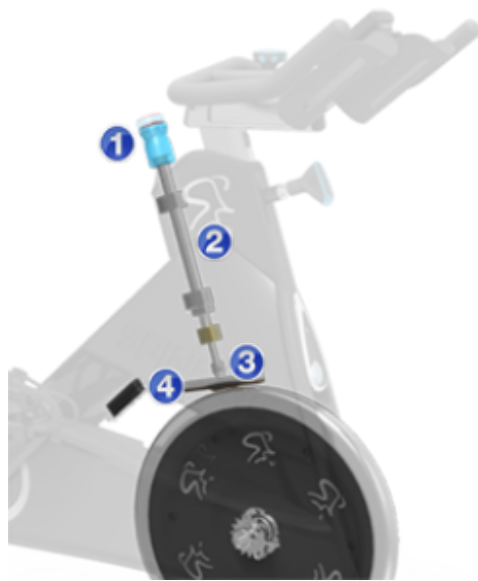

ID	Part
1	Resistance knob
2	Resistance shaft
3	Acorn shaft nut
4	Brake pad assembly

## Procedure

Review entire procedure before starting.

### Removal Instructions

1. Remove all tension from the brake pad by turning the resistance knob counterclockwise (-) until completely loose.
2. Remove the brake pad assembly **4** by removing the mounting bolts (2x) using a 5 mm hex key, Retain fastener hardware for installation.



3. Remove the brake pad **5** by removing the one mounting bolt using a 3 mm hex key. Retain fastener hardware for installation.



### Installation Instructions

4. Reinstall the brake pad onto the assembly and secure with the mounting bolt.
5. Pull up the resistance knob and slide the new brake pad assembly into place. Secure using the two mounting bolts.
6. Verify that the brake pad is centered onto the flywheel.
7. Verify the bike operation per [Operation Verification Checklist](#) and return to service.

### See Also

---

#### [Replacement Procedures](#)

---

Contact Precor [Customer Support](#) (Ph 800.786.8404) with any questions.

Copyright 2014-2018 Precor Incorporated