

# ***Reading the Serial Number***

---

Find the serial number on the underside of the machine base. Decode the information in the serial number with the below instructions:

AAABCCCCC

AAA= Day of the year manufactured (e.g., 35 = February 4th)

B= Last digit of year manufactured (e.g., 6 = 2006)

CCCCC = Unique code for each individual unit.

Serial number tags on newer models also read date of manufacture.



Serial Number