

**List of Console Codes
StairMaster 4000PT**

40	Enter	Turns on teletype sound for scrolling messages.
41	Enter	Turns off teletype sound for scrolling messages only.
105	Enter	Clears the entire memory (scrolling messages and custom workouts)
109	Enter	Displays summary for partial workouts (Rev 1.2, 1.3, 2.1 only)
1010	Enter	Change a workout length (except for Rev.2.1)
1650	Enter	Program a custom workout
2121	Enter	Turns off EKG symbol and turns on scrolling message. If display is blank, no scrolling message has been programmed.
2123	Enter	Turns off scrolling message and turns on EKG symbol
3121	Enter	Displays current odds for jackpot option
4101	Enter	Run a custom workout
7607	Enter	Program a scrolling message
7703	Enter	Displays numbers of hours and floors.
8089	Enter	Program odds for jackpot option
9750	Enter	Changes console to Rev. E (Rev 2.1 only)
9751	Enter	Changes console to Rev. D. (Rev .2.1 only)
9760	Enter	Changes console to English system (Rev. 2.1 only)
9761	Enter	Changes console to Metric system (Rev. 2.1 only)
97405	Enter	Locks-in a workout length (Rev 2.1 only) (lock box unlock code)
107	Enter 1	Alternator Circuit Test #1
107	Enter 3	Keypad Test
107	Enter 4	Revision Level Test
7424	Enter 0	Changes display language
4281322	Enter Start	Puts in Demo/auto test mode. (105 Enter clears this mode)