




## Diagnostics – LED Test

The LED Test can be used to verify that all LED (lights) are functioning on the display assembly.

To engage the LED Test

1. Enter the Maintenance Mode (see Settings – Maintenance Mode).
2. Press  until LED Test is display in the information window.
3. Press  to enter the LED Test. All lights on the display should be on.
4. Check for any burned out lights.
5. To exit the LED Test, press .

If any of the LED's do not illuminate, they may not be functioning and the display electronics may need to be replaced.

