


AXLE & SPROCKET REPLACEMENT - MODEL D & E

0807

TOOLS

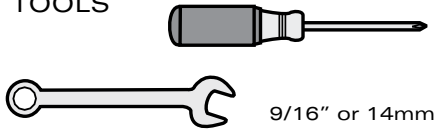

AXLE & SPROCKET REPLACEMENT - MODEL D & E

7. Note: For Model D proceed to step **13**.
For Model E proceed to step 8.



Model E only.

Remove 2 screws



8.

Model E only.


Remove

Loosen only.



9.

Model E only.

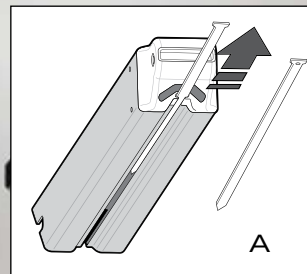

10.

Model E only.

Remove
5 screws



11.



12.



13.




14.

AXLE & SPROCKET REPLACEMENT - MODEL D & E



Remove old axle and replace with new axle.

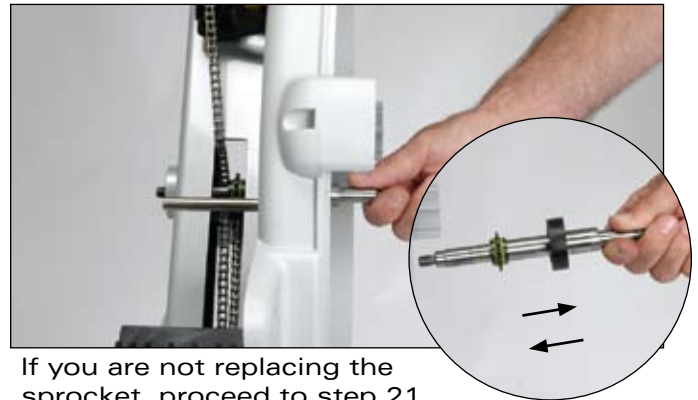

If you are not replacing the sprocket, proceed to step 21.

17.



For replacing sprocket only,
follow steps 19 & 20.



Remove old sprocket
and replace with new
sprocket.

19.



AXLE & SPROCKET REPLACEMENT – MODEL D & E

To reassemble Model D follow steps 23-36, omitting steps 27-31.

To reassemble Model E follow steps 23-36.

23.



24.



25.



26.




27.



28.



29.

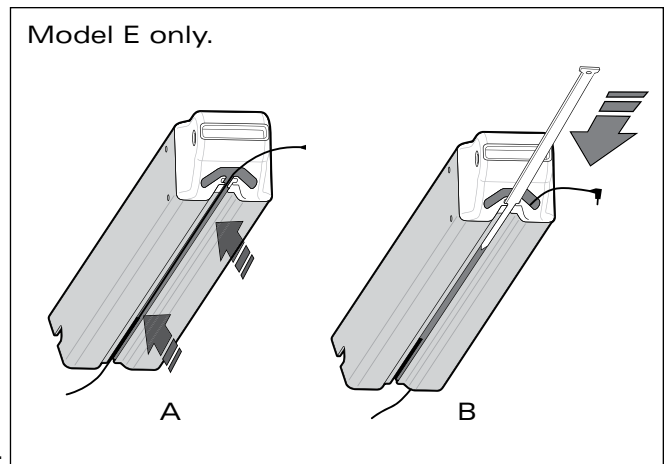

AXLE & SPROCKET REPLACEMENT - MODEL D & E

