

**Error Codes**

When an error has occurred, "ERROR #" will appear on the text display alternating with the message "OUT OF ORDER."

**NOTE:** Log number will show in the Incline Display as L-01 through L-20.

Press **CLEAR** button and hold to clear all errors in log. The display reads "NO ERRORS" when log is empty.

Press enter to exit out.

**NOTE:** See contact information in **Chapter 5 – Customer Service** for all maintenance and service activities.

**Incline and low battery errors are as follows:**

<b>Error Number</b>	<b>Cause</b>	<b>Display</b>	<b>Reset/Remedy</b>
24: Incline moving too slowly	Incline is commanded to move, yet the change in feedback is slower than the minimum allowed.	None, stored error only	<ul style="list-style-type: none"> <li>• Inspect and lubricate the lead screw.</li> <li>• Re-calibrate the incline.</li> <li>• Measure the incline potentiometer output. The potentiometer could be 'bad'.</li> <li>• Replace the battery.</li> </ul>
25: Incline movement feedback stopped	Incline is commanded to move yet the feedback indicates the value is not changing or ceases to change as expected.	Dashes shown in incline window.	Display attempts to re-calibrate incline position on entry to <i>Dormant Mode</i> .
26: Incline disabled	Incline feedback problems could not be remedied by re-calibrating after an Error 25.	Dashes shown in incline window. Incline is disabled.	Contact service technician.
27: Low Battery	Battery voltage is reported to be below the limit of 10.7v DC and the controller has issued the low battery warning.	Dashes shown in incline window. Incline is disabled.	Further use will re-charge the battery and the error condition will be cleared automatically.