 


OWNER'S MANUAL



CMJ-OPT-01 CROSS-OVER OPTION

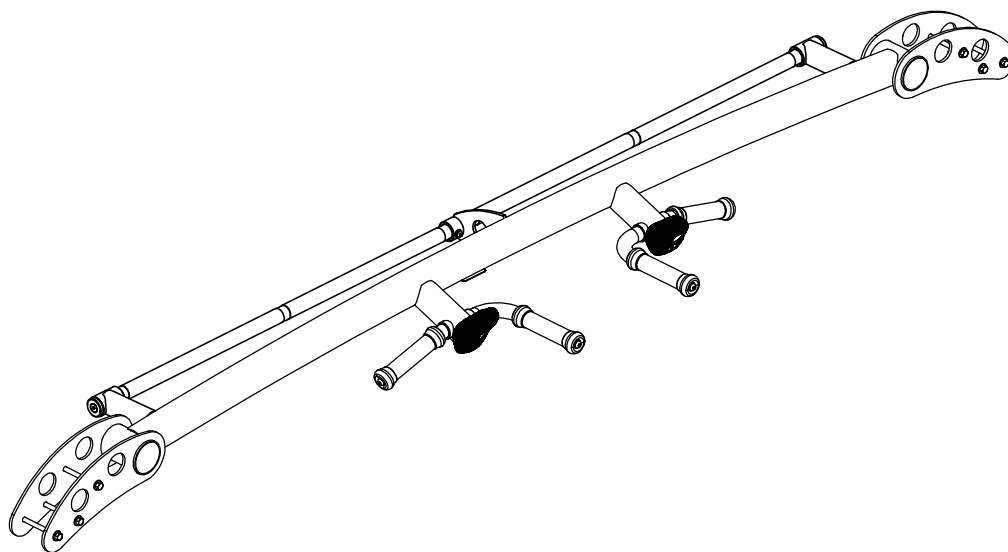

****WARNING!****
TO PREVENT POSSIBLE TIPPING, BOLT THIS UNIT TO THE EXERCISE FLOOR. FAILURE TO DO SO MAY RESULT IN SERIOUS INJURY OR DEATH.

Note: Both Serial Number and Model Number are Required when Ordering Parts

RECORD SERIAL NUMBER HERE

MACHINE CODE

B08

Customer Service

(800) 548-5438

(858) 578-7676

Fax

(858) 578-9558



www.facebook.com/hoistfitness

OWNER'S MANUAL

CONTENTS

INSTRUCTIONS	02
FRAME ASSEMBLY	03
PRE-ASSEMBLY.....	07
DECAL PLACEMENT.....	08
DECAL REFERENCE.....	09
PART LIST.....	10
ABBREVIATIONS.....	11
BOLT SIZING CHART.....	12
WASHER SIZING CHART.....	14
MAINTENANCE SCHEDULE.....	16
GENERAL MAINTENANCE INFORMATION.....	17
LIMITED WARRANTY.....	18

OWNER'S MANUAL

INSTRUCTIONS

Before beginning assembly please take the time to read instructions thoroughly. Please use the various lists in this manual to make sure that all parts have been included in your shipment. When ordering, use part number and description from the lists. Use only HOIST replacement parts when servicing. Failure to do so will void your warranty and could result in personal injury.

HOIST equipment is designed to provide the smoothest, most effective exercise motion possible. After assembly, you should check all functions to ensure correct operation. If you experience problems, first recheck the assembly instructions to locate any possible errors made during assembly. If you are unable to correct the problem, call your authorized HOIST dealer. Be sure to have your serial number and this manual when calling. When all parts have been accounted for, continue on.

TOOLS REQUIRED

Ratchet Wrench

1/2", 9/16" and 3/4" Sockets

Adjustable Wrench

Rubber Mallet

Tape Measure

 
Level

Hex Key Wrench Set

Two People

OWNER'S MANUAL



FRAME ASSEMBLY

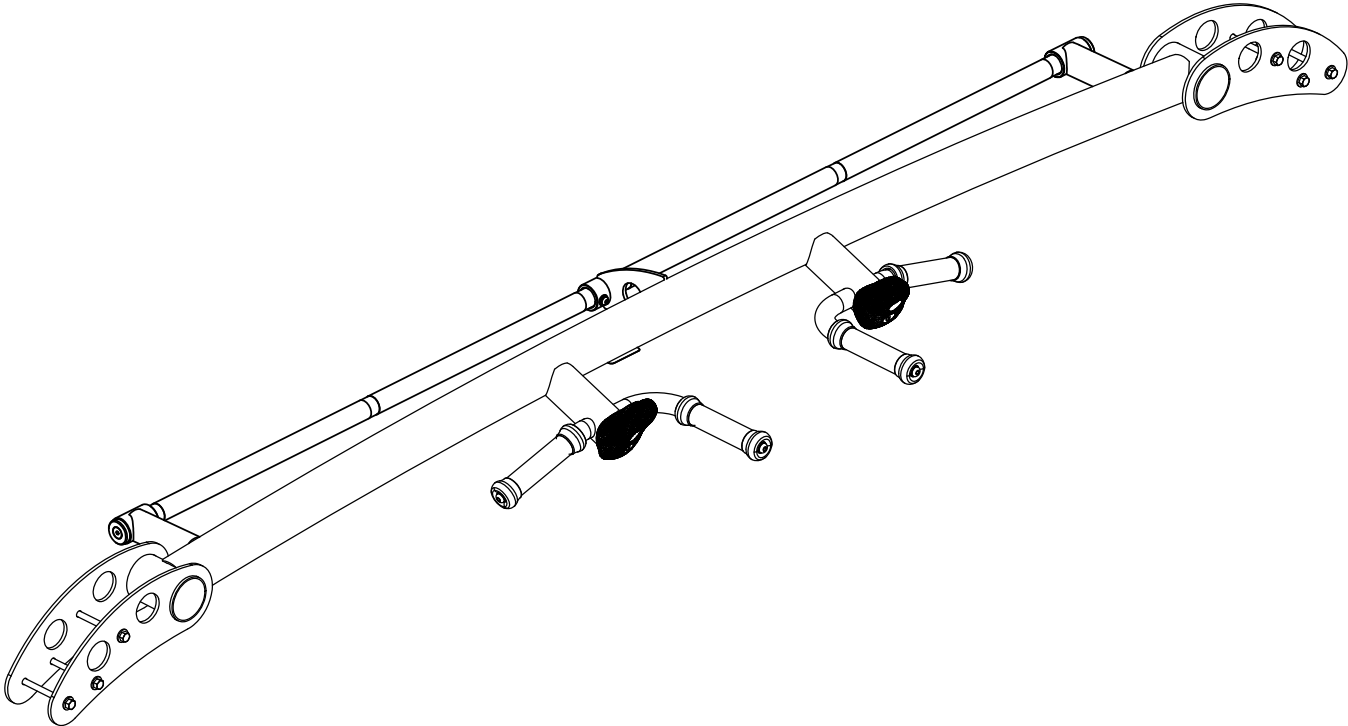


OWNER'S MANUAL

FRAME ASSEMBLY

  ARRANGE CMJ-6175 AND / OR CMS-6175 UNITS AS SHOWN BELOW FOR PROPER INSTALLATION OF CMJ-OPT-01.

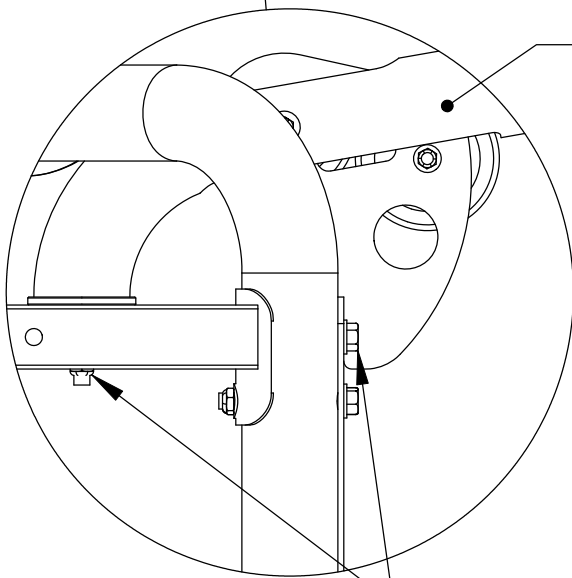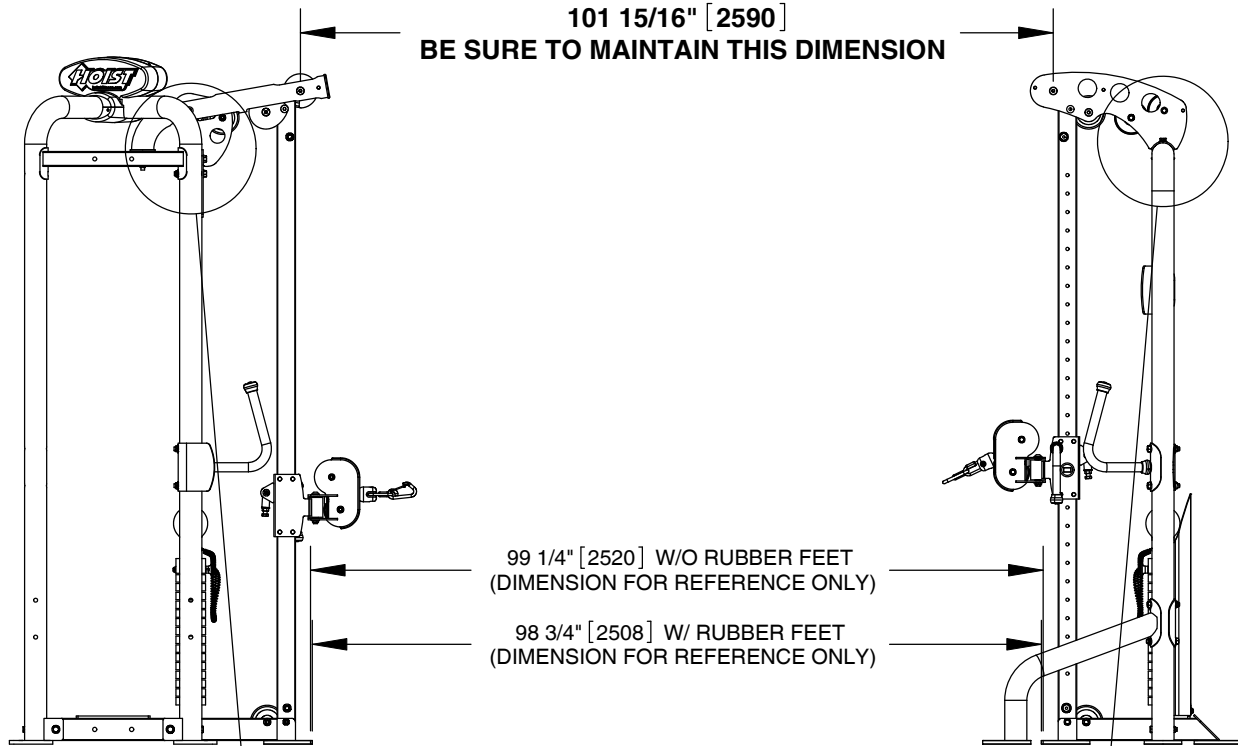

PULLEY MOUNT-4

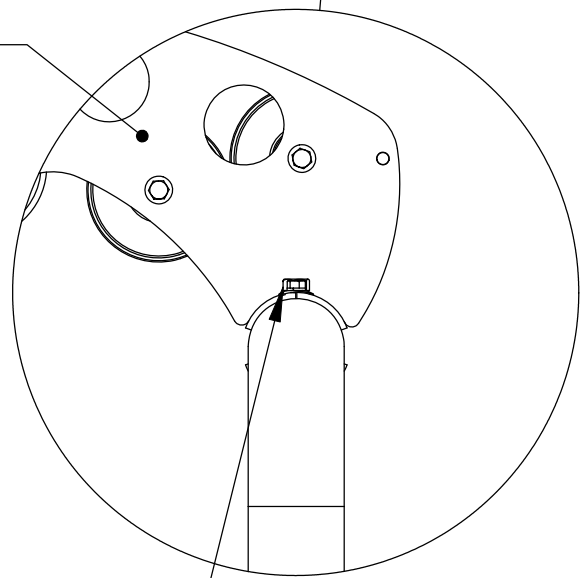 


LOOSEN FASTENING HARDWARE FOR
PULLEY MOUNT-4 ON THE CMJ-6175
AND / OR THE TOP MOUNT ON THE CMS-6175
IN ORDER TO EASE ASSEMBLY OF CMJ-OPT-01.

OWNER'S MANUAL

FRAME ASSEMBLY

 - NOTE:
- HAND TIGHTEN HARDWARE.
 - * ONLY USE HARDWARE INCLUDED WITH THIS OPTION. DISCARD HARDWARE SUPPLIED WITH CMS-6175.
 - REPEAT ASSEMBLY FOR OPPOSITE SIDE.
 - ONCE UNIT IS FULLY ASSEMBLED, WRENCH TIGHTEN ALL PREVIOUSLY HAND TIGHTENED HARDWARE.

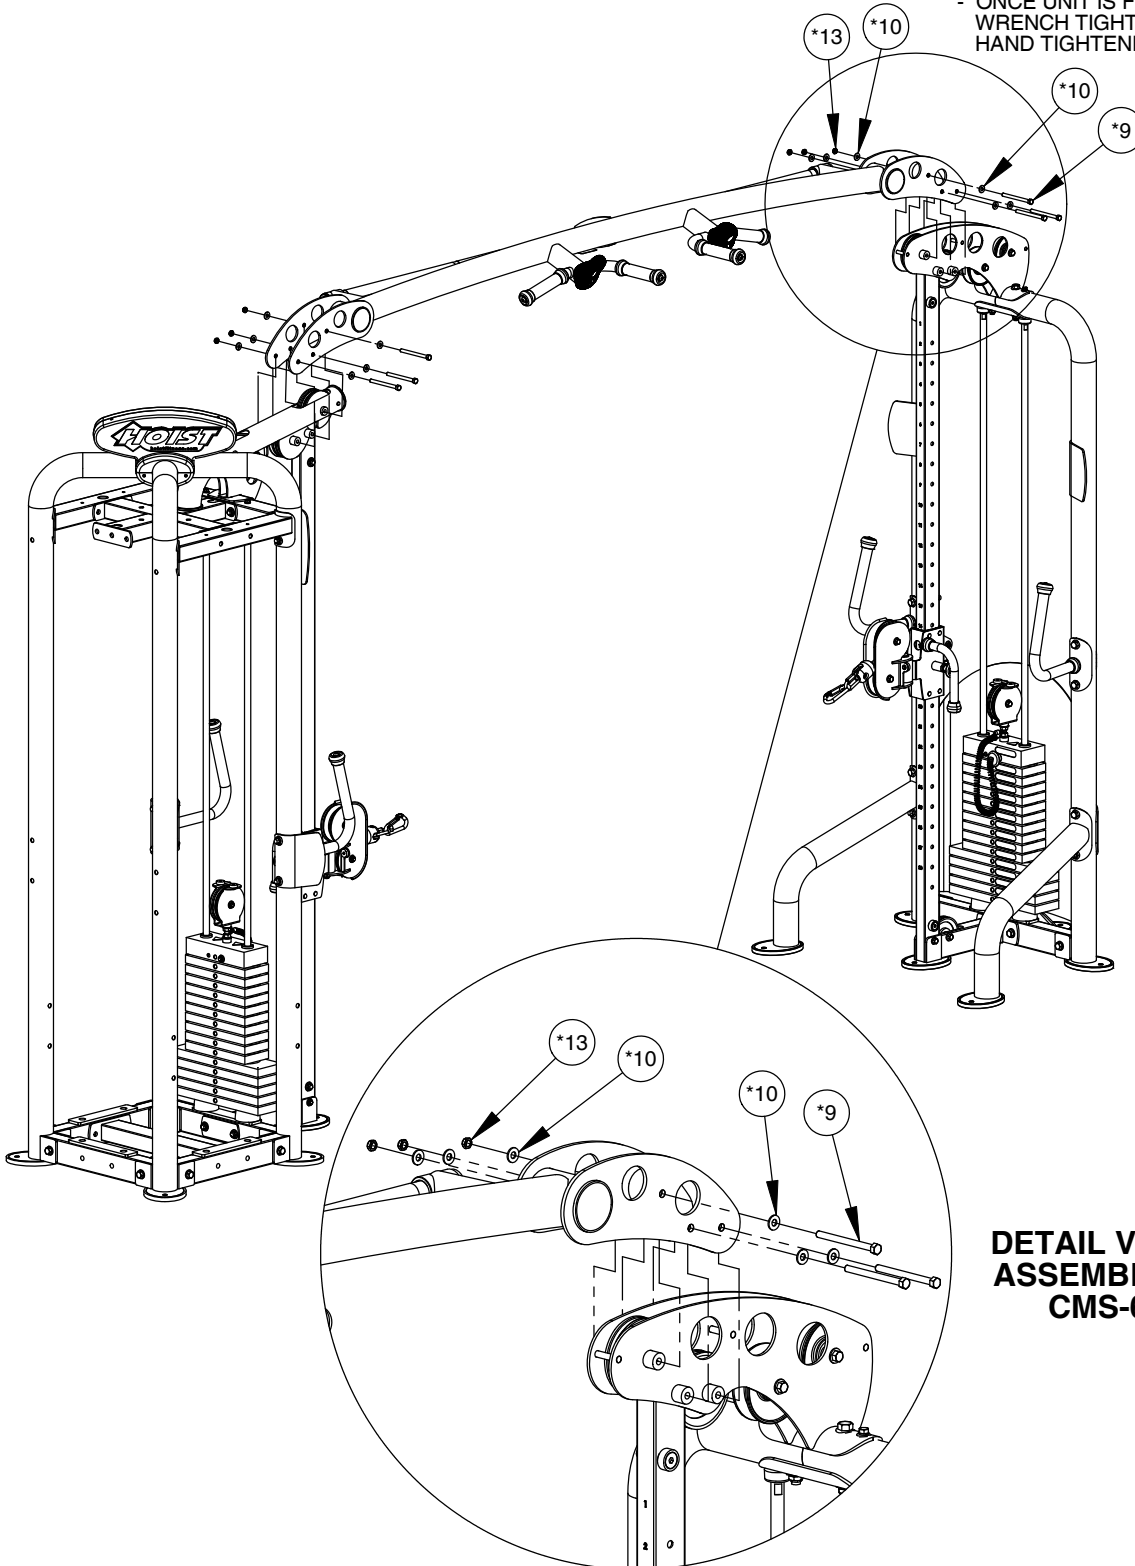


**DETAIL VIEW OF
ASSEMBLY FOR
CMS-6175**

OWNER'S MANUAL

FRAME ASSEMBLY

 - NOTE:
- HAND TIGHTEN HARDWARE.
 - * ONLY USE HARDWARE INCLUDED WITH THIS OPTION. DISCARD HARDWARE SUPPLIED WITH CMJ-6175.
 - REPEAT ASSEMBLY FOR OPPOSITE SIDE.
 - ONCE UNIT IS ASSEMBLED, WRENCH TIGHTEN ALL PREVIOUSLY HAND TIGHTENED HARDWARE.

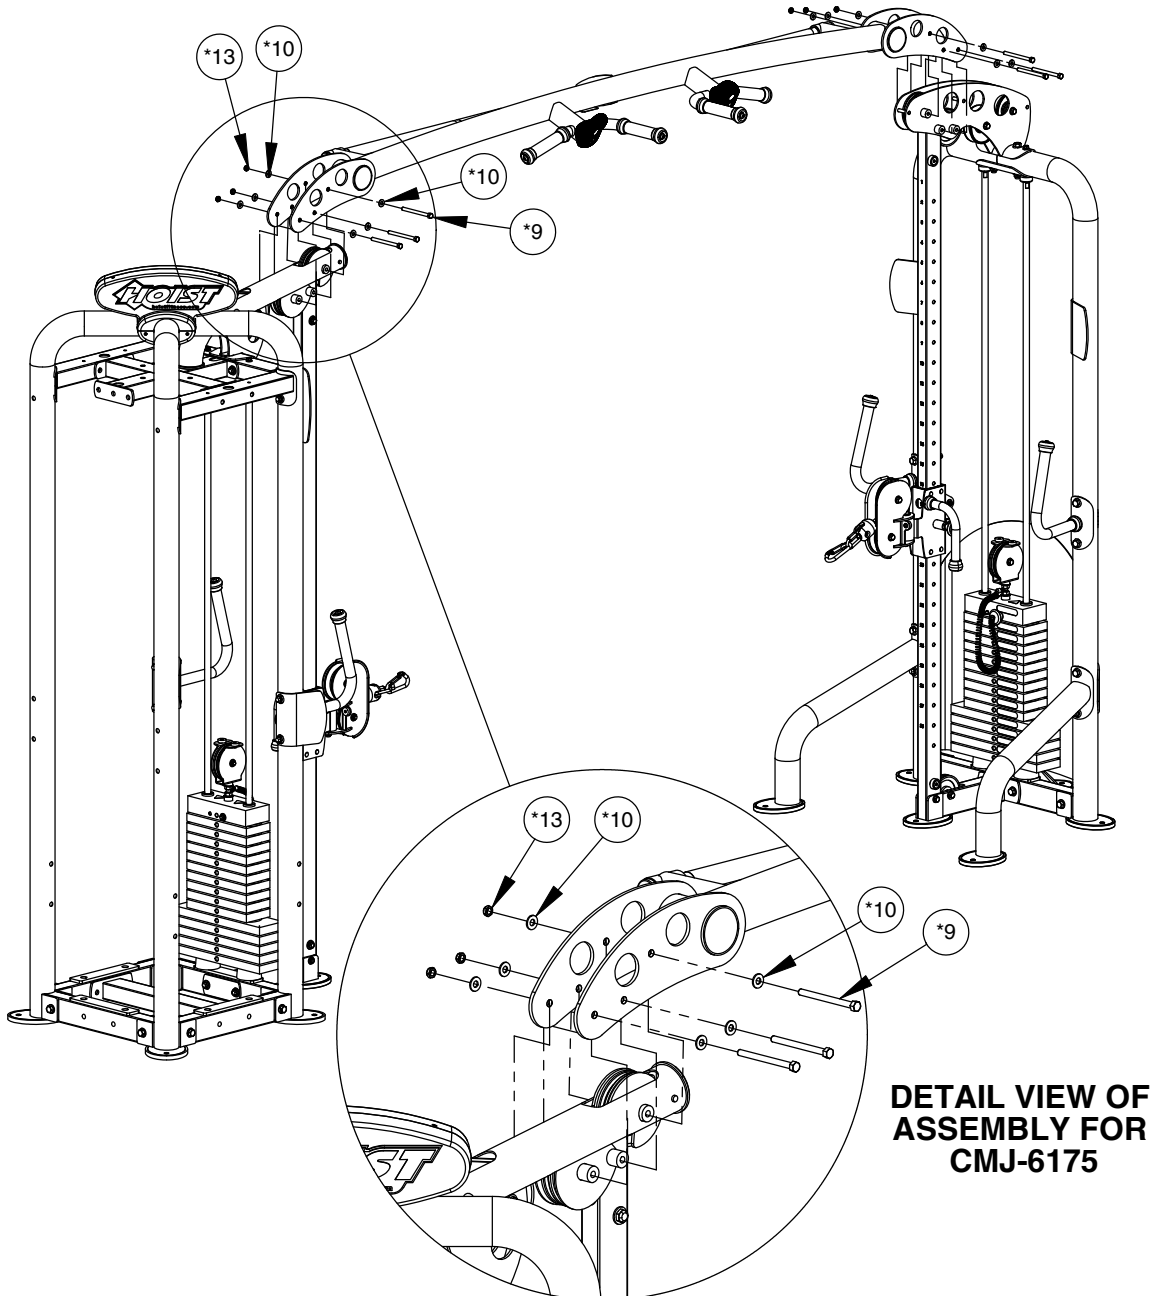


DETAIL VIEW OF
ASSEMBLY FOR
CMJ-6175

IMPORTANT

NOW THAT THE CMJ-OPT-01 IS COMPLETELY ASSEMBLED TAKE TIME TO ASSURE THAT YOUR UNIT IS ASSEMBLED SQUARE AND PERPENDICULAR. IF NOT, IT WILL BE NECESSARY TO LOOSEN SOME FRAME HARDWARE TO RE-ALIGN THE FRAME AND RETIGHTEN BOLTS.


OWNER'S MANUAL

 PRE-ASSEMBLY

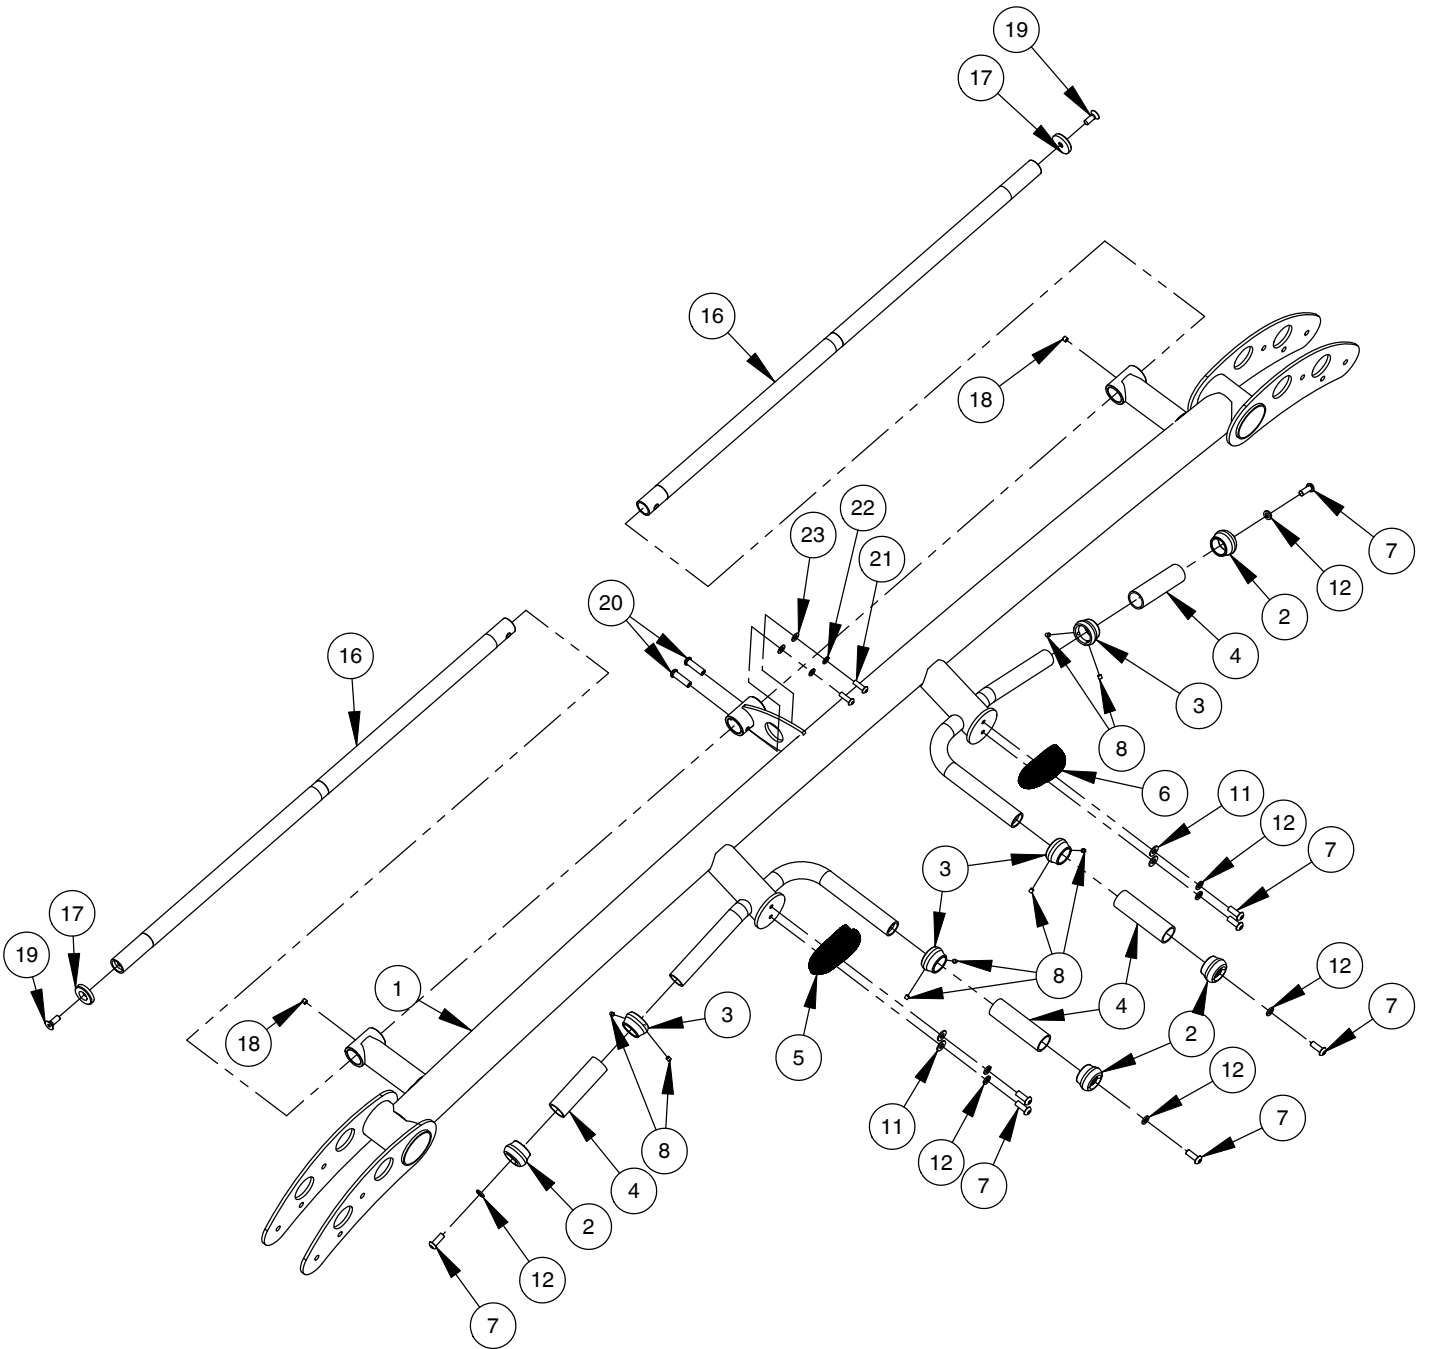

OWNER'S MANUAL

 DECAL PLACEMENT

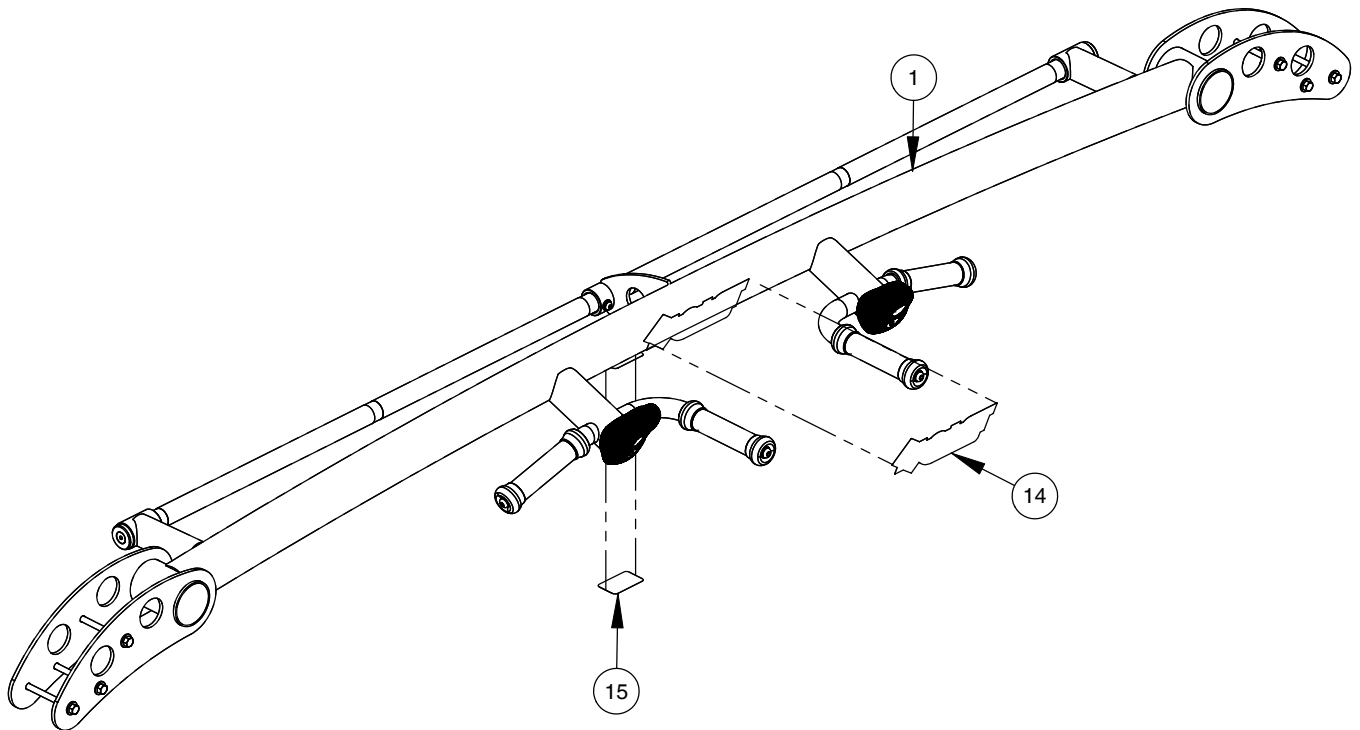

OWNER'S MANUAL

DECAL REFERENCE



021-0003221



SERIAL # DECAL

OWNER'S MANUAL

PART LIST

NOTE: SOME OF THESE PARTS MAY COME PRE-INSTALLED

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	026-01x5495	CROSSOVER BOOM	1
2	026-01M0932	ALUMINIUM CAP: Ø1.25" ID	4
3	026-01M0933	ALUMINUM RING: Ø1.25" ID	4
4	026-01PL0235-32	GRIP OPEN ENDED Ø 1.188" X 4.75"	4
5	026-01PL2444	CLIMB HOLD, LEFT	1
6	026-01PL2445	CLIMB HOLD, RIGHT	1
7	011-0401005	3/8"-16UNC X 1.00" BHCS (SS)	8
8	011-0411001	SET SCREW: 1/4"-28 X .25" LG. (SS)	8
9	011-0407031	3/8"-16UNC X 4.50" HHB (WZ)	6
10	013-0402007	3/8" X 22mm FLAT WASHER (WZ)	12
11	013-0402010	3/8" X 22mm FLAT WASHER (SS)	4
12	013-0402011	3/8" SPLIT LOCK WASHER (SS)	8
13	012-0104008	3/8"-16 UNC THIN NYLOCK NUT (WZ)	6
14	021-0003221	DECAL HOIST 2.50" X 9.13"	1
15	SERIAL # DECAL	DECAL HOIST SERIAL # 1.63" X 2.63"	1
16	026-01X5580	PULL UP BAR	2
17	026-01M0239	ALUMINUM FLATHEAD CAP Ø 1.63" X .31" LG.	2
18	011-0311003	SET SCREW: 5/16-18 X .25" LG.	2
19	011-0002042	3/8"-16UNC X 1.00" FHCS (WZ)	2
20	026-01M2693	BOSS, THREADED, 1/4 SOCKET HEAD : Ø .438" O.D. X 1.463" LG.	2
21	011-0401010	5/16"-18UNC X 1.00" BHCS (SS)	2
22	013-0402014	5/16" SPLIT LOCK WASHER (SS)	2
23	013-0402010	5/16" SAE FLAT WASHER (SS)	2

OWNER'S MANUAL

ABBREVIATIONS

BZ = Black Zinc

WZ = White Zinc

HHB = Hex Head Bolt

FHCS = Flat Head Cap Screw

BHCS = Button Head Cap Screw

 
 
SHCS = Socket Head Cap Screw

SHSS = Socket Head Shoulder Screw



OWNER'S MANUAL

BOLT SIZING CHART



5/16" HHB

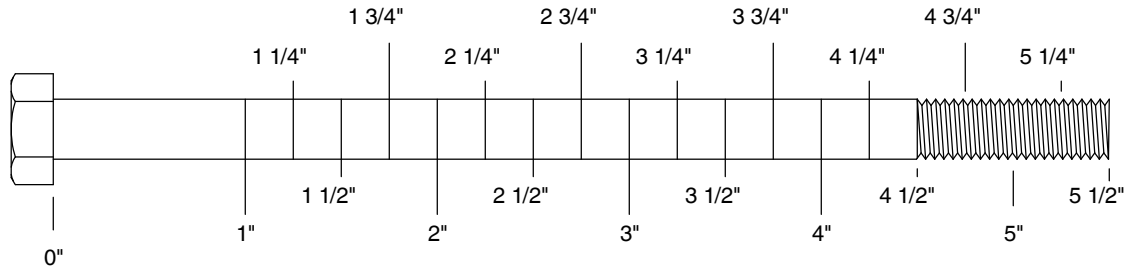



3/8" HHB

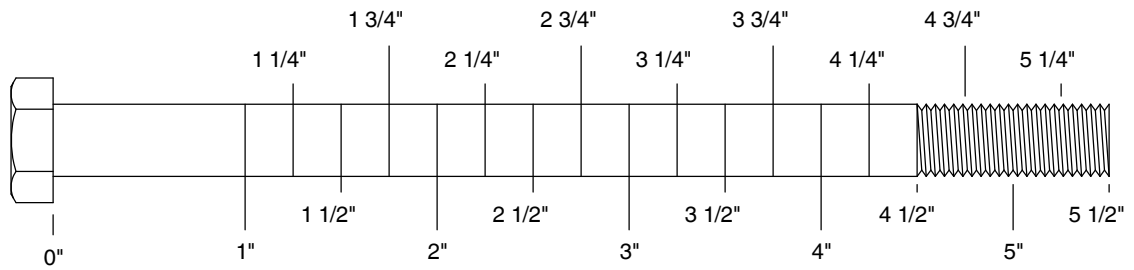  

1/2" HHB




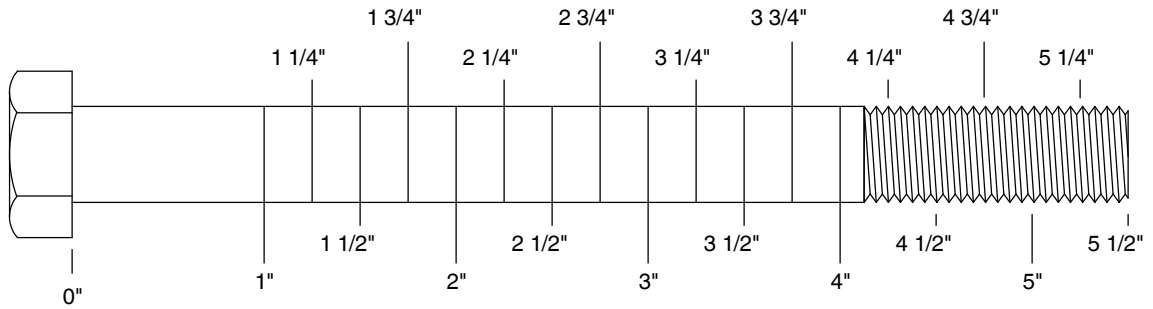 
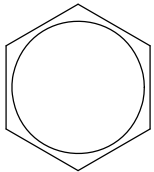 


1/2" SHSS

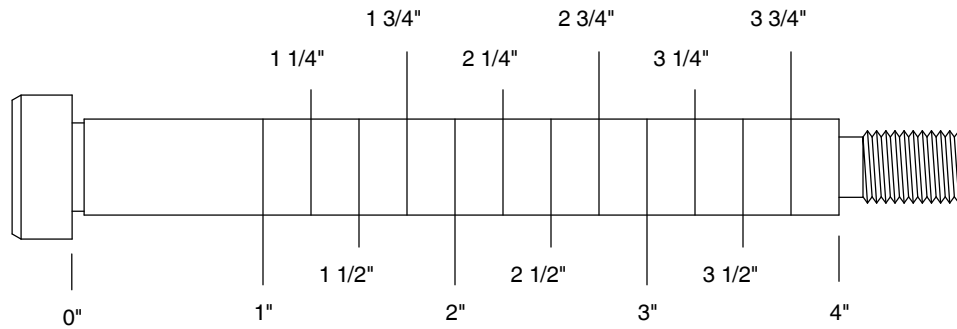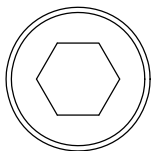  

OWNER'S MANUAL

     
BOLT SIZING CHART (CONTINUED)

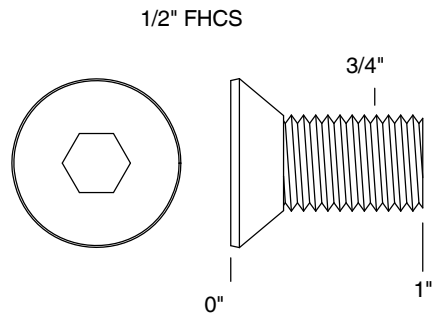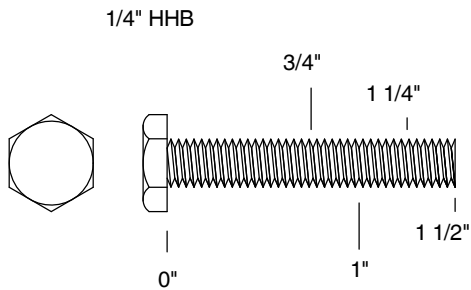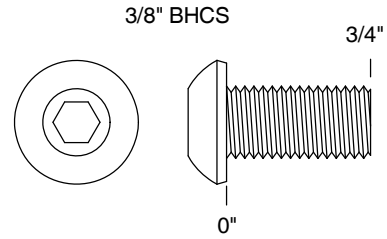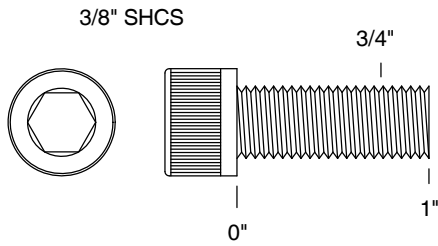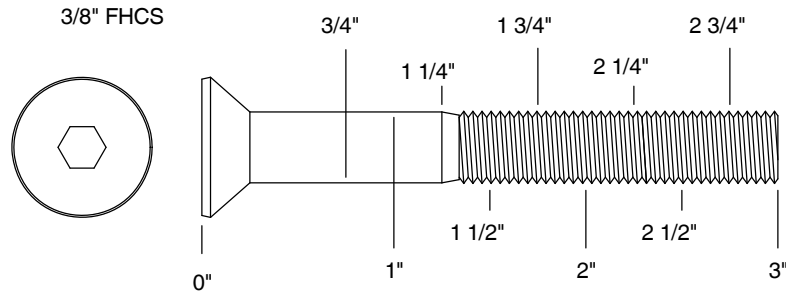


OWNER'S MANUAL

WASHER SIZING CHART

 
013-0002003
1/4"
FLAT WASHER
SMALL, SAE, 13mm



 
013-0102004
5/16"
FLAT WASHER
LARGE, USS, 22mm

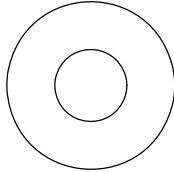

 
013-0002004
3/8"
FLAT WASHER
SMALL, SAE, 21mm

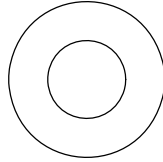

 
013-0402005
3/8"
FLAT WASHER
LARGE, USS, 25mm

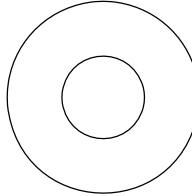

 
013-0102003
1/2"
FLAT WASHER
SMALL, SAE, 27mm

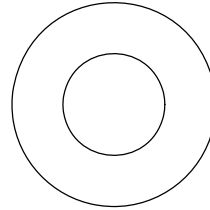

 
013-0102026
1/2"
FLAT WASHER
LARGE, USS, 34mm

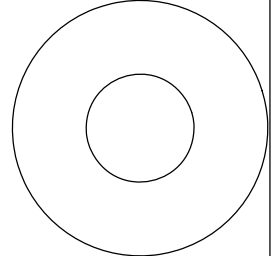

013-0102028
3/8"
CURVED WASHER

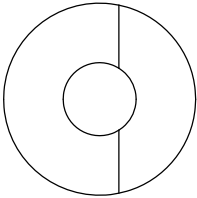 


013-0402007
3/8"
FLAT WASHER
22mm O.D.

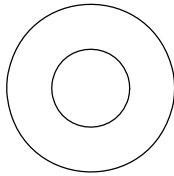 


013-0102019
1/4"
LOCK WASHER



 
013-0102020
3/8"
LOCK WASHER

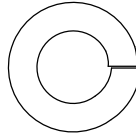


013-0102018
1/2"
LOCK WASHER

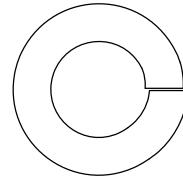 


014-0018001
1/2" LONG
SPACER

 


026-01M0238
2" ALUMINUM
FLATHEAD CAP

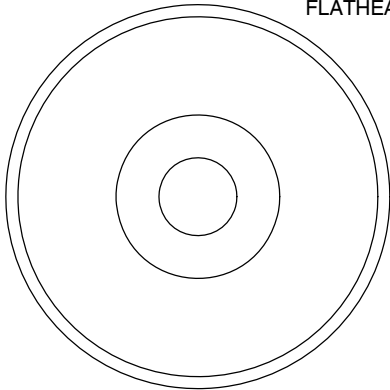 


016-0009003
1" SHIM WASHER

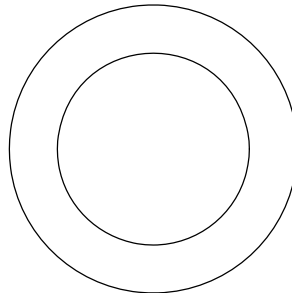 


013-0003002
3/8" FENDER WASHER

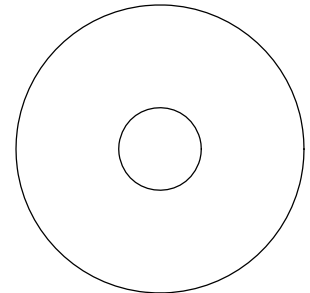 


013-0003004
1 1/16"
FENDER WASHER

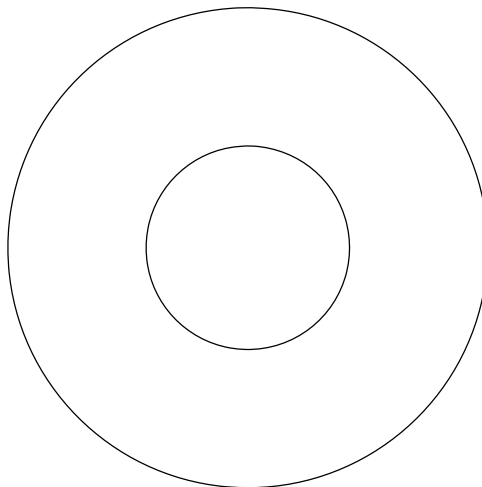 

 026-01PL151
PLASTIC 1 1/16"
FENDER WASHER

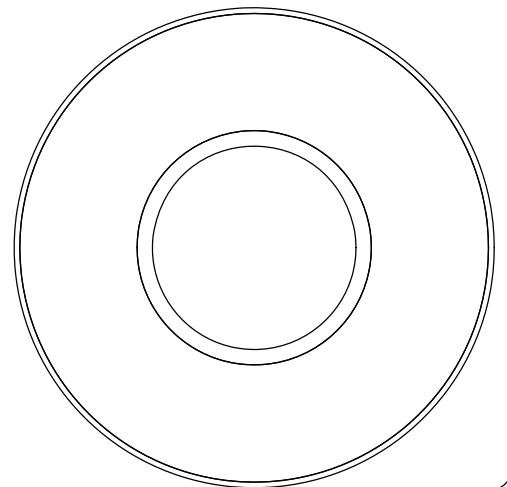


014-0018002
1" LONG
SPACER

 


OWNER'S MANUAL

WASHER SIZING CHART (CONTINUED)

 
026-01M0211
1/4" LONG
FLANGED SPACER

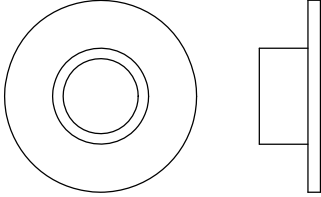


026-01M0198
1/2" LONG
FLANGED SPACER

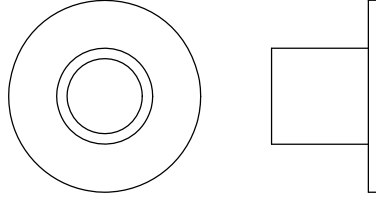 

 
026-01M0760
1/2" LONG HEAVY
FLANGED SPACER

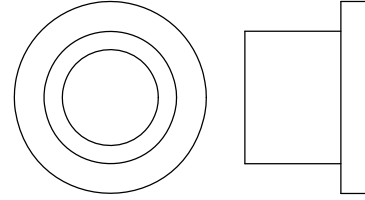

 
026-01M211T
1/4" LONG HEAVY
FLANGED SPACER

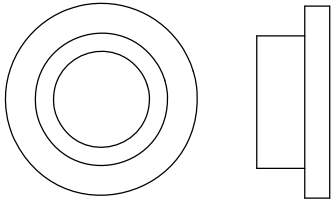

 
026-01M0532
11/16" LONG HEAVY
FLANGED SPACER

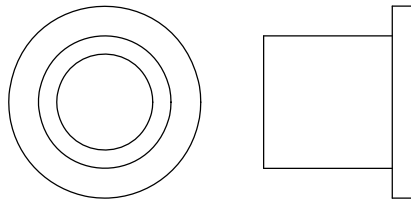

 
026-01M0551
1" LONG HEAVY
FLANGED SPACER

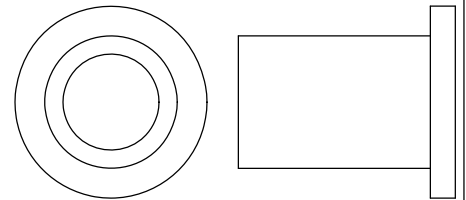

 
026-01M0788
.81" LONG HEAVY
FLANGED SPACER

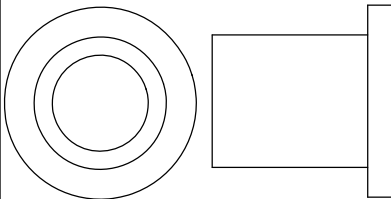

 
026-01M0780
.65" LONG HEAVY
FLANGED SPACER

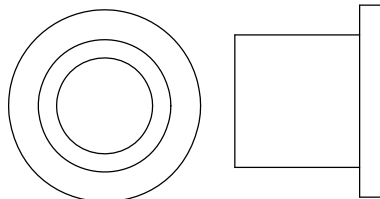

 
026-01M0761
1 11/16" LONG HEAVY
FLANGED SPACER

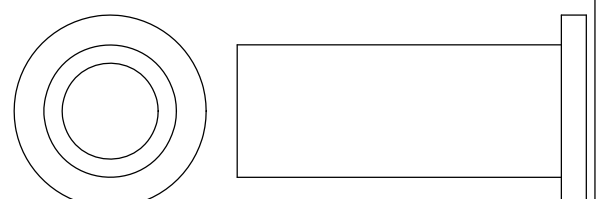

 
026-01M0789
.44" LONG HEAVY
FLANGED SPACER

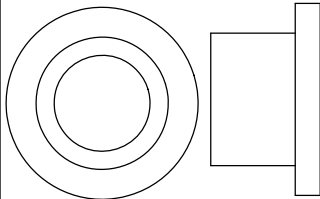

 
026-01M0762
1 1/2" LONG HEAVY
FLANGED SPACER

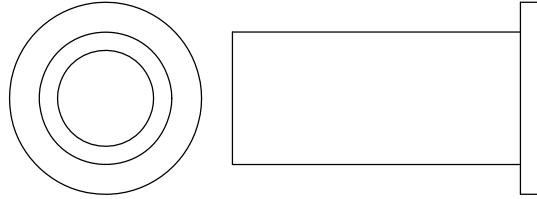

 
026-01M0768
1 1/4" LONG HEAVY
FLANGED SPACER

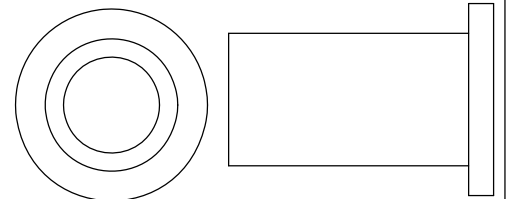


026-01M0600
.625" LONG
FLANGED SPACER

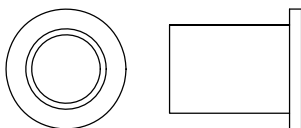 

 026-01M0240
1 3/8" ALUMINUM
FLATHEAD CAP

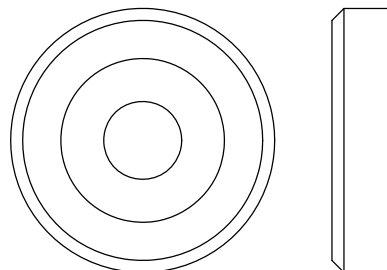

 026-01M0239
1 5/8" ALUMINUM
FLATHEAD CAP

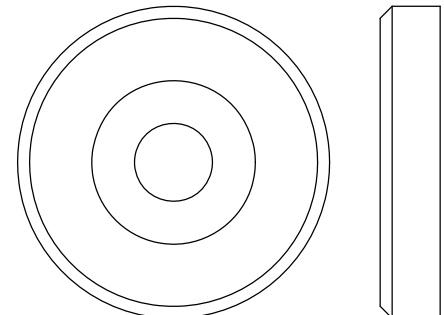

OWNER'S MANUAL

MAINTENANCE SCHEDULE

ROUTINE	COMMERCIAL MAINTENANCE	HOME MAINTENANCE	LATEST DATE ENTRY												
Inspect; Links, Pull Pins, Snap Locks, Swivels, Weight Stack Pins	DAILY	WEEKLY													
Clean; Upholstery	DAILY	WEEKLY													
Inspect; Cables or Belts and their tension	DAILY	WEEKLY													
Inspect; Accessory Bars, and Handles	WEEKLY	3 MONTHS													
Inspect; All Decals	WEEKLY	3 MONTHS													
Inspect; All Nuts and Bolts, Tighten if needed	WEEKLY	3 MONTHS													
Inspect; Anti-Skid Surface	WEEKLY	3 MONTHS													
Clean & Lubricate; Guide Rods with a Teflon (PTFE) based lubricant (Superlube)	MONTHLY	3 MONTHS													
Lubricate; Seat Sleeves, Turcite Bushings, Linear Bearing	MONTHLY	3 MONTHS													
Clean and Wax; All Glossy Finishes	6 MONTHS	YEARLY													
Repack with Grease; Linear Bearings	6 MONTHS	YEARLY													
Replace; Cables, Belts and Connecting Parts	YEARLY	3 YEARS													

*Your equipment comes with a commercial maintenance decal.
For personal, in home use, please follow the home maintenance schedule listed above.*

OWNER'S MANUAL

HOIST FITNESS SYSTEMS GENERAL MAINTENANCE INFORMATION

Links, Pull-Pins, Snap Hooks, Swivels, Weight Stack Pins:

- *Check all pieces for signs of visible wear or damage.
- *Check springs in snap hooks and pull-pins for proper tension and alignment.
- *If the spring sticks or has lost its rigidity, replace it immediately.

Upholstery:

- *To ensure prolonged upholstery life and proper hygiene, all upholstered pads should be wiped down with a damp cloth after every workout.
- *Periodically take the time to use a mild soap or an approved vinyl upholstery cleaner to deter the onset of cracking or drying. Avoid using any abrasive cleaners or cleaners not intended for use on vinyl.
- *Replace ripped or worn upholstery immediately.
- *Keep sharp or pointed objects clear of all upholstery.

Decals:

- *Inspect and familiarize yourself with any safety warnings or other user information posted on each decal.

Nuts and Bolts:

- *Inspect all nuts and bolts for any loosening and tighten if needed.
- *Go through a re-tightening sequence periodically to ensure that all hardware is tensioned proper.

Anti-Skid Surfaces:

- *These surfaces are designed to supply secure footing and need to be replaced if they appear worn or become slippery.

Belts and Cables:

- *Hoist uses only high quality belt, and mil-spec cables.
- *Visually inspect the belts and cables for fraying, cracking, peeling or discoloration.
- *While the machine is not in use, carefully run your fingers along the belt or cable to feel for thinning or bulging areas.
- *Replace belts and cables immediately at the first signs of damage or wear. Do not use equipment until belts or cables have been replaced.

Belt and Cable Tension:

- *Referring to the Owners Manual, when belts or cables are used check all bolts attachments to be sure they are properly attached.
- *Check slack in cables and re-adjust cable tension if needed.

Seat Sleeves, Guide Rods:

- *Wipe down adjusting tubes with a dust free rag before applying lubricant.
- *Lubricate seat sleeves and Guide Rods with a Silicon or Teflon based lubricant spray.

Linear Bearings:

- *Referring to the Owners Manual carefully disassemble the bearing from its housing and place a finger full of light grease (lithium, super lube, etc.) into the inside of the bearing. Using your finger, press the grease into the ball-bearings and their tracks. repeat until the ball-bearing tracks are full of grease. Insert the shaft back into the bearing and wipe off excess grease.

PLEASE KEEP THIS FOR YOUR RECORDS

OWNER'S MANUAL

HOIST FITNESS SYSTEMS LIMITED LIFETIME WARRANTY

Hoist Fitness Systems warrants this product to the **original purchaser** to be free from defects in workmanship and/or materials under normal use or service. If at any time a component part is defective, Hoist Fitness Systems shall repair or replace it (at Hoist Fitness Systems option) within a reasonable period of time. This warranty does not cover costs of removal, transportation or reinstallation. This warranty shall not apply if the defect was caused by misuse, neglect or normal wear and tear.

WARRANTY CLAIMS. All claims require: Model number, Serial number, Date of installation, and any information supporting the existence of the alleged defect.

To complete Warranty Registration visit:
www.HOISTFITNESS.com
and click on the Warranty Registration link

Starting from the original date of purchase, this warranty covers the following:

COMMERCIAL USE: All malfunctions of upholstery, grips, and coatings that occur up to one year; all malfunctions of belts or cables up to one year; all malfunctions of pulleys, bearings, or bushings that occur up to three years. The frame and body components are warranted for ten years, with structural moving parts warranted for five years.

LIGHT COMMERCIAL USE: All malfunctions of upholstery, grips, and coatings that occur up to one year; all malfunctions of belts or cables up to one year; all malfunctions of pulleys, bearings, or bushings that occur up to three years. The frame and body components are warranted for ten years, with structural moving parts warranted for five years.

HOME USE: All malfunctions of grips, paint, and chrome that occur up to ten years; all malfunctions of electronic components, belts, cables, or upholstery that occur up to ten years; all malfunctions of pulleys, bearings, or bushings that occur up to ten years. The frame and all welded components are warranted for the life of the product.

PLEASE NOTE THAT NOT ALL HOIST PRODUCTS ARE MADE FOR COMMERCIAL USE. Refer to the instructions page of your owner's manual or consult with you fitness product dealer to establish if a product is made for commercial use or not. Using a non-commercial product in a commercial setting can result in serious injury or death! Hoist Fitness Systems sole responsibility shall be to repair or replace the component within the terms stated above. Hoist Fitness Systems shall not be liable for any loss or damage of any kind including any incidental or consequential damages resulting, directly or indirectly from any warranty expressed or implied or any other failure of this product.

LIGHT COMMERCIAL USE: Our Light Commercial warranty applies to facilities that **DO NOT** charge monthly membership dues and where the equipment would be used by **no more than 50** people per day. Examples of Light Commercial facilities include hotels, apartment complexes, personal training studios, fire stations, police stations, etc., that meet the criteria stated above.

WHAT IS NOT COVERED BY THIS WARRANTY: Hoist's sole obligation under this warranty is limited to either repair or replacement of parts, subject to the additions below. This warranty neither assumes nor authorizes any person to assume obligations other than expressly covered by this warranty.

NO CONSEQUENTIAL DAMAGES: Hoist is not responsible for economic loss; profit loss; or special, indirect, or consequential damages.

WARRANTY IS NOT TRANSFERABLE: This warranty is not assignable and applies only in favor of the original purchaser/user to whom delivered. Any such assignment or transfer shall void the warranties herein made and shall void all warranties, expressed, implied or statutory, except the one (1) and five (5) year warranties described above. These warranties are exclusive and in lieu of all other warranties, including implied warranty and merchantability or fitness for a particular purpose. There are no warranties which extend beyond the description on the face hereof.

TRANSPORTATION COSTS: Hoist will accept parts covered under this warranty freight collect, provided that shipment has received prior approval. Hoist is not responsible for any other transportation costs but will ship freight collect parts either repaired or replaced under these warranties.

Hoist Fitness Systems
11900 Community Rd.
Poway, CA. 92064
(800)548-5438

PLEASE KEEP THIS FOR YOUR RECORDS