

Life Fitness Models X9i, 8500, 9100, and 9500HR Cross-Trainers
How To...Replace The Reed Switch - 8500, 9100, and 9500HR

Tools required: Phillips Screwdriver

1. The reed switch is located on the back side of the PCB bracket (CT85/91/95 only).
2. Remove two screws from the bracket on the PCB side.
3. Disconnect the reed switch connector from the PCB and remove the reed switch assembly.

