



# DISCOVER TV BRACKET AND COMPONENTS

PARTS MANUAL  
09.10.13

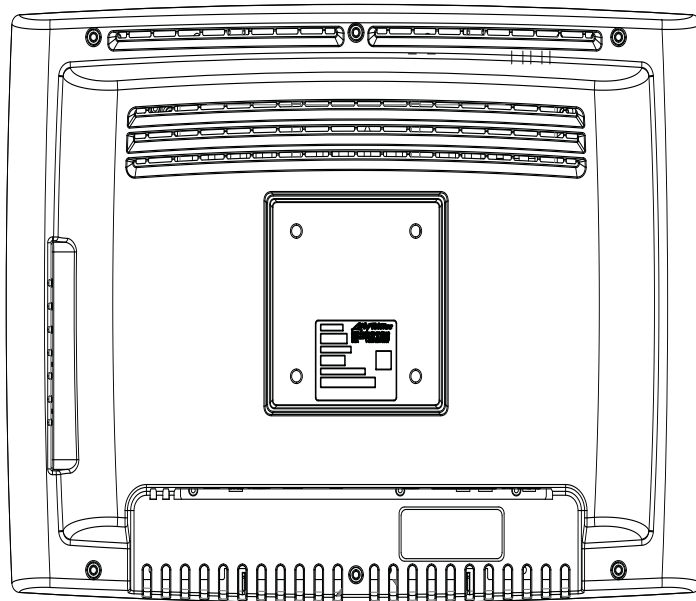

# TV Bracket and Components

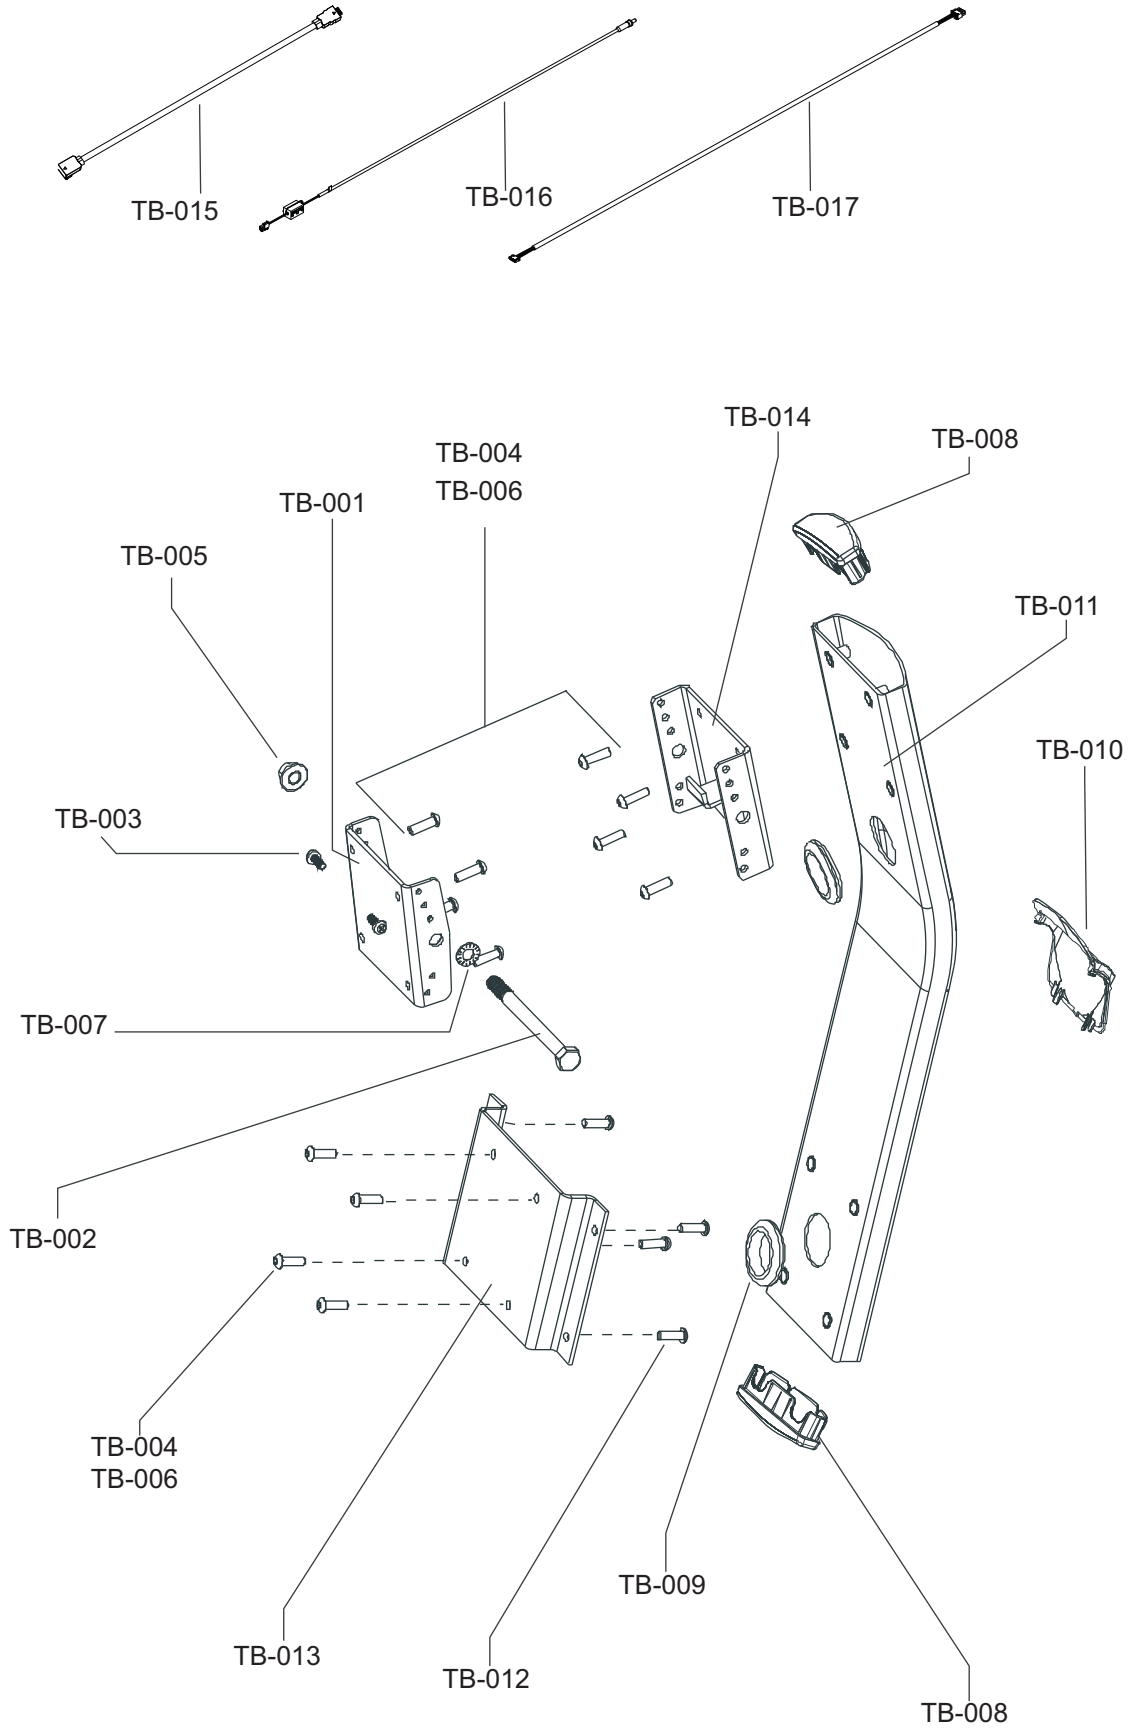

# TV Bracket and Components

---

## Parts List

Item	Version	Part Number	Description
TB-001	-01	AK71-00009-0000	WELDMENT: LCD HINGE; PURCH
	-02	AK71-00009-2400	WELDMENT: LCD HINGE; PURCH
TB-002	-01/-02	0017-00101-1956	LCD HINGE BOLT
TB-003	-01/-02	0017-00101-1972	HINGE ANGLE ADJUSTMENT SCREW
TB-004	-01/-02	0017-00101-2003	MOUNTING SCREW
TB-005	-01/-02	0017-00103-0334	HINGE BOLT NUT
TB-006	-01/-02	0017-00104-0488	WASHER ( <i>not shown</i> )
TB-007	-01/-02	0017-00104-0470	HINGE BOLT WASHER
TB-008	-01	0K71-01004-0000	CAP END
	-02	0K71-01004-2400	CAP END
TB-009	-01/-02	0K71-01005-0000	GROMMET: LCD ACCESS
TB-010	-01	0K71-01024-0000	COVER: LCD ACCESS
	-02	0K71-01024-2400	COVER: LCD ACCESS
TB-011	-01	AK71-00043-0000	ASSY: EXTRUSION W/DECAL
	-02	AK71-00043-2400	ASSY: EXTRUSION W/DECAL
TB-012	-01/-02	0017-00101-2022	TV MOUNTING BRACKET SCREW
TB-013	-01	0K71-01007-0000	BRKT: MOUNT LCD
	-02	0K71-01007-2400	BRKT: MOUNT LCD
TB-014	-01	0K71-01009-0000	PLATE: HINGE LCD MOUNT
	-02	0K71-01009-2400	PLATE: HINGE LCD MOUNT
TB-015	-01/-02	AK92-00023-0000	CABLE ASSY, CARRIER HDMI OUT TO ATTACHABLE TV
TB-016	-01/-02	AK92-00024-0000	CABLE ASSY, CARRIER TV TO ATTACHABLE TV
TB-017	-01/-02	AK92-00070-0000	CABLE ASSY, ATTACHABLE TV POWER