

Life Fitness Model 97Ti, 97Te, 95Ti, 95Te and 93T Arctic Silver Treadmills
TROUBLESHOOTING GUIDE

SYMPTOM	PROBABLE CAUSE	CORRECTIVE ACTION
No audio from FM radio	Coaxial cable is unplugged.	Reconnect coaxial cable.
	Volume control set too low.	Adjust volume control.
	Faulty headphones.	Replace headphones as necessary.
	Faulty headphone jack assembly.	Replace headphone jack assembly.
	Customer not wired for FM Radio.	Notify club owner
Audio static from FM radio	Weak signal, bad interface board.	Replace interface board or contact cable provider.
"Snowy" appearance when viewing secure video	Coaxial cable is unplugged.	Reconnect coaxial cable.
	Secure video set to improper channel.	Adjust channel assignment of secure video. (See TV/FM Radio Configuration in Section 2B)
	Weak signal, bad interface board.	Replace interface board or contact cable provider.
No Channel Select	FM Radio stations not configured.	Input channels manually or go through automatic scan