

Life Fitness 9100 Series Heartrate and Telemetry Equipped Treadmills

How To...REMOVE AND REPLACE THE WAX CONTAINER

Tools Required: Standard screwdriver, hex key wrench set, socket and ratchet set

Step 1

Turn the power OFF at the switch and by unplugging the unit at the electrical outlet.

Step 2

Remove the STRIDING BELT (See "How To...").

Step 3

Remove the DECK (See "How To...").

Step 4

With the REAR FRAME ASSEMBLY flat on the floor, crimp the HOSE near the WAX CONTAINER ASSEMBLY with a clamp or visegrips to avoid spillage.

Step 5

With your fingers, remove the HOSE CLAMP from the BARBED-T-FITTING on the left side of the FRAME and disconnect the WAX CONTAINER HOSE. Route the HOSE through the frame mounted HOSE GUIDES.

Step 6

Remove the four SCREWS and WASHERS securing the WAX CONTAINER ASSEMBLY to the FRAME and lift the entire ASSEMBLY up and away from the FRAME.

Step 7

Remove the seven SCREWS, LOCKNUTS and WASHERS from the WAX CONTAINER ASSEMBLY. Lift the worn WAX CONTAINER with attached HOSE out of the TRAY and replace it with a new WAX CONTAINER.

NOTE: BE SURE TO ROUTE THE WAX CONTAINER HOSE BENEATH THE FRAME CROSSBAR AND THROUGH THE HOSE GUIDES PRIOR TO CONNECTING THE HOSE TO THE BARBED-T-FITTING. THIS IS ALSO AN OPPORTUNE TIME TO INSPECT THE WAX SPRAY NOZZLE. PRESS THE SPRAY NOZZLE IN AND TWIST IT 1/4 TURN TO REMOVE. CLEAN WITH WARM WATER OR REPLACE THE SPRAY NOZZLE AS DEEMED NECESSARY.

Step 8

Reverse Steps 1 through 7 (excluding Step 4) to return all parts to their proper position.

Continued

Life Fitness 9100 Series Heartrate and Telemetry Equipped Treadmills
How To...REMOVE AND REPLACE THE WAX CONTAINER (Continued)
