Life Fitness 9100 Series Heart Rate and Telemetry Equipped Treadmills TROUBLESHOOTING GUIDE

Symptom: Unit Resets Randomly

Malfunction	Probable Cause	Corrective Action
Unit resets randomly	Insufficient power source.	Plug treadmill into a dedicated 120V, 20 amp circuit.
	Damaged ground prong on line cord.	Replace line cord.
	Line cord improperly seated in electrical outlet.	Inspect power connection at electrical outlet and at machine for proper contact.
	Loose connections at CPU control board and display.	Secure connections at CPU control board and display.
	Towel or magazine may be making contact with stop switch while user is running.	Move possible obstructions off display console and handlebar.
	Stop switch cover is missing.	Replace stop switch/or console.
	Stop switch is activated with very light pressure or returns very slowly after being pressed.	Replace stop switch/or console.
	Stop switch cable not making proper contact	Reseat cable from stop switch.
	Pinched display console harness	Check all display console connections.
	Open ground path	Using voltmeter, check 4 points for continuity: console pan screws, console mounting screws, handlebar screws, and handrail mounting screws to frame with respect to ground. Ground must ba a non-painted surface.
Unit resets intermittently	Display reads "Power up reset"	Verify power is a dedicated outlet. To verify, turn breaker at panel to off. Using a voltmeter, take a voltage reading at electrical outlet. With breaker off, zero volts should be detected.
		If voltage is present at electrical outlet, line is not wired for dedicated service.
		all Life Fitness Customer Support Services 7-451-0036 or 1-800-351-3737