

## ***Life Fitness 9100 Series Heartrate and Telemetry Equipped Treadmills*** **How To...REMOVE AND REPLACE THE DEBRIS BRUSH**

**Tools Required:** Short phillips screwdriver

---

### **Step 1**

Turn the power OFF at the switch and by unplugging the unit at the electrical outlet.

### **Step 2**

Carefully tilt the treadmill on its side.

**NOTE: INSPECT THE AREA BETWEEN THE STRIDING BELT FOR DEBRIS.**

### **Step 3**

Remove the two SCREWS, LOCKNUTS and WASHERS securing the DEBRIS BRUSH to the BRACKETS.

### **Step 4**

Position the new DEBRIS BRUSH between the STRIDING BELT and FRAME. Insert the SCREW through the BRACKET with the round hole first. Secure in place with a WASHER and LOCKNUT. Repeat procedure to secure the DEBRIS BRUSH to the slotted BRACKET side.

### **Step 5**

Reverse Steps 1 and 2 to return all parts to their proper positions.