SECTION III

Life Fitness 9100 Series Heartrate and Telemetry Equipped Treadmills How To...REMOVE AND REPLACE THE LIFESPRINGS

Tools Required: Hex key wrench set, socket and ratchet set

Step 1

Turn the power OFF by unplugging the unit at the wall outlet.

Step 2

Remove the DECK (See "How To...").

Step 3

Remove the two DECK CHANNELS and set them aside to be reinstalled later.

Step 4

Remove the SCREW and WASHER securing each worn LIFESPRING to the FRAME.

NOTE: APPLY LOCTITE TO THE SCREW PRIOR TO SECURING THE NEW LIFESPRING INTO POSITION TO AVOID ANY POSSIBLE LOOSENING OF THE SCREW.

Step 5

Insert the SCREW and WASHER into the hole in the new LIFESPRING. Position the LIFESPRING ASSEMBLY in place on the FRAME and secure.

Step 6

Slide the two DECK CHANNELS back into place.

Step 7

Reverse Steps 1 and 2 to return all parts to their proper positions.