

## Life Fitness 9100 Series Heartrate and Telemetry Equipped Treadmills How To...REMOVE AND REPLACE THE DISPLAY CONSOLE

**Tools Required:** Phillips screwdriver, hex key wrench set

---

### Step 1

Turn the power OFF at the ON/OFF switch and by unplugging the machine at the electrical outlet.

### Step 2

Remove the four SCREWS securing the CONNECTOR COVER to the bottom of the DISPLAY CONSOLE.

### Step 3

Unplug the 10-PIN CONNECTOR and the 4-PIN CONNECTOR from the back of the DISPLAY CONSOLE.

### Step 4

Remove the four SCREWS securing the DISPLAY CONSOLE to the HANDRAILS.

### Step 5

Rest the new DISPLAY CONSOLE on the HANDRAILS, then install and tighten the four STARWASHERS, WASHERS and SCREWS in a criss-cross pattern to secure it in place. **Do not overtighten the screws.**

**NOTE: BE CAREFUL NOT TO PINCH ANY WIRES BETWEEN THE DISPLAY CONSOLE AND THE BRACKETS.**

### Step 6

Reverse Steps 1 through 3 to complete installation.

