

Life Fitness 9100 Series Heartrate and Telemetry Equipped Treadmills **How To...REMOVE AND REPLACE THE LIFT ACTUATOR**

Tools Required: Hex key wrench set, two 9/16" wrenches, wire cutting tool

Step 1

Turn the power OFF at the switch and by unplugging the unit at the electrical outlet.

Step 2

Temporarily remove the PC CONTROL BOARD ASSEMBLY (See "How To..." and follow Steps 2 through 6 only).

Step 3

Cut the WIRE TIES and unplug the 4-PIN CONNECTOR of the LIFT ACTUATOR WIRE HARNESS from the PC CONTROL BOARD.

Step 4

Carefully tilt the Treadmill on its right side.

Step 5

Remove the BOLT and NUT securing the bottom of the LIFT ACTUATOR to the FRAME WHEEL ASSEMBLY.

Step 6

Remove the HAIRPIN CLIP and CLEVIS PIN securing the top of the LIFT ACTUATOR to the FRAME and angle the worn unit toward the front to remove it from the machine.

Step 7

Install the new LIFT ACTUATOR by reversing Steps 1 through 6.

NOTE: BE SURE TO REPLACE ALL WIRE TIES TO SECURE THE WIRE HARNESS IN ITS ORIGINAL POSITION.