

Life Fitness Models 9100, 9500HR, 9700HR, and 9700HR w/Decline Treadmills
TROUBLESHOOTING GUIDE

Malfunction	Probable Cause	Corrective Action
No Power.	3 Amp Circuit breaker.	Verify that circuit breaker is not open. If open, reset circuit breaker.
	Faulty display console.	Refer to Display Console Symptom.
Wax Leak.	Loose hose connections.	Inspect hose connections and secure as necessary, replace if necessary.
	Faulty connection at bag.	Replace wax bag and plastic coupling.
	Wax bag is torn.	Replace wax bag. See How To...Replace Wax Bag.
	Wax pump does not shut off.	Replace wax/lift PCB. See How To...Replace Wax/Lift PCB.
	Wax passes through pump and slowly drips from nozzle.	Replace wax motor. See How To...Replace Wax Motor.
	The Striding Belt is traveling beyond the tracking limits.	Striding belt needs to be re-tensioned or tracking needs adjustment.
The Striding Belt is traveling beyond the tracking limits.	Worn striding belt or user pushing belt.	Center striding belt according to belt centering technique. See How To...Adjust And Tension The Striding Belt.
	Striding belt folded over.	Verify wax in bag. Replace if necessary. See How To...Replace Wax Bag.
		Verify the wax is not contaminated (lumpy). Replace wax bag and wax if contaminated. See How To...Replace Wax Bag.
	Verify the wax nozzle is not clogged. Clean nozzle if clogged. See How To...Replace Wax Nozzle.	