ΜΛΤΡΙΧ

AverMedia Tuner Programming Instructions

<u>Keypad</u>

"-" = pulls up the menu and use as "back" button **Channel Up/Down** = use to scroll up and down vertically through the menu **Enter Volume Up/Down** = use to scroll across horizontally through the menu = saves or starts program

1. Press ENTER 1001 ENTER on the number keypad and Manager Mode will appear in the display



2. Press 'TV' on the display

home					
About	Manager	Mode			
Time	Default Channel		Using the multimedia key pad, enter the default		
Speed	Default Volume	5	channel number:		
Defaults	Tuner Available	Yes			
ТУ	Setup				
Language	Remote TV	Yes			
Other	Next		Clear		
	• • •	-	<u>.</u>		
English Deutsch	Suomi Italiano Español	Nederlands Portuge	rés 中文 한국의		

ΜΛΤΡΙΧ

3. Press 'Setup' on the display and a TV will appear in the top right corner



4. Press the '-' key on the number keypad and a menu will appear on the TV





5. Press ENTER on the number keypad when the Installation screen is shown



6. Using the **Channel Up or Down** button scroll until you come to 'TV Source' and press **ENTER** on the keypad. Use the **Volume Up or Down** buttons to change this to 'Cable-STD'



7. Using the **Channel Up or Down** buttons scroll until you come to 'Auto Scan' and press **ENTER** on the number keypad to begin the scan

A.T. ()	Installation		T	Auto Scan(Cable-STD)			
lanager 😽	IV System TV Source	ATSC/NTSC Cable-STD	ger				
nel	Auto Scan Manual Scan	Start Disable		Analog TV Found	13	130.25 MHz	
me	OSD Language	< English ►		Digital TV Found	0		
ble	▲▼ Select	Menu Ext					
				1	_	Menu Exit	

8. Press the **HOME** icon on the display to return to normal operation