

# T3x Consoles

## Manager Mode (software)



1. To enter Manager Mode, press and hold the INCLINE DOWN and SPEED DOWN buttons for three seconds until “Manager” appears
2. To enter the Manager Mode, press ENTER
3. To scroll through the Manager Mode, press the INCLINE or SPEED keys
4. Press ENTER when the variable you wish to change appears on the screen
5. Press INCLINE or SPEED key to change the value of the setting and press ENTER to save
6. Press the EMERGENCY STOP to exit Manager Mode

# T3x Consoles



## Engineering Mode (auto calibrate, machine type)

1. To enter Engineering Mode, press and hold the INCLINE DOWN and SPEED DOWN buttons for three seconds until “Manager” appears
2. Press the INCLINE or SPEED buttons until Engineering Mode appears and press ENTER
3. To scroll through the Engineering Mode, press the INCLINE or SPEED keys
4. Press ENTER when the variable you wish to change appears on the screen
5. Press INCLINE or SPEED key to change the value of the setting and press ENTER to save
6. Press the EMERGENCY STOP to exit Engineering Mode

# T3x Consoles



## Service Mode

1. To enter Service Mode, press and hold the INCLINE DOWN and SPEED DOWN buttons for three seconds until “Manager” appears
2. Press the INCLINE or SPEED buttons until Service Mode appears and press ENTER
3. To scroll through the Service Mode, press the INCLINE or SPEED keys
4. Press ENTER when the variable you wish to change appears on the screen
5. Press INCLINE or SPEED key to change the value of the setting and press ENTER to save
6. Press the EMERGENCY STOP to exit Service Mode