
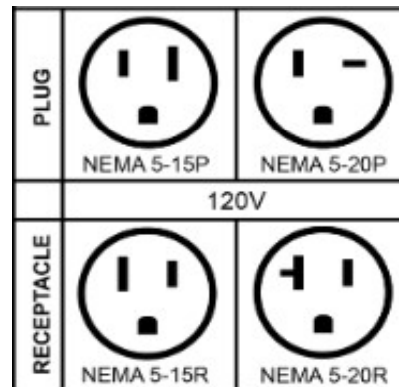
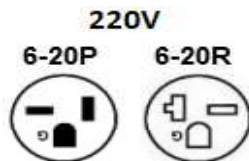


Part Number	Coupler	Coupler Ang	Plug	Plug Ang	AWG	Voltage Rating	Length (mm)	Drawing	Status	Usable with 110V commercial T	Usable with 220V commercial TM?
0000086204	C13	0	5-15P	90	14	125	4500	CORD-P54	Active. <b>Do not use with treadmills!</b>	No	No
0000086205	C19	0	5-15P	90	14	125	4500	CORD-P54	Active.	No	No
0000094429	C19	90	5-20P	0	12	125	4500	CORD-P44	Active.	Yes	No
0000094440	C19	0	5-15P	90	14	125	4500	CORD-P54	Discontinued without replacement.	No	No
0000094856	C19	90	6-20P	90	12	220	3000	CORD-P74	Active.	No	Yes
0000094857	C19	0	5-20P	90	12	125	3000	CORD-P64	Replaced with 1000356655.	Yes	No
1000229192	C19	90	5-20P	90	12	110	3000	CORD-P84	Active.	Yes	No
1000229194	C19	0	5-20P	90	12	125	3000	CORD-P94	Replaced with 1000356655.	Yes	No
1000229198	C19	0	5-20P	90	12	125	3000	CORD-P84	Replaced with 1000356655.	Yes	No
1000356655	C19	0	5-20P	90	12	125	3000	CORD-P14	Active. This is the cord that must be used	Yes	No
002153-C	C19	90	5-20P	0	12	125	3000	TM65-P82	Replaced with 1000356655.	Yes	No
002782-C	C13	90	5-15P	0	14	125	3000	CORD-P04	Active. <b>Do not use with treadmills!</b>	No	No
002787-C	C13	90	5-20P	0	14	125	3000	CORD-P14	Active. <b>Do not use with treadmills!</b>	No	No
061769-B	C13	90	5-20P	90*	14	110*	4500*	CORD-P44	Replaced with 002787-C (*note difference)	No	No
061770-A	C13	90	6-20P	0	14	220	4500	CORD-P44	Active.	No	Yes
066055-A	C19	90	5-20P	0	12	125	4500	CORD-P44	Replaced with 0000094429.	Yes	No
0000094425	C13	0	5-15P	0	18	125	3000	CORD-E34	Active. <b>Do not use with treadmills!</b>	No	No
0000094428	C19	90	5-20P	0	12	125	3000	TM65-P82	Active.	Yes	No
002137-E	C13	90	5-15P	0	16	125	3000	CORD-E14	Active. <b>Not included w/ product - new</b>	No	No
ZMS4008495	C19	90	6-20P	0	12	220	3000	n/a	Active	No	Yes

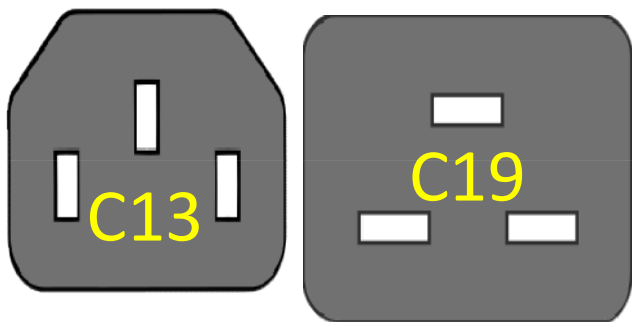

**How to Daisy Chain Equipment**  
Definition: The power cords for a group of units are connected in a loop and use the same circuit.

Guidelines:  
- Climbmills and ascent trainers: Daisy chain up to three units per circuit.  
- Suspension ellipticals, steppers, and hybrid/upright/recumbent bikes: Daisy chain up to four units per circuit.  
- Treadmills CANNOT be daisy chained.

The daisy chain adapter is part number 0000080717 (it is compatible with all units). Order one daisy chain adapter for each of the units you are connecting, minus one (ex. if you are connecting three climbmills, order two daisy chain adapters).

**2016+ Models and Power Cords**  
Reference the chart below to confirm whether a console ships with a power cord.

\*ALL treadmill and ClimbMill consoles include a power cord. (These models are excluded from the chart.)

Console Model	Power Cord Included	Power Cord Optional
ERU 1x (EP592)		X
URE 1xe (EP599)	X	
HURESAs 3x (EP619, EP622, CS26)		X
HURESAs 3xe (EP625)	X	
HURESAs 5x (EP623, EP624, CS28)		X
Android 7xi/7xe (EP620, EP621)	X	