

FREECLIMBER 4600/4400 PT/CL CONSOLE

Quick Scan Programming

You can quickly access any of the custom menus by pressing [LEVEL: ^], [4], [ENTER]. The console will then display "MACHINE STATUS." Scroll through the following options:

[SELECT]	" RUN HOURS	XXXX"	0
[SELECT]	" WORKOUTS	XXXX"	1
[SELECT]	" DISTANCE	XXXX"	2
[SELECT]	" CONS	90211- XXX "	3
[SELECT]	" STEPPER"		4
[SELECT]	-N/A-		
[SELECT]	" MAINT HOURS	xxxx"	6

Resetting the Maintenance Hour Counter

For ease of maintenance records, the 4400/4600 PT/CL console has a maintenance timer that will clock the number of hours, workouts, and time between last servicing. After each maintenance period reset the counter.

[^][7][1] Reset Service

1. Reset the maintenance hour counter by pressing [LEVEL: ^], [7], [1]. The console will display "RESET SERVICE." Press [ENTER]. The console will display "DONE." Press [CLEAR] to return to the starting screen.

Configuration Code

The FreeClimber® console supports other StairMaster® exercise systems. It is important to verify that the machine configuration code matches the type of machine you have.

[^][8][0] Change Machine

1. Change the machine type by pressing [LEVEL: ^], [8], [0]. The console will display "CHANGE MACHINE." Press [ENTER]. The console will then display the current machine type. Use the [SELECT] key to toggle between options. Press [ENTER] for the desired option.