

Procedure 7.22 - Replacing a Handlebar

Removing a Handlebar

1. Loosen the four screws that hold the handlebars in the upper and lower handlebar clamps.
2. Grasp and pull the ends of the handlebar away from the handlebar clamps.

Replacing a Handlebar

3. Position the handlebar in the handlebar clamp. The edge of the foam grip must be flush with the edge of the clamp.
4. Tighten the screws that secure the handlebar in the handlebar clamps.