

Procedure 7.8 - Replacing the Inductor

Removing the Inductor

1. With the lift set at level 1, turn off the EFX 544 with the circuit breaker, then unplug the power cord from the wall outlet.

WARNING

Before continuing with this procedure, review the Warning and Caution statements listed in Section One, Things You Should Know.

2. Remove the front cover as described in Procedure 7.1.
3. Remove the inductor leads from the inductor.
4. Remove the screws that secure the inductor to the lower electronics bracket.

Replacing the Inductor

5. Hold the new inductor below its mounting position. Connect the inductor leads to the inductor.
6. Position the new inductor at its mounting position. Install the screws that secure the inductor to the lower electronics bracket.
7. Re-install the front cover as described in Procedure 7.1, then check the operation of the EFX 544 as described in Section Four.