

Procedure 7.13 - Replacing a Pillow Block Bearing

1. Current production of C546s utilize an assembly that consists of the eddy current disk, input pulley assembly and pillow block bearings. The pillow block bearings are permanently attached to the input pulley shaft and can not be removed. If you encounter a situation where a pillow block bearing is damaged and requires replacement, the entire assembly consisting of eddy current disk, input pulley and pillow block bearings must be replaced. See Procedure 7.17 for replacement instructions.
2. The pillow block bearings contains grease fitting. It is recommended that the bearings be periodically checked and greased if necessary.

Diagram 7.14 - Pillow Block Bearings

