Procedure 7.23 - Replacing a Stairarm Pedal

- 1. Set the on/off switch in the ioffi position, then unplug the power cord from the wall outlet
- 2. Loosen and remove the two bolts that fasten the stairarm pedal onto the stairarm.
- 3. Remove the stairarm pedal from the stairarm.
- 4. Set the replacement stairarm pedal at itis mounting position on the stairarm.
- 5. Install and hand tighten the stairarm pedal mounting hardware removed in step 2. Torque the stairarm pedal mounting bolts to 60 in/lbs.