

Procedure 7.22 - Replacing a Lower Pivot Arm

1. Set the on/off switch in the **off** position, then unplug the power cord from the wall outlet.

WARNING

Before continuing with this procedure, review the Warning and Caution statements listed in Section One, Things You Should Know.

2. Remove the retaining ring that fastens the lower pivot arm to the pivot arm connector. See Diagram 7.16.
3. Remove the bolt that fastens the lower pivot arm to the upper pivot arm.

Diagram 7.17 - Pivot Arms



4. Remove the lower pivot arm.
5. Slide the lower pivot arm onto the pivot arm connector. Replace the retaining ring removed in step 2.
6. Align the lower pivot arm with the upper pivot arm and replace the bolt removed in step 3. Torque the bolt to 200 inch pounds.