

Procedure 7.21 - Replacing a Pivot Arm Connector

1. Set the on/off switch in the "off" position, then unplug the power cord from the wall outlet.

WARNING

Before continuing with this procedure, review the Warning and Caution statements listed in Section One, Things You Should Know.

2. Remove the three bolts that fasten the pivot arm connector to the stairarm. See Diagram 7.9.
3. Remove the retaining ring that fastens the lower pivot arm to the pivot arm connector.

Diagram 7.16 - Pivot Arm Connector



4. Remove the pivot arm connector. Remove the wave washer from the pivot arm connector.
5. Place the wave washer from step 5 on the replacement pivot arm connector. Slide the pivot arm connector into the lower pivot arm and replace the retaining ring.
6. Hand start the three bolts that fasten the pivot arm connector to the stairarm. Torque the three pivot arm connector bolts to 125 inch pounds.