



6. Note the orientation of the power entry module. The new module must be positioned with the same orientation. Remove the screws that secure the power entry module to the power entry module mounting bracket.

### **Replacing the Power Entry Module**

7. Position the new power entry module at its entry position. Make sure that the module is oriented correctly. Install the screws that secure the power entry module to the power entry module mounting bracket.
8. Refer to Wiring Diagram 8.1 for 120V units or Wiring Diagram 8.3 for 240V units and reconnect the wiring removed in step 4.
9. Fasten the power entry module mounting bracket to the EFX frame with the screws removed in step 4.
10. Remove the fuses from the fuse drawer of the defective input power module. Check the fuses as in step 3 and insert the fuses into the replacement fuse drawer. Insert the fuse drawer into the input power module.
11. Check the operation of the EFX as described in Section Four.