

Procedure 7.29 - Replacing a Stairarm Pivot Block (C556 Navy, only)

Warning: Care must be taken when work is being performed in the area of the stairarms. Pinch points exist between the stairarm and ramp and between the stairarm and crankarm, when the rear covers are removed.


Procedure

WARNING

Before continuing with this procedure, review the Warning and Caution statements listed in Section One, Things You Should Know.

1. Remove the left and/or right cover sections as described in Procedure 7.18.
2. Remove the mounting bolt and nut that fastens the stairarm pivot block to the stairarm. (See Diagram 7.25)
3. Slide the stairarm off of the stairarm pivot block.
4. Remove the stairarm pivot block retaining ring from the crankarm pin. Slide the stairarm pivot block off of the crankarm pin. If the stairarm pivot block is being replaced because of excessive wear, check the condition of the crank arm pin, it may be necessary to replace the crankarm.

Diagram 7.28 - Stairarm Mounting

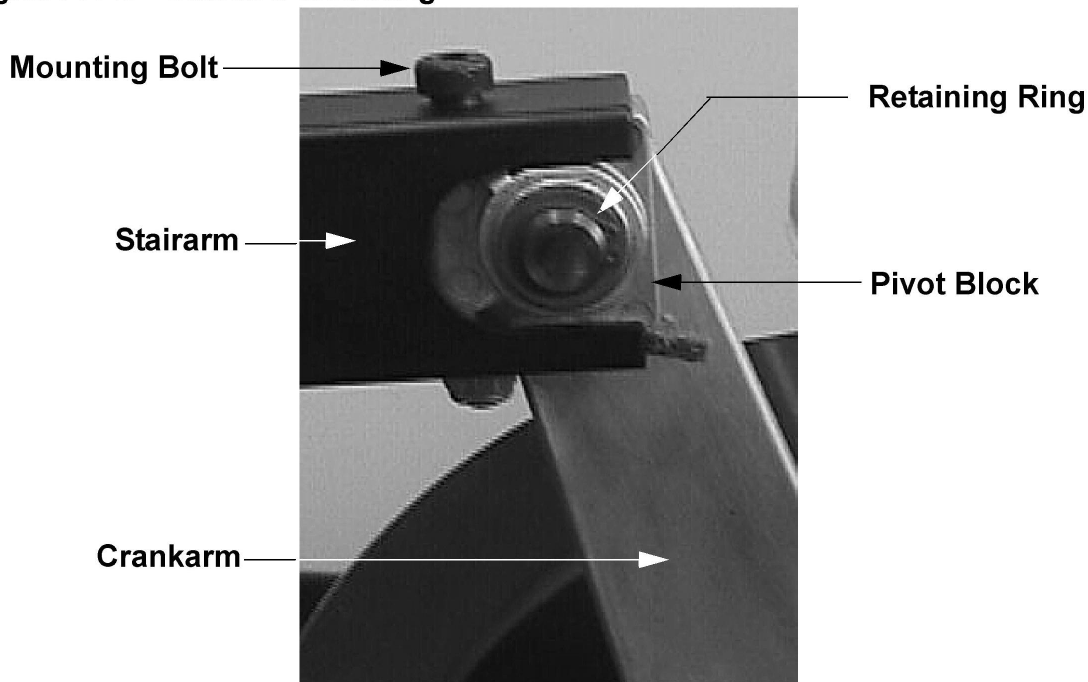

5. Slide the stairarm pivot block onto the crankarm pin and replace the retaining ring removed in step 4.
6. Slide the stairarm onto the stairarm pivot block. Install and hand tighten the stairarm pivot block mounting hardware. Torque the stairarm pivot block mounting bolt to 15 ft./lbs.
7. Replace the left and/or right cover sections per Procedure 7.19.