


## Procedure 7.15 - Replacing a Lower Pivot Arm (C556 Navy, only)

### WARNING

Before continuing with this procedure, review the Warning and Caution statements listed in Section One, Things You Should Know.

1. Remove the retaining ring that fastens the lower pivot arm to the stairarm connector. See Diagram 7.11.
2. Remove the bolt that fastens the lower pivot arm to the handlebar arm.

Diagram 7.11 - Pivot Arms

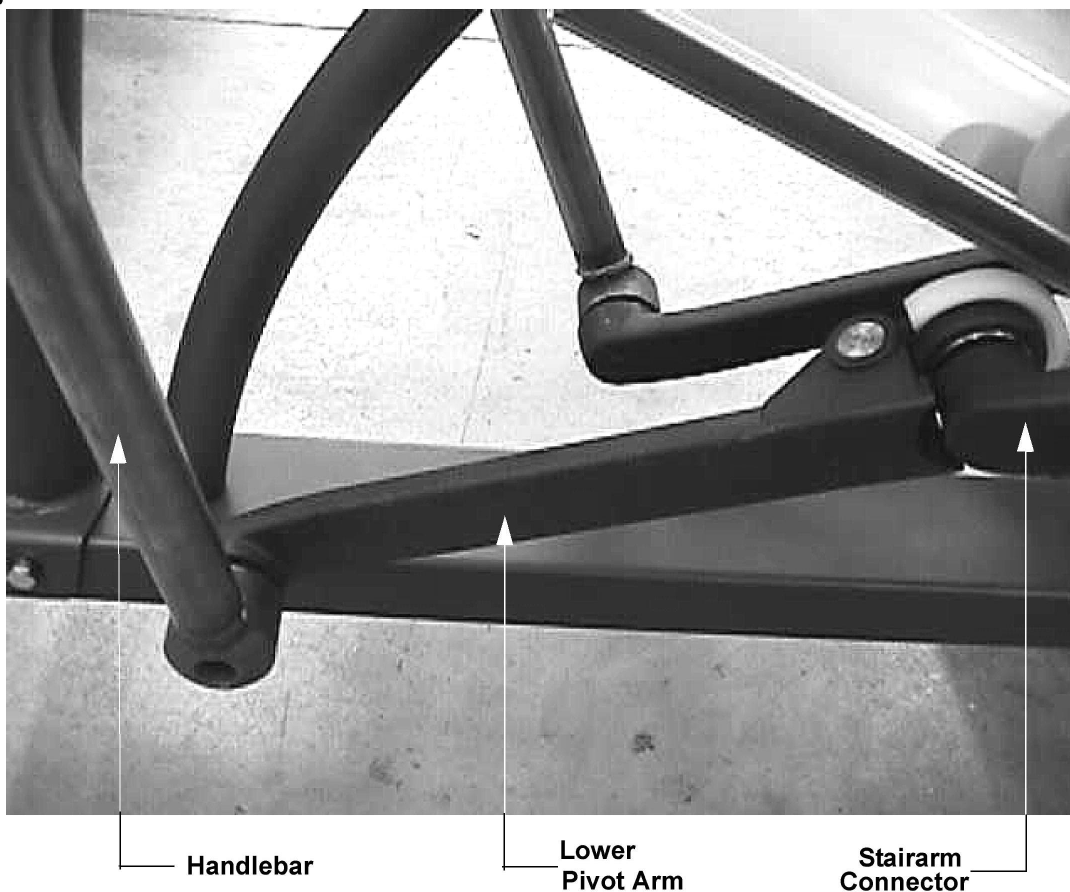

3. Remove the lower pivot arm.
4. Slide the lower pivot arm onto the pivot arm connector. Replace the retaining ring removed in step 1.

5. Align the lower pivot arm with the handlebar and replace the bolt removed in step 2. Torque the bolts to 156 inch pounds.