
## Procedure 6.11 ó Replacing the Drive Motor Cooling Fan

- 1. Set the treadmill circuit breaker in the ioffi position and unplug the treadmillis line cord from the AC outlet.
- 2. Remove the hood.
- 3. Remove the drive motor per Procedure 6.7, steps 2-8.
- 4. Remove the four screws that mount the drive motor cooling fan to the drive motor. See Diagram 6.15

Diagram 6.15 ó Drive Motor Cooling Fan Mounting

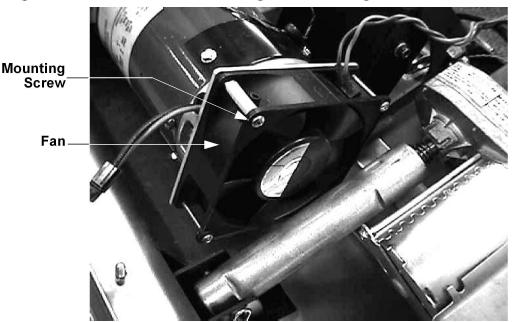

- 5. Set the replacement drive motor cooling fan at its mounting position on the drive motor and fasten it with the hardware removed in step 4.
- 6. Replace the drive motor per Procedure 6.7, steps 11-15.
- 7. Check treadmill operation per Procedure 3.