

## Procedure 6.7 - Replacing the Line Cord

1. Set the treadmill circuit breaker in the “off” position and unplug the treadmill’s line cord from the AC outlet.
2. Remove the treadmill’s hood.
1. Remove the two screws that fastens the AC input panel to the frame,. See Diagram 6.4.
2. Lift the AC input panel from the frame and rotate it to expose the AC line cord clamp screws. See Diagram 6.5.
3. Remove the hardware that retains the AC line cord clamp and remove the clamp.
4. Disconnect the AC line cord from the input module.
5. Feed the end of the replacement AC line cord that mates with the input module through its hole in the frame and firmly insert it into the input module.
6. Set the AC line cord clamp in its mounting position and fasten it with the hardware removed in step 3.
7. Set the input panel in its mounting position and fasten it with the hardware removed in step 3.
8. Check treadmill operation per Section 3.