


Procedure 6.7 — Replacing the Line Cord

1. Set the treadmill circuit breaker in the “off” position and unplug the treadmill’s line cord from the AC outlet.
2. These units are equipped with a detachable line cord. Loosen the line cord clamping screw. See Diagram 6.7.

Diagram 6.7 - Detachable Line Cord

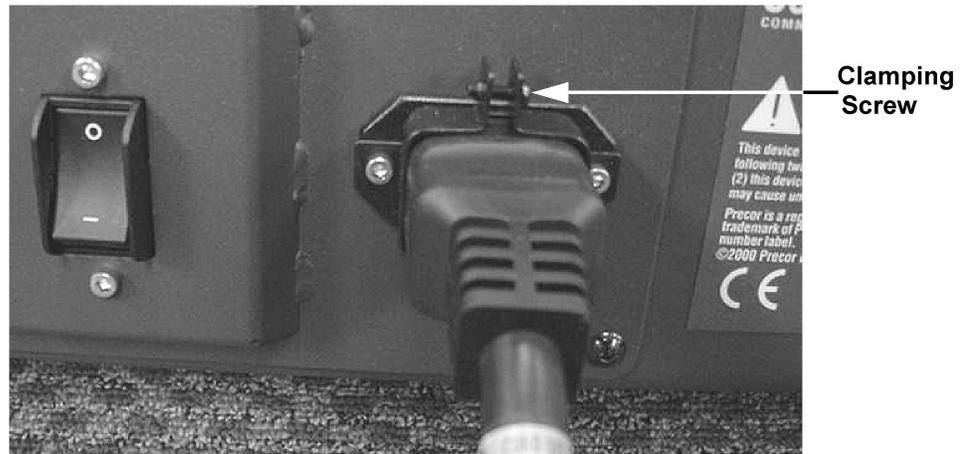

3. Remove the line cord from the line cord socket.
4. Insert the replacement line cord in the line cord socket, be sure that the line cord is fully engaged with the line cord socket. Tighten the line cord socket clamping screw. It is extremely important that the line cord is fully engaged in the line cord socket. A poor connection between the line cord and line cord socket can generate enough heat to damage the line cord and/or line cord socket.
5. Check treadmill operation per Section 3.