

How to Check Battery Levels

- 1) Turn on console, enter service mode, and scroll to the “AP-“ menu
- 2) Tap backlight button, middle display will flash “AP0”, bottom left will read “Consl” and top left will display a number – that number is the percentage of battery life remaining in the console batteries
- 3) Scroll to “AP1”, top left is % battery life for speed sensor
- 4) Scroll to “AP2”, top left is % battery life for power sensor
- 5) Any battery below 20% should be replaced
 - a. **HIGHLY RECOMMENDED:** when you have a battery that needs to be replaced, replace that same battery on all bikes in your room – e.g. if a power sensor battery is low and needs to be changed, change ALL the power sensor batteries in the room
- 6) **NOTE:** the console percentage reading of battery life does not always re-set right away – you might put in a new battery but the console readout will still show the low percentage of the old battery – this is a bug in the system, but if the battery has full power, the system will work even if the battery indicator shows low

How to Change between Km and Miles

- 1) Push any button to turn on console
- 2) Hold down "Stage" and "Avg/End" buttons for 5 seconds to enter service mode
- 3) Tap “Avg/End” button until middle display reads “Un-“
- 4) Tap backlight button, middle display will be flashing “Un0”
- 5) Tap “Avg/End” button, middle display will be flashing “Un1”
- 6) Tap backlight, top right display will read “Un1” and top left will read “MPH”
 - a. Tap “Avg/End” button until middle display flashes “---“
- 7) Tap backlight to exit service mode
- 8) **NOTE:** to set to metric, Tap backlight with “Un0” flashing in the middle display