

Replacing Parts

IC Pro and IC Elite Brake Rod and Knob Replacement

Tools Required:

- #2 Phillips or Flat Head Screwdriver
- 10mm Box Wrench or Small Adjustable Wrench
- 7mm Box Wrench or Small Adjustable Wrench

Procedure:

A. Replace the Tension Control Knob

1. Turn the tension control knob to least resistance.
2. Use a flat or phillips head screwdriver to remove the shrouds. (See Figure 7.)
3. Remove the brake rods from the rod carrier by holding the rod tightly and lifting up and out of the carrier. (See Figure 8.)
4. Use a wrench to remove the 10mm nut on the end of the tension control knob.
5. Remove the square nut and rod carrier from the tension control knob.
6. Remove the tension control knob and replace with the new longer control knob. (See Figure 9.)
7. Replace the rod carrier, square nut and 10mm nut. Secure tightly. (See Figure 10.)

B. Replace the Brake Rods

1. Invert the brake rod and use a wrench to remove the 7mm nut on the end of the rod.
2. Remove the rods, springs, and rubber grommets and replace with new shorter rods, springs and rubber grommets.

Figure 7



Figure 8

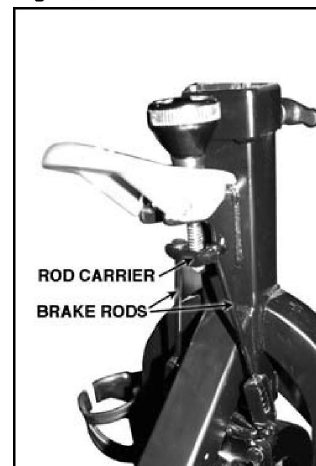


Figure 9

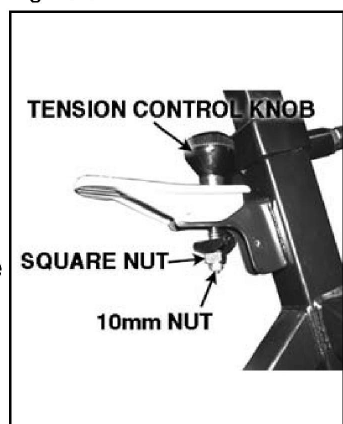


Figure 10

