PARTS REMOVAL AND REPLACEMENT

- 8. Remove the main cable from the frame.
- 9. To reinstall, place the main cable into the wire saddles. Reattach the cable to the vertical support with four tyraps.
- 10. Plug the white plastic connector of the main cable into the relay assembly circuit board at the spot labeled J1.
- 11. Screw the console cable into the receptacle in the back of the console. Reattach the console to the handrail mount. Plug the connectors together at the main cable : console cable junction.
- 12. Reinstall the right side cover. Reconnect the DC power cable.

TRANSMISSION ASSEMBLY

- 1. Remove the left side cover.
- 2. Remove the step positioned in the middle of the staircase.
- 3. Remove the drive chain.
- 4. Remove the Poly-V belt. Inspect the belt for wear. Replace the belt if it is cracked, worn, torn, or cut.
- 5. Remove the transmission bracket by loosening and removing the mounting hardware on the alternator and the transmission (refer to Figure 18).
- 6. Remove the transmission brace by loosening and removing the mounting hardware from the transmission and the frame.
- 7. Support the transmission while loosening and removing the four transmission mounting bolts. Remove the transmission and rubber pad from the frame.
- 8. Reinstall the transmission by reversing the removal procedures.
- Ensure the Poly-V belt is tensioned according to the procedures outlined in the "Poly-V Belt" section of this Manual.