




StairMaster 4000PT Drive Hub Assembly & Components

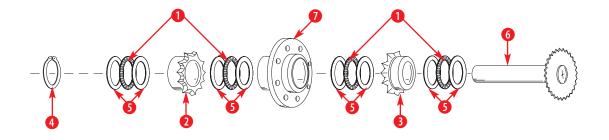

Drive Hub Assembly Components

		· · ·
0	SMo30	Thrust Bearing, each (four required)
2	SM031	Drive Sprocket, left
3	SM032	Drive Sprocket, right
4	SM033	Snap Ring, drive shaft
5	SMo34	Thrust Washer, each (eight required)
6	SM035	Drive Shaft
0	SM039	Hub