

PARTS REMOVAL AND REPLACEMENT

PEDAL ARM

1. Remove the pedal and the bottom cover.
2. Remove the step chain retainers.
3. Support the pedal arm. Unhook the pedal arm return spring from the spring hanger. Lift the step chain up and off the clutch sprocket and lower the pedal arm to the floor.
4. Remove the master link from the step chain connection point.
5. Remove the snap ring from the pedal arm mounting shaft and the leveling arm pin.



WARNING

TO REDUCE THE RISK OF EYE INJURY, WEAR EYE PROTECTION WHEN REMOVING SNAP RINGS.

6. Slide or gently tap the pedal arm off the mounting shaft.
7. Clean the pedal arm shaft and leveling arm pin with a cloth dampened with 30W motor oil before reassembly.
8. Reverse the removal procedures to reinstall the pedal arm.

PEDAL PAD

1. The pedal pad wraps around the pedal and locks into place under the pedal. Separate the pedal pad from the pedal by grabbing the bottom of the pedal and pulling down and out.
2. Lift the other side of the pedal pad up and remove the pedal pad from the pedal.

Note: There is a right and left pedal pad. Do not install a left pedal pad on a right pedal, or a right pedal pad on a left pedal.