

PARTS REMOVAL AND REPLACEMENT

PEDAL

1. Remove the snap ring and flat washer from the leveling arm pin and the pedal shaft (see Figure 17).



WARNING

TO REDUCE THE RISK OF EYE INJURY, WEAR EYE PROTECTION WHEN REMOVING SNAP RINGS.

2. Slide the pedal off the shaft.
3. Clean the pedal shaft and leveling arm pin with a dry cloth. Lubricate the pedal shaft and the leveling arm pin with a thin coat of multi-purpose grease.
4. Reverse the procedures to reinstall the pedal.

LEVELING ARM

1. Remove the pedal.
2. Remove the bottom cover.
3. Remove the snap ring that secures the leveling arm to the leveling arm shaft (see Figure 19).



WARNING

TO REDUCE THE RISK OF EYE INJURY, WEAR EYE PROTECTION WHEN REMOVING SNAP RINGS.

4. Slide or gently tap the leveling arm off the shaft.
5. Clean the shaft and the pin with a cloth dampened with 30W motor oil before reassembly.
6. Reverse the removal instructions to reinstall the leveling arm.