


PARTS REMOVAL AND REPLACEMENT

CONSOLE

1. Remove the four mounting knobs from the back of the console.
2. Disconnect the main cable, contact heart rate cables (4600 PT/CL), and Polar® cable (4600/4400 PT/CL) from the back of the console. Lift the console off the machine.
3. Reverse the steps to reinstall the console.

CONSOLE ADJUSTMENT

1. Loosen the console bracket wing nut.
2. Pivot the console up or down to adjust the console to desired viewing angle and then tighten the wing nut.

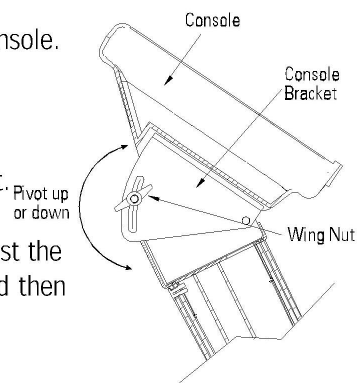

POLY-V AND HTD BELT



WARNING

THE BELTS MUST BE PROPERLY TENSIONED. A BELT THAT IS TOO TIGHT WILL CAUSE SLOW AND SLUGGISH OPERATION. A BELT THAT IS TOO LOOSE WILL CAUSE EXCESSIVE NOISE AND BELT WEAR.

1. Remove the bottom cover.
2. Loosen the adjustment bolt that mounts the alternator to the slotted alternator brace and the pivot adjusting bolt and nut. Swing the alternator down.
3. Remove the Poly-V belt.
4. Slide the HTD belt toward you and off the HTD pulley. Remove the belt from the machine.
5. Reinstall the HTD belt.



PARTS REMOVAL AND REPLACEMENT

6. Adjust the HTD belt tension so that you have 1/4 inch (0.6 cm) of side-to-side play with fingertip pressure (see Figure 30). The bottom shaft is mounted in an eccentric hub. To adjust the tension:
 - Loosen and remove the four bolts and nyloc nuts from the hub.
 - Turn the hub one hole clockwise.
 - Install and tighten the four bolts and nyloc nuts.
 - Verify the HTD belt tension.
7. Install the Poly-V belt. Make sure it is centered on the pulleys.
8. Pivot the alternator up or down as necessary to allow 1/4" (0.6 cm) of belt deflection with fingertip pressure at the center of the vertical portion of either side of the belt (see Figure 30).
9. Tighten the alternator adjustment bolt. Verify 1/4" (0.6 cm) of play in the belt and reinstall the bottom cover.

STEP CHAIN RETAINER

1. Remove the bottom cover.
2. Loosen and remove the two step chain retainer bolts. These bolts are also the top two mounting bolts for the drive hub assembly.
3. Reverse the removal procedures to install the step chain retainer. Make sure there is adequate clearance between the step chain and the step chain retainer.

PEDAL ARM RETURN SPRING

1. Remove the bottom cover.
2. Unhook the pedal arm return spring from the spring hanger.
3. Detach the spring from the step chain by removing the master link. The spring-chain connector is in good condition if it has an hour glass shape. Replace a worn spring-chain connector.