

PARTS REMOVAL AND REPLACEMENT

UPPER HANDLES (4600 PT/CL)

1. Disconnect the left and right contact heart rate cables from the back of the console.
2. Remove the two mounting screws from the top and bottom shield and remove the shields from the upper handle assembly.
3. Remove the four handrail adapter screws from the upper handle assembly.
4. Remove the upper handle assembly from the machine. The contact heart rate cables are threaded through the handrail adapter. Remove the handrail adapter from the contact heart rate cables.
5. Reverse the removal procedures to install the new upper handle assembly.

SIDE HANDRAILS (4600 PT/CL)

1. Disconnect the left and right contact heart rate cables from the back of the console.
2. Remove the two mounting screws from the top and bottom shield (see Figure 20) and remove the shields from the upper handle assembly.
3. Remove the four handrail adapter screws from the upper handle assembly.
4. Remove the upper handle assembly from the machine. The contact heart rate cables are threaded through the handrail adapter. Remove the handrail adapter from the contact heart rate cables. Set the upper handle assembly aside.

