


mounts on each siderail. The front two mounts are attached with hex nuts underneath.

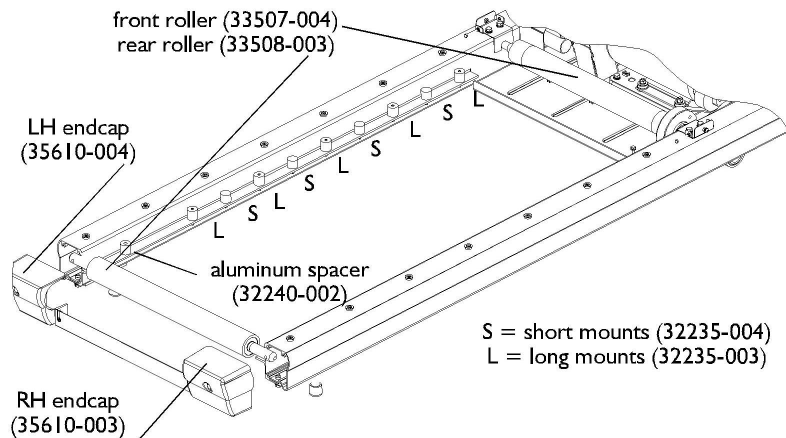

3. Unscrew the mounts from each siderail and replace.
4. Replace the deck as previously described. (Triple Flex Maintenance Kit p/n 33511-002)

Field Functional Test

To verify that the treadmill is operating properly, perform Field Test No. 3. See Appendix D, *Field Functional Tests*, for specific instructions.

Replacing the Deck

- The deck is reversible. You can turn it over if one side wears out. The walk belt must be replaced when the deck is turned over.

Follow Steps 1-7 in the previous section, *Replacing the Walk Belt*, to remove and replace the deck.

Field Functional Test

To verify that the treadmill is operating properly, perform Field Test No. 3. See Appendix D, *Field Functional Tests*, for specific instructions.

Adjusting the Walk Belt

Walk Belt Tension

Adjust the tension:

- whenever the belt slips or moves unsteadily during operation
- after installing a new walk belt.