

Diagnostics – Measurements

Measurements can be done to verify the voltage of the battery.

To verify the battery voltage:

1. Enter the Maintenance Mode (see Settings – Maintenance Mode).
2. Press  until Measurements is display in the information window.
3. Press  to enter Measurements.
4. The display will read “BATT VLT = “and the voltage of the battery.
5. To exit the measurements, press  .