

Diagnostics – Keypad Test

The Keypad Test can be used to verify that all keys are functioning on the display assembly.

To engage the Keypad Test

1. Enter the Maintenance Mode (see Settings – Maintenance Mode).
2. Press  until Keypad Test is display in the information window.
3. Press  to enter the Keypad Test.
4. Press each key on the display. Each time you press a key the information window will display which key have pressed.
5. To exit the keypad test, press .

If any of the keys do not respond, they may not be functioning and the display keypad may need to be replaced.

