LCB LED's

	DS1	DS2	DS3	DS4	DA5*	DS6*	DS7*	DS8
	COMM	BATT CHARGE 1	BATT CHARGE 2	BATT CHARGE 3	UB POSITION 1	UB POSITION 2	UB POSITION 3	TACH
COMM STATUS	BLINKS	N/A	N/A	N/A	N/A	N/A	N/A	N/A
BATTERY ASSESS MODE								
(i.e. Battery Less Than 4.5V; No current	N/A	ON	OFF	OFF	N/A	N/A	N/A	N/A
applied to battery)								
BATTERY PRECONDITION MODE								
(i.e. Battery less than 5.1V; regulate	N/A	OFF	ON	OFF	N/A	N/A	N/A	N/A
charge current at 250mA)								
BATTERY BULK MODE		055	0.55	011				
(i.e. Battery between 5.1V - 6.5V;	N/A	OFF	OFF	ON	N/A	N/A	N/A	N/A
Regulate charge current at 650mA)								
BATTERY FLOAT MODE								l
(i.e. Battery greater than 6.5V; Regulate	N/A	ON	ON	OFF	N/A	N/A	N/A	N/A
charge current at 650mA)								
UPPER BODY POSITION 0	N/A	N/A	N/A	N/A	OFF	OFF	OFF	N/A
(Below calibrated position 1)								
UPPER BODY POSITION 1	N/A	N/A	N/A	N/A	ON	OFF	OFF	N/A
UPPER BODY POSITION 1-2	N/A	N/A	N/A	N/A	ON	ON	OFF	N/A
UPPER BODY POSITION 2	N/A	N/A	N/A	N/A	OFF	ON	OFF	N/A
UPPER BODY POSITION 2-NONE	N/A	N/A	N/A	N/A	ON	OFF	ON	N/A
UPPER BODY POSITION NONE	N/A	N/A	N/A	N/A	ON	ON	ON	N/A
RPM PULSE	N/A	N/A	N/A	N/A	N/A	N/A	N/A	BLINKS

 $^{^{\}star}$ Upper Body position LEDs are only applicable to Elite CrossTrainer

Notes:			